



# iDCS

Release 2

5 0 0

---

## **Digital Communications System General Description**

Every effort has been made to eliminate errors and ambiguities in the information contained in this booklet. Any questions concerning information presented here should be directed to SAMSUNG TELECOMMUNICATIONS AMERICA. SAMSUNG TELECOMMUNICATIONS AMERICA disclaims all liabilities for damages arising from erroneous interpretation or use of information presented in this manual.

**Preliminary Documentation**



#### Publication Information

SAMSUNG TELECOMMUNICATIONS AMERICA reserves the right without prior notice to revise information in this publication for any reason.

SAMSUNG TELECOMMUNICATIONS AMERICA also reserves the right without prior notice to make changes in design or components of equipment as engineering and manufacturing may warrant.

Copyright 2004  
Samsung Telecommunications America

All rights reserved. No part of this manual may be reproduced in any form or by any means—graphic, electronic or mechanical, including recording, taping, photocopying or information retrieval systems—without express written permission of the publisher of this material.

# TABLE OF CONTENTS

<b>PART</b>	<b>DESCRIPTION</b>	<b>PAGE</b>
<b><u>1</u></b>	<b><u>SYSTEM OVERVIEW</u></b>	
1.1	<u>GENERAL DESCRIPTION .....</u>	<u>1.2</u>
1.2	<u>SIZE AND CONFIGURATION .....</u>	<u>1.2</u>
1.3	<u>MAXIMUM DEVICE QUANTITIES .....</u>	<u>1.4</u>
1.4	<u>INTERIOR VIEW OF THE CABINET .....</u>	<u>1.4</u>
1.5	<u>BAYFACE LAYOUT - SINGLE CABINET SYSTEM .....</u>	<u>1.5</u>
1.6	<u>BAYFACE LAYOUT - MULTIPLE CABINET SYSTEM .....</u>	<u>1.6</u>
1.7	<u>TECHNOLOGY .....</u>	<u>1.7</u>
1.8	<u>PROGRAMMING .....</u>	<u>1.7</u>
1.9	<u>SOFTWARE VERSIONS .....</u>	<u>1.7</u>
<b><u>2</u></b>	<b><u>HARDWARE DESCRIPTIONS</u></b>	
2.1	<u>SYSTEM CABINETS .....</u>	<u>2.1</u>
2.2	<u>COMMON CONTROL CARDS .....</u>	<u>2.1</u>
2.2.1	<u>PROCESSOR CARDS .....</u>	<u>2.1</u>
2.2.2	<u>PROCESSOR CARD DAUGHTER BOARDS.....</u>	<u>2.4</u>
2.2.3	<u>SMARTMEDIA CARDS .....</u>	<u>2.5</u>
2.2.4	<u>INPUT-OUTPUT MODEM (IOM) BOARD .....</u>	<u>2.5</u>
2.2.5	<u>MODEM DAUGHTER BOARD .....</u>	<u>2.5</u>
2.3	<u>INTERFACE CARDS .....</u>	<u>2.5</u>
2.3.1	<u>TRUNK CARDS .....</u>	<u>2.5</u>
2.3.2	<u>STATION CARDS .....</u>	<u>2.7</u>
2.3.3	<u>OTHER CARDS .....</u>	<u>2.8</u>
2.4	<u>STATION EQUIPMENT .....</u>	<u>2.9</u>
2.4.1	<u>iDCS SERIES EQUIPMENT .....</u>	<u>2.9</u>
2.4.2	<u>DCS SERIES EQUIPMENT .....</u>	<u>2.12</u>
2.4.3	<u>OFFICESERV ITP-50 SERIES EQUIPMENT .....</u>	<u>2.15</u>
<b><u>3</u></b>	<b><u>SPECIFICATIONS</u></b>	
3.1a	<u>ELECTRICAL SPECIFICATIONS (PSU 60) .....</u>	<u>3.1</u>
3.1b	<u>ELECTRICAL SPECIFICATIONS (PSU-60B) .....</u>	<u>3.1</u>
3.2	<u>DIMENSIONS AND WEIGHTS .....</u>	<u>3.2</u>
3.3	<u>ENVIRONMENTAL LIMITS .....</u>	<u>3.2</u>
3.4	<u>CABLE REQUIREMENTS.....</u>	<u>3.2</u>

3.5	SYSTEM TONES .....	3.3
3.6	KEYSET LED INDICATIONS .....	3.4
3.7a	RESERVE POWER DURATION ESTIMATES (UPS) .....	3.5
3.7b	RESERVE POWER DURATION ESTIMATES (BATTERY) .....	3.5

## **4 BUSINESS FEATURE PACKAGE**

4.1	SYSTEM FEATURES DESCRIPTIONS.....	4.3
4.2	STATION FEATURES DESCRIPTIONS .....	4.27
4.3	DISPLAY FEATURES DESCRIPTIONS .....	4.34
4.4	SAMPLE SMDR PRINTOUT WITHOUT CALLER ID .....	4.41
4.5	SAMPLE SMDR PRINTOUT WITH CALLER ID/ANI NUMBER .....	4.42
4.6	SAMPLE UCD REPORT.....	4.43
4.7	UCD CALL STATISTICS.....	4.44
4.8	UCD AGENT STATISTICS .....	4.46
4.9	SAMPLE TRAFFIC REPORT .....	4.47
4.10	TRAFFIC REPORT OVERVIEW .....	4.48


## **5 GENERAL USER INFORMATION**

5.1	RADIO FREQUENCY INTERFERENCE.....	5.1
5.2	FCC REQUIREMENTS .....	5.1
5.3	TELEPHONE COMPANY INTERFACES .....	5.2
5.4	UNDERWRITERS LABORATORIES.....	5.3
5.5	MUSIC ON HOLD WARNING .....	5.3
5.6	EQUAL ACCESS REQUIREMENTS .....	5.4
5.7	DISA WARNING .....	5.4

## **6 HOTEL / MOTEL FEATURE PACKAGE**

6.1	GENERAL OVERVIEW .....	6.1
6.2	HOTEL / MOTEL FEATURES .....	6.2
6.3	SAMPLE REPORTS AND PRINTOUTS .....	6.9–6.31
6.3.1	GUEST ROOM BILL PRINTOUT .....	6.10
6.3.2	ROOM STATUS PRINTOUTS .....	6.12–6.23
6.3.3	TRANSACTION RECORD OUTPUT SAMPLE .....	6.24
6.3.4	INDIVIDUAL GUEST PHONE BILL .....	6.26
6.3.5	ALL GUEST PHONE BILL (SMDR) .....	6.28
6.3.6	INDIVIDUAL WAKEUP ACTIVITY REPORT.....	6.29
6.3.7	SAMSUNG SINGLE LINE TELEPHONE SAMPLE GUEST PHONE TEMPLATE.....	6.31

# iDCS 500 R2 General System Diagram

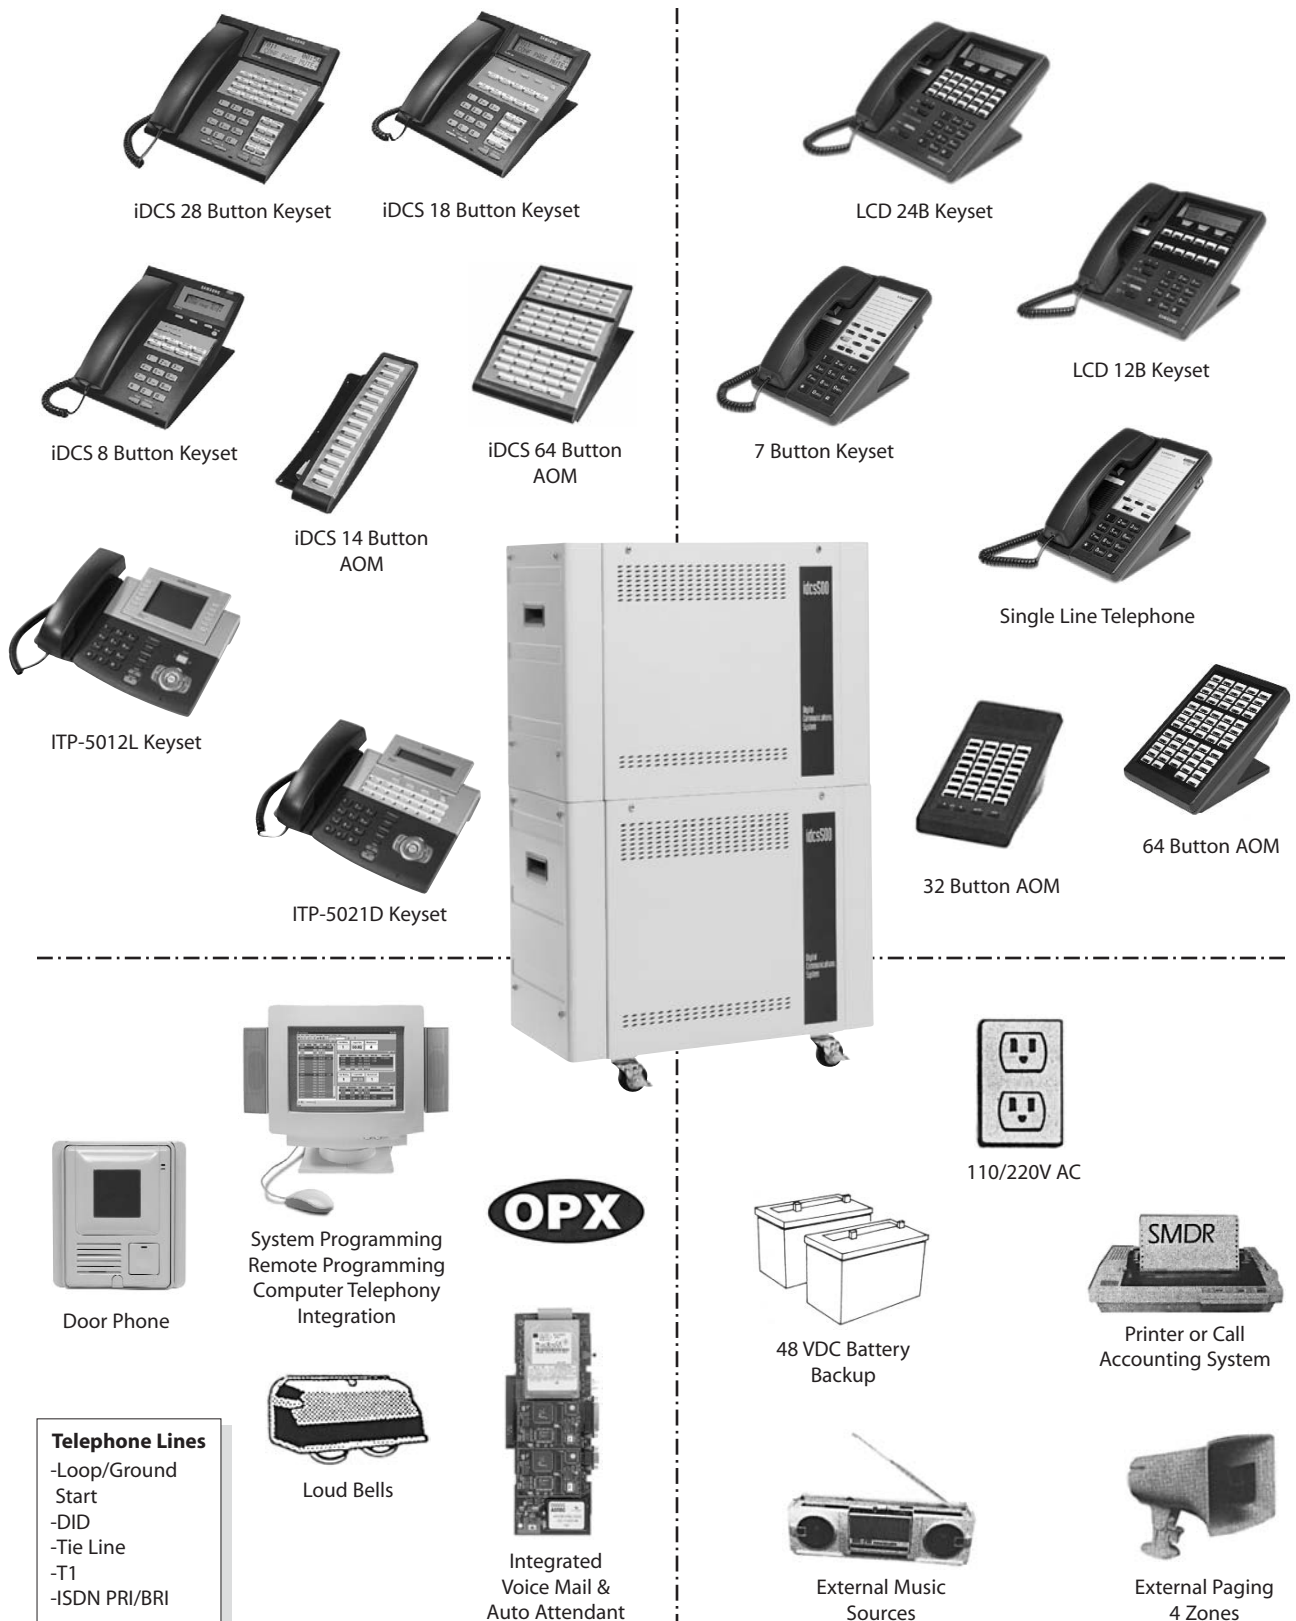

# PART 1. SYSTEM OVERVIEW

## 1.1 GENERAL DESCRIPTION

The SAMSUNG iDCS 500 Release 2 (Digital Communications System) is a digital telephone system designed for small to medium-sized businesses. It can operate with the functionality of a square key system, PABX or a combination of both (hybrid). The DCS employs DSP (Digital Signal Processors) digital technology.

The iDCS 500 Release 2 offers a variety of interface cards that allow connection to the public telephone network or to private networks. These are generally referred to as trunk cards. Two types of telephones can be connected to the system. Proprietary digital phones called “keysets” connect to Digital Line Interface cards (DLI) or connect to an Ethernet LAN and communicate with the system through the Media Gateway Interface cards (MGI). Standard telephones generally called “single line sets” connect to single line interface cards (SLI). In addition, DLI station ports are used to connect peripheral devices such as door phones and add-on modules. Miscellaneous circuits are provided to allow such optional features as external paging, music on hold, background music, and common audible devices. All interface cards are encased in an anti-static plastic enclosure and most can be inserted or removed with power on to eliminate unnecessary service interruptions while performing maintenance.

All keysets utilize a single PCB with surface-mounted components assuring the highest product quality and long life. Samsung’s customary large, easy-to-read displays and LEDs in the button design make them much easier to use. In many instances, sophisticated features are made simple through the use of friendly display prompts or push-on/push-off feature keys.

Expanding the iDCS 500 Release 2 system is both economical and easy. Begin with a single cabinet configured as a basic Key Service Unit and then add up to two more cabinets as your business grows. Its low and medium density card design allows greater flexibility when configuring a system for the right combination of lines and stations. A removable software cartridge (SmartMedia card) makes it convenient to upgrade to future feature packages.

## 1.2 SIZE AND CONFIGURATION

The iDCS 500 Release 2 is a fully modular system comprised of a single cabinet configured as a Key Service Unit, up to two additional cabinets, interface cards and electronic keysets. A fully expanded system using the T1/PRI cards can have a maximum of 352 lines or 360 stations. Without the T1/PRI cards, the maximum number of lines is 208 and the maximum number of stations is 360. The maximum number of ports supported by the system is 488. Each cabinet of the system supports two power supply units, the first of which must be a PSU-B and can support up to 56 stations. When assisted by a second power supply unit (either PSU60 or PSU-B) the cabinet can support up to 120 station devices. Both power supply units are connected to the DC bus for external battery backup. Each cabinet also has four (4) Digital Signal Processor (DSP) channels for use as DTMF receivers or tone detectors.

### SINGLE CABINET SYSTEM

A single cabinet system has eight universal interface card slots, a dual purpose interface card / signal processor card, a main processor card slot, and two power supply slots, the first of which must be occupied by a PSU-B (see Figure 1-1). If “M” version software is used then nine slots can be used for interface cards. If “L” version software is used then eight interface cards can be installed and an SCP2 card must be installed in the dual purpose slot. Station or trunk (Line) cards can be installed in any interface card slot. TEPRI or WLI (future) cards must be installed in slots 1, 2 or 3. This allows a maximum of 120 stations or 120 lines with T1’s being used or 72 lines without T1’s.



FIGURE 1-1

## TWO CABINET SYSTEM

When it is required that the basic system be expanded to provide a capacity greater than that described above, the Release 2 Signal Control Processor (SCP2) card must be installed in slot nine of the first cabinet. This card provides an intermediate level of processing to control the first cabinet therefore freeing resources on the Release 2 Main Control Processor (MCP2) to control the entire system. Adding the SCP2 card therefore reduces the number of universal card slots in the first cabinet to eight. In addition, the MCP2 card must be equipped with an ESM daughter board. All other types of daughter boards must be installed on the SCP2 card or LCP2 card.

Adding one expansion cabinet makes the system a two cabinet system with 17 universal card slots (see Figure 1–2). This allows a maximum of 240 stations or 232 lines when using T1/PRI cards. Without the T1/PRI cards, the maximum number of lines is 136 while the maximum number of stations remains at 240. This second cabinet is controlled by a Release 2 Local Control Processor (LCP2) in a similar manner to the SCP2 in the first cabinet and connects to the MCP2 via a 25 pair cable. The LCP2 processor card resides in the dedicated slot 10 of the second cabinet and therefore does not deplete the number of universal card slots.

Note: The first power supply slot in each cabinet must be occupied by a PSU-B to supply sufficient power to all 10 slots (9 universal and a processor slot) and support up to 56 stations. The second power supply slot can be occupied by either a PSU60 or PSU-B. Do not use a PSU40 in either PSU slot.



FIGURE 1-2

## THREE CABINET SYSTEM

In a fully expanded three cabinet system, there are 26 universal card slots (see Figure 1–3). This allows a maximum of 360 stations or 352 lines when using T1/PRI cards. Without T1/PRI cards, the maximum number of lines is 208 and the maximum number of stations is 360. The third cabinet is also controlled by a Local Control Processor (LCP2) in a similar manner to the LCP2 in the second cabinet and connects to the second cabinet's LCP2 via a 25 pair cable. This processor resides in a dedicated slot 10 and therefore does not deplete the number of universal card slots. In addition, the MCP2 card must be equipped with an ESM daughter board. All other types of daughter board must be installed on the SCP2 card or LCP2 card.

Note: The first power supply slot in each cabinet must be occupied by a PSU-B to supply sufficient power to all 10 slots (9 universal and a processor slot) and support up to 56 stations. The second power supply slot can be occupied by either a PSU60 or PSU-B. Do not use a PSU40 in either PSU slot.

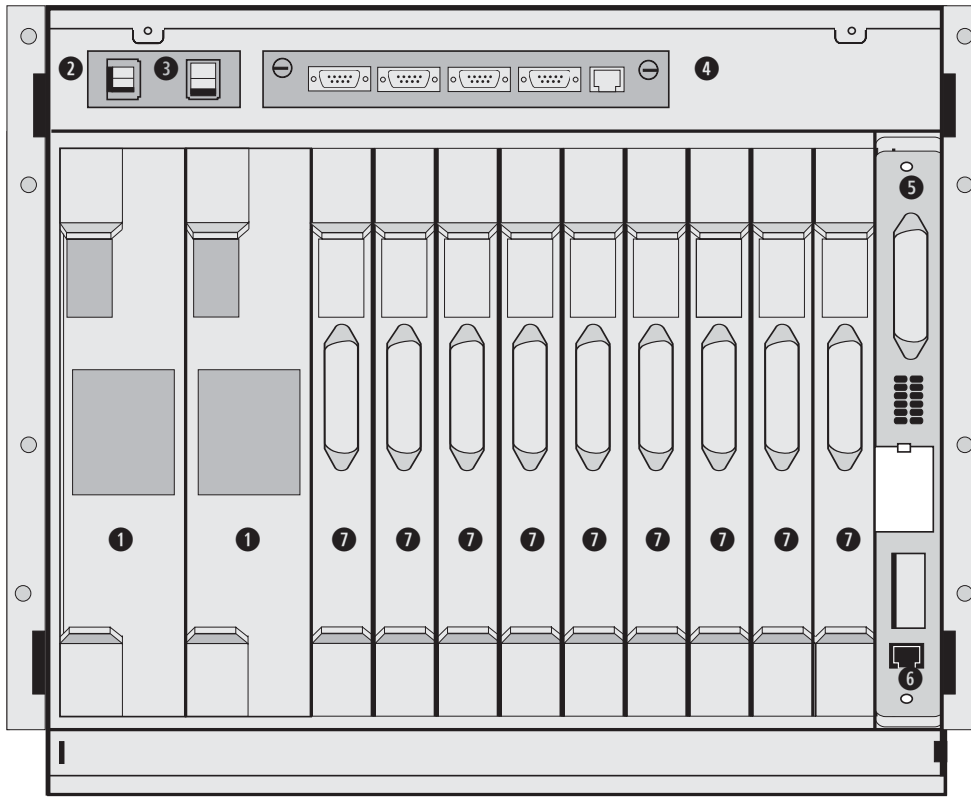


FIGURE 1-3

## 1.3 MAXIMUM DEVICE QUANTITIES


DEVICE TYPE	MAXIMUM	NOTES
Physical Ports	488	In a 3 cabinet system
Stations <ul style="list-style-type: none"> <li>■ Digital</li> <li>■ Analog</li> <li>■ IP</li> </ul>	600† 360* 360* 240	† TDM and IP stations combined. *Maximum number of stations without any trunks. Limited by the number of available universal slots and power supply units.
Trunks <ul style="list-style-type: none"> <li>■ Analog</li> <li>- Loop Start</li> <li>- Ground Start</li> <li>- E&amp;M</li> <li>- DID</li> <li>■ Digital</li> <li>- T1/PRI</li> <li>- BRI</li> </ul>	352* 208 208 104 104 104 352 216/207 104	*Maximum number of trunks without any stations. Limited by the number of available universal slots.  Maximum 3 per cabinet, 9 per system. Use any universal card slot.
Networking Nodes <ul style="list-style-type: none"> <li>■ Using QSIG over PRI</li> <li>■ Using QSIG over IP</li> </ul>	4 50	Uses available T1/PRI card slots. Limited by IP Address Table, MMC 820.
Media Gateway Ports	240	Required to connect an IP phone to a TDM device including paging and background music and ports used for networking or trunking.
Conferencing Circuits <ul style="list-style-type: none"> <li>■ 5 Party Add-On</li> <li>■ Unsupervised</li> <li>■ Barge-In</li> <li>■ Call Record</li> <li>■ AME</li> </ul>	6/24 6/24 6/24 6/24 6/24	System Wide Conference Circuits. 6 Default, 24 Maximum with SCM board.
Music On Hold Inputs	6	2 per MISC card. Maximum 3 MISC cards per system.
Paging <ul style="list-style-type: none"> <li>■ Audio Output</li> <li>■ Internal Zones</li> <li>■ External Zones</li> </ul>	3 5 4	1 per MISC card. Maximum 3 MISC cards per system. (99 members each zone) Requires customer provided equipment.
Auto Attendant Ports	40	Maximum 5, 8 port AA cards per system.
Voice Mail / Auto Attendant Ports <ul style="list-style-type: none"> <li>■ SVMi-8</li> <li>■ SVMi-16</li> </ul>	16 8 16	System can have only one of the SVMi cards installed.
Loud Bell Audio Output	3	1 per MISC card, 3 per system. Requires customer provided equipment.

## 1.4 INTERIOR VIEW OF THE CABINET




- ① Power Supply Slots (2)
- ② A/C Power Switch
- ③ Battery Backup Power Switch
- ④ Serial I/O Ports
- ⑤ Main Control Processor
- ⑥ LAN Connection
- ⑦ Interface Cards

## 1.5 BAYFACE LAYOUT - SINGLE CABINET SYSTEM

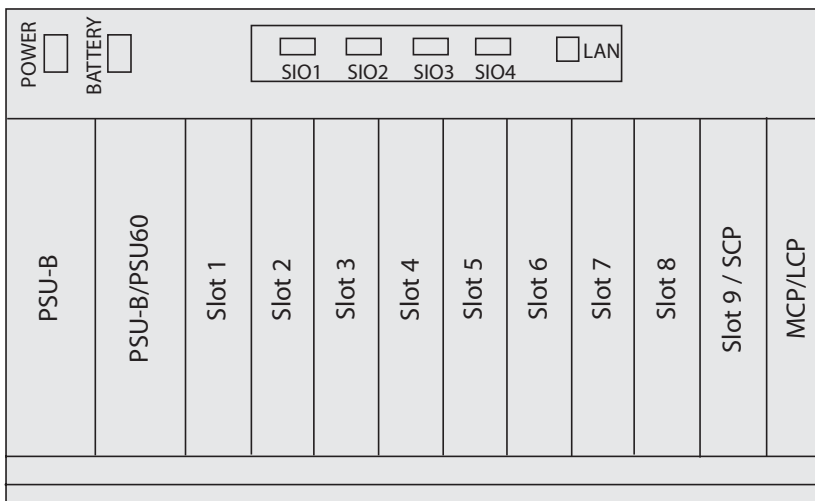

# 1.6 BAYFACE LAYOUT - MULTIPLE CABINET SYSTEM

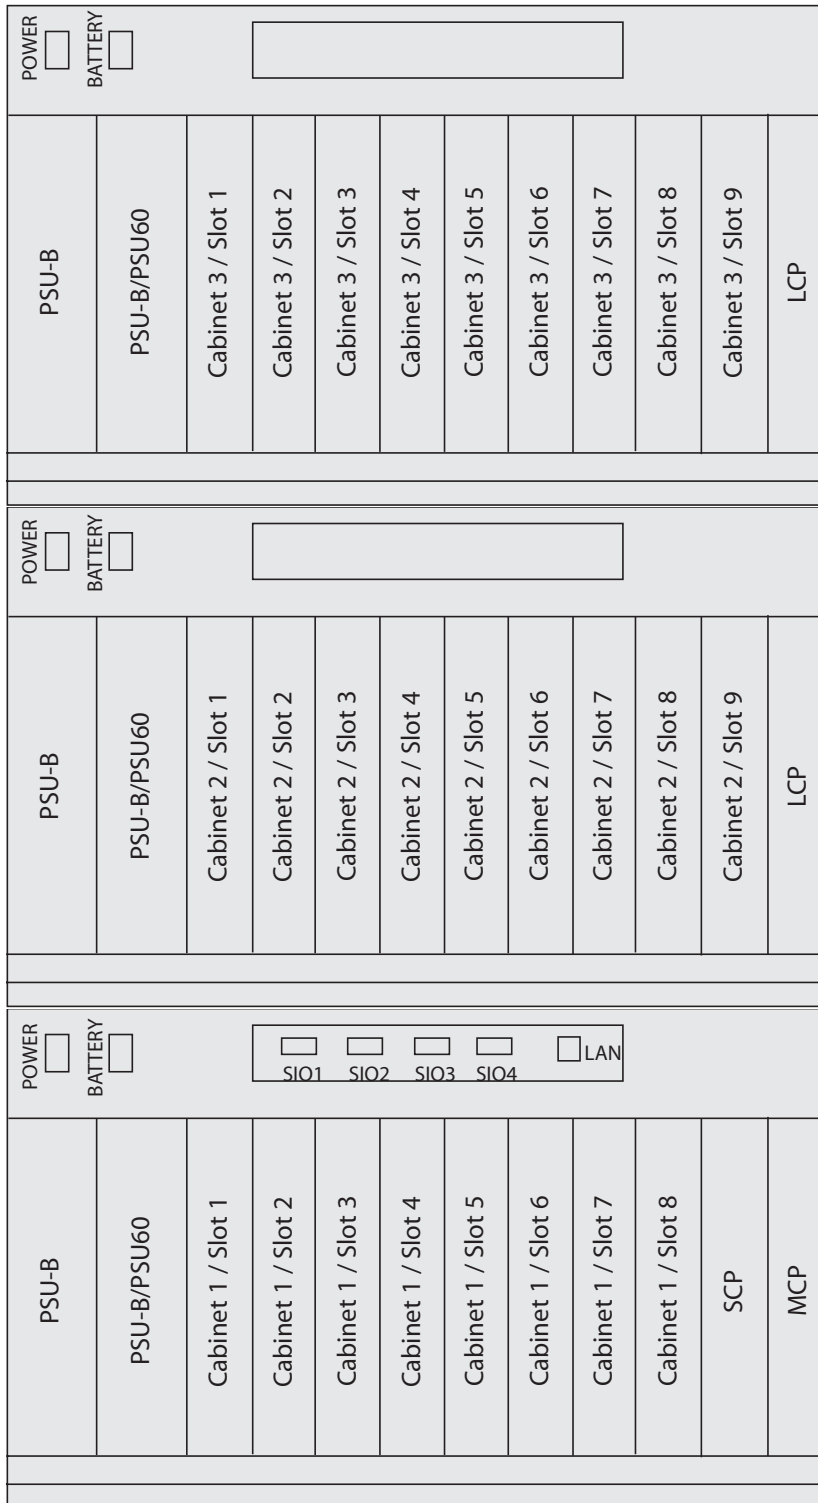

## 1.7 TECHNOLOGY

### MEMORY

The system operates using stored program control. This program is stored on a SmartMedia card inserted into the Main Control Processor card (MCP2) and contains sixteen Megabytes of NAND-Flash memory. The Smart Media card also provides space for a backup customer database and a backup operating program. The system boots from a 1 Megabyte boot ROM and downloads the operating program into thirty two megabytes of DRAM on the Main Control Processor (MCP2) card. The customer database is stored in four megabytes of non-volatile SRAM.

### MICROPROCESSORS

The iDCS 500 Release 2 uses distributed processing. Its primary processor is a 32 bit Motorola MC68360 operating at a clock speed of 50 MHz on the MCP2 card. This provides all the processing necessary for a single cabinet system. In a multi cabinet system the secondary level of processing is on the SCP2 card for the first cabinet and on the LCP2 cards for the expansion cabinets. These secondary processors are MC68302 processors running at 16 MHz and provide local control of each cabinet. The tertiary level of processing is done in the keysets. The digital keysets use a Hitachi H8 processor for data communication within the system.

## 1.8 PROGRAMMING

The iDCS 500 Release 2 is a self-configuring system. This means that immediately after applying power, the iDCS 500 Release 2 reads the types and locations of all installed interface cards and keysets and assigns default data to them. This data provides for system operation within a few minutes after applying power. All trunks and stations are assigned three or four digit numbers according to the settings of the switches on the MCP2 card and the default numbering plan. This numbering plan is flexible and may be changed to suit customer requirements. The installing technician customizes this default data to meet the end user's requirements.

The system can be programmed from any LCD display keyset without interrupting system operation. There are three levels of programming: technician, customer and station. The technician level has access to all programs and can allow the customer access to system programs as needed. Technician and customer access levels are controlled by a different security passcodes and access procedure.

The iDCS 500 Release 2 also allows the use of a proprietary computer program called SAPM-PCMMC. This permits a technician to program the system using a personal computer. SAPM-PCMMC can be used on-site to modify the customer database or to download (save) the entire customer database to a file. This file can then be saved as a backup and be uploaded when required to restore the database. Through the use of modems, SAPM-PCMMC can access the iDCS 500 Release 2 system remotely (off-site) to make database changes or perform uploads or downloads of the customer database as if the technician were on-site.

## 1.9 SOFTWARE VERSIONS

The iDCS 500 R2 system can be equipped with one of two versions of software to meet different customer needs.

### M VERSION-RELEASE 2

This version of software provides the software features for a single cabinet system and requires only the MCP2 card to run.

### L VERSION-RELEASE 2

This version of software is required to run a multiple cabinet system although it can be used in a single cabinet environment. For L version software to operate correctly each cabinet must have its own "Local" processor card installed in it, that is the SCP2 for the first cabinet and the LCP2 for the second and third cabinets. In addition, in a multiple cabinet environment, the MCP2 card MUST have an ESM daughterboard installed in position D1. This must be the only daughterboard installed on the MCP2 in an L version system.

# PART 2. HARDWARE DESCRIPTIONS

## 2.1 SYSTEM CABINETS

The cabinets that make up the iDCS 500 Release 2 system are of metal construction and may be utilized as either as an expansion cabinet or as a main cabinet / key service unit (KSU). The cabinets may be used individually or may be stacked up to three (3) high to achieve maximum capacity. A single cabinet may be wall mounted for smaller applications or alternatively the system may be mounted in a standard nineteen inch (19") equipment rack after removal of the side panels and their supporting brackets. Each cabinet is comprised of the following:

- Eight interface card slots
- One dual purpose interface card / signal processor slot ([see Part 1.2 Size and Configuration](#))
- One processor card slot
- Two power supply slots
- One IOM board slot for use when the cabinet is the main cabinet/KSU ([see Part 2.2.4 IOM Board](#))
- AC power connector
- DC power (Battery Backup) connector
- Four DSPs for the DTMF and tone detection

NOTE: The first power supply slot must be occupied by a PSU-B power supply to supply sufficient power to all 10 slots (8 interface, one dual purpose and one processor slot). The second power supply slot can be occupied by either a PSU 60 or a PSU-B. Do not install a PSU 40 in any PSU slot.

## 2.2 COMMON CONTROL CARDS

### 2.2.1 PROCESSOR CARDS

The iDCS 500 Release 2 requires a processor card or cards in order to operate. In a single cabinet iDCS 500 Release 2 system, running M version software only one processor card, the Main Control Processor (MCP2), is required. When the system is expanded to two or three cabinets or L software is required, a second Switch Control Processor (SCP2) is required for the main cabinet to assist the MCP2, and each expansion cabinet requires its own Local Control Processor (LCP2). These processor cards are described below.

#### MAIN CONTROL PROCESSOR (MCP2)

The Main Control Processor (MCP2) is installed in a dedicated processor slot, slot 10, of the first cabinet and has positions for three daughter boards. The first daughter board position (MCP2\_D1) can support one of four types of daughter board, a Multi-Frequency Module (MFM), a Switch/Conference Module (SCM), an R2/CID Module (RCM), in a single cabinet system running M version software and is required to support the Expanded Switching Module (ESM) in a multiple cabinet system running L software. The second daughter board position (MCP2\_D2) can support the MFM, the SCM, or the RCM board. The third daughter board (MCP2\_D3) can support a Miscellaneous (MISC) daughter board, the MFM, the SCM, or the RCM board.

<b>MAIN CONTROL PROCESSOR (MCP2) DAUGHTER BOARD CAPABILITIES</b>	
<b>Position</b>	<b>Types of Daughter Boards allowed per position</b>
MCP2 - D1	MFM, SCM, RCM and ESM*
MCP2 - D2	MFM, SCM and RCM
MCP2 - D3	MFM, SCM, RCM and MISC

\* The ESM must be installed in this position in a Multiple Cabinet .

Note: Only one of any type of daughter board may be installed on any processor card. In an L version system ONLY the ESM board can be installed on the MCP2 card. Do not install any other types of daughterboard on the MCP2 in an L version system. Other daughterboards may be installed on the SCP2 card.

## **SWITCH CONTROL PROCESSOR (SCP2)**

The Switch Control Processor (SCP2) is installed in slot 9 of the KSU and reduces the available universal card slots to eight. The SCP2 card is required when the system is to be expanded beyond a single cabinet or L version software is required. The SCP2 card has positions for three optional daughter boards. The first daughter board position (SCP2-D1) can support one of three types of daughter board, a Multi-Frequency Module (MFM), a Switch/Conference Module (SCM) or an R2/CID Module (RCM). The second daughter board position (SCP2-D2) can support the MFM, the SCM, the RCM or the MISC. The third daughter board position (SCP2-D3) can support one of the three types of daughter board, a Multi-Frequency Module (MFM), a Switch/Conference Module (SCM) or an R2/CID Module (RCM).

Note: Only one of any type of daughter board may be installed on any processor card.

<b>SWITCH CONTROL PROCESSOR (SCP2) DAUGHTER</b>	
<b>Position</b>	<b>Types of Daughter Boards allowed per position</b>
SCP2 - D1	MFM, SCM, RCM
SCP2 - D2	MFM, SCM, RCM, and MISC
SCP2 - D3	MFM, SCM, RCM

## LOCAL CONTROL PROCESSOR (LCP2)

The Local Control Processor (LCP2) card is installed in a dedicated processor slot, slot 10, of each Expansion KSU and does not reduce the available universal card slots of that cabinet. The LCP2 card has positions for three daughter boards. The first daughter board position (LCP2-D1) can support one of two types of daughter board, a Multi-Frequency Module (MFM), or an R2/CID Module (RCM). The second daughter board position (LCP2-D2) can support the MFM, the RCM or the MISC. The third daughter board position (LCP2-D3) can support one of two types of daughter board, a Multi-Frequency Module (MFM), or an R2/CID Module (RCM).

<b>LOCAL CONTROL PROCESSOR (LCP2) DAUGHTER BOARD CAPABILITIES</b>	
<b>Position</b>	<b>Types of Daughter Boards allowed per position</b>
LCP2 -D1	MFM, RCM
LCP2 -D2	MFM, RCM and MISC
LCP2 -D3	MFM, RCM

Note: Only one of any type of daughter board may be installed on any processor card.

## 2.2.2 PROCESSOR CARD DAUGHTER BOARDS

There are five types of daughter board that fit on the various processor cards. Some daughter boards will only work on the Main Control Processor (MCP2) and the rest will work on any processor card. The various daughter boards and their uses are described below.

### SWITCH AND CONFERENCE MODULE (SCM)

The Switch and Conference Module installs on the MCP2 or the SCP2 processor cards. In a single cabinet system the SCM can be installed in MCP2-D1, however in a multiple cabinet system the SCM must be installed on the SCP2 as the MCP2 must have the ESM daughter board. The system, regardless of size can only support one SCM daughter board. Adding a SCM daughter board to the system increases the number of conference bridges in the system from six to twenty four. In addition, the SCM also adds twelve DSPs for DTMF and tone detection.

- Twelve (12) DSPs for DTMF and tone detection
- Eighteen (18) conference bridges (for a system total of 24)

### MULTI-FREQUENCY MODULE (MFM)

The MFM Module installs in any position of any of the processor cards. The main purpose of the MFM daughter board is to provide DSPs for DTMF and tone detection.

The receivers are also used for DID trunks, E&M trunks, DISA, DNIS and ANI.

- Twelve (12) DSPs for DTMF and tone detection.

### EXPANDED SWITCH MODULE (ESM)

The Expanded Switch Module is used to expand the time switch matrix from 512 channels in a single cabinet to the 1024 channels required for a multiple cabinet systems.

The ESM daughter board installs in position MCP2-D1 and consists of the following:

- 1024 channel time switch matrix

Note: This is the ONLY daughterboard that can be installed on the MCP2 in an L version system.

### R2/CID MODULE (RCM)

The R2/CID Module installs in any position on any of the processor cards. The main purpose of the RCM daughter board is to provide Caller ID decoders for use with that telephone company provided service over analog trunks. A secondary use of the RCM is to provide R2 MFC senders and receivers to the system although these are not used in the US. The system can support up to three of these cards for a total of 42 CID receivers.

The RCM consists of the following:

- Fourteen (14) CID receivers (for use with Caller ID on analog trunks)

### MISCELLANEOUS FUNCTION MODULE (MISC)

The Miscellaneous Function Module (MISC) daughter board installs in position MCP2-D3 on the MCP2 card in a single cabinet system or in position SCP2-D2 on the SCP2 or position LCP2-D2 on the LCP2 card(s) in a multiple cabinet system. The MISC daughter board is used to provide external music on hold/audio inputs (radios, digital announcers, etc.), external paging auto output, loud bell, common bell and programmable dry contact closures. The system can support up to three of these daughter boards, one on the MCP2 or SCP2 and one on each of the LCP2s.

The MISC consists of the following:

- Two (2) external music/audio inputs
- One (1) external paging audio output
- One (1) loud bell audio output
- One (1) common bell relay contact closure
- Two (2) software assignable relay contact closures

## 2.2.3 SMARTMEDIA CARDS

An iDCS 500 Release 2 system must have a SmartMedia card installed in the main control processor (MCP2) as the SmartMedia card contains the system operating software. The SmartMedia card can also be used to store a backup customer database to supplement the database stored on the MCP2 card. In addition the SmartMedia card can store backup copies of the operating software for the SCP2, LCP2, and TEPRI cards.

## 2.2.4 INPUT-OUTPUT MODEM (IOM) BOARD

The Input Output Modem board installs in the first cabinet and provides access to the two serial I/O ports on the Main Control Processor (MCP2) card. Ports 1 and 4 are not used on a Release 2 system. The IOM board also has provision to have an internal 56K/V.90 modem installed on it ([see Part 2.2.5](#)).

## 2.2.5 MODEM DAUGHTER BOARD

The Modem daughter board installs on the Input Output Modem card. The modem provides a 56K/V90 connection to the system for use for remote administration and/or programming. The card has a default extension number of 3999 and eliminates the need for an external modem, serial cable, single line telephone port and serial I/O port on the system.

## 2.3 INTERFACE CARDS

These cards provide the interface connections for telephone lines and stations to the KSU and expansion cabinets. These cards fit into the universal card slots to configure the system as required. iDCS 500 Release 2 interface cards are encased in a static dissipative ABS plastic shell to protect the PCB during handling.

### 2.3.1 TRUNK CARDS

#### TRUNK B1

This card contains four loop start C.O. line interface circuits with C.O. disconnect detection. It also contains the circuitry needed for Caller ID. It can be inserted in any universal card slot in all cabinets.

#### TRUNK C1

This card contains eight loop start C.O. line interface circuits with C.O. disconnect detection. It also contains the circuitry needed for Caller ID. It can be inserted in any universal card slot in all cabinets.

#### GTRK

This card contains four ground start C.O. line interface circuits with disconnect detection. It can be inserted in any universal card slot in any cabinets.

## **DID**

This card contains four Direct Inward Dialing (DID) trunk interface circuits. This card can be inserted in any universal card slot 2 through 9 in any cabinet.

## **E & M**

This card contains four 2 wire E & M tie lines, type one interface configuration (TL11M). It can be inserted in any universal card slot in all cabinets. This card can be used for two way DID calling.

## **TEPRI DIGITAL TRUNK**

When programmed as a T1 this card provides up to 24 trunk circuits in any combination of the following:

- Loop start lines
- DID (Direct Inward Dialing)
- Ground start lines
- E & M tie lines or two way DID calling

When the card is programmed as a PRI it will provide 23 bearer channels and 1 data channel (23B+D). This card can be installed in any of the first three slots of any cabinet.

## **4 BRI (BASIC RATE INTERFACE–4BRI)**

The 4 BRI card supports 4 trunk or station level ISDN Basic Rate Interface (i.e., 2B plus D) circuits. The 4BRI can be inserted in any universal slot.

## **MGI2 (MEDIA GATEWAY INTERFACE)**

The MGI2 card supports 16 VOIP channels. These channels are H.323 and SIP compliant and are used in conjunction with either the G.711 (64K) or G.729A (8K) voice compression protocols. The MGI2 card may be installed in any universal card slot up to a maximum of 5 cards per cabinet. The MGI2 only supports in-band signaling.

Note: There is a maximum of 5 MGI cards per cabinet regardless of MGI card type. For example if there are 3 MGI2 cards there can be only be 2 MGI3 cards.

## **MGI3 (MEDIA GATEWAY INTERFACE)**

The MGI3 card supports 8 VOIP channels. These channels are H.323 and SIP compliant and are used in conjunction with the G.723.1 (5.3K-6.4K), G.729A (8K), G.729 (8K) or G711(64K) voice compression protocols. In addition H.245 Tunneling is supported to enable out of band signaling of DTMF tones between iDCS 500 nodes on the network. The MGI3 card also supports the T.38 fax protocol. The MGI3 card may be installed in any universal card slot up to a maximum of two cards per cabinet. The MGI3 supports both in-band and out-of-bound signaling.

Note: There is a maximum of 5 MGI cards per cabinet regardless of MGI card type. For example if there are 3 MGI2 cards there can only be 2 MGI3 cards.

## **E911 CARD**

The E911 card supports up to 4 CAMA (Centralized Automatic Message Accounting) type loop start trunks to provide CESID (Caller Emergency Services ID). These trunks are connected directly to the PSAP (Public Services Answering Point) to pass on calling station information to enable the emergency services to correctly locate the source of the call such as a building floor.

## 2.3.2 STATION CARDS

### DLI

This card is an eight circuit digital station interface card that provides 2B+D service when installed in any universal card slot in all cabinets. Keyset daughter boards will only work when connected to this card.

### 16DLI

This card is a sixteen circuit digital station interface card that provides 1B+D service when installed in any universal card slot in all cabinets. Keyset daughter boards will not work when connected to this card.

### SLI

This card is a four circuit analog station interface for industry standard single line telephones or other analog peripheral devices (voice mail, etc.). Each circuit is equipped with an analog DTMF receiver and provides the over-voltage protection required for connection to telephone company off premises extension circuits (OPX). It can be inserted in any universal card slot in all cabinets. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card. [See the installation manual part 3 for details.](#)

### 8SLI

This card is a eight circuit analog station interface for industry standard single line telephones or other analog peripheral devices. The 8SLI does not contain any over-voltage protection and is not qualified as OPX. It also does not contain DTMF receivers, but shares system DSP resources. It can be inserted in any universal card slot in all cabinets. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card. [See the installation manual part 3 for details.](#)

### 16SLI

This card is a sixteen circuit analog station interface for industry standard single line telephones or other analog peripheral devices. The 16SLI does not contain any over-voltage protection and is not qualified as OPX. It also does not contain DTMF receivers, but shares system DSP resources. It can be inserted in any universal card slot in all cabinets. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card. [See the installation manual part 3 for details.](#)

### 8MWSLI

This card is an eight circuit analog station interface for industry standard single line telephones that require operation of an industry standard message waiting lamp with a voltage range of 85 ~ 96 VDC. The lamp can be programmed to be on continuously or flash at a programmable rate of 100ms to 2000ms ON/OFF times. The 8MWSLI does not contain any over-voltage protection and is not qualified as OPX. It also does not contain DTMF receivers, but instead shares the system DSP resources. It can be inserted in any universal card slot in all cabinets. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card. [See the installation manual part 3 for details.](#)

### 16MWSLI

This card is a sixteen circuit analog station interface for industry standard single line telephones that require operation of an industry standard message waiting lamp with a voltage range of 85 ~ 96 VDC. The lamp can be programmed to be on continuously or flash at a programmable rate of 100ms to 2000ms ON/OFF times. The 16MWSLI does not contain any over-voltage protection and is not qualified as OPX. It also does not contain DTMF receivers, but instead shares the system DSP resources. It can be inserted in any universal card slot in all cabinets. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card. [See the installation manual part 3 for details.](#)

## 2.3.3 OTHER CARDS

### AUTO ATTENDANT

This optional card can be used for either the Automated Attendant, Uniform Call Distribution or a combination of both. [For more information about the Automated Attendant and UCD, see section 4.1 System Features.](#)

### SVMi-8 & SVMi-16

The SVMi-8 and SVMi-16 Voice Mail system are fully integrated Auto Attendant/Voice Mail/Fax System on a single circuit card.

These optional cards provide either 4 or 8 channels of communication on the SVMi-8 and 8, 12, or 16 channels of communication on the SVMi-16. Only one card is permitted per system and it can be installed in any universal card slot.

This fully featured self contained system is connected directly to the system data bus and communicates with the system processor. This design means that installation time is minimized, operation is streamlined and many features can be implemented that are not normally possible with older conventional stand alone Voice Mail/Auto Attendant systems.

All power to run this self contained system comes from the telephone system power supply. Each of the power supplies is rated according to the number of stations it will support. When the SVMi-8 is installed it counts as (8) eight stations of the PSU rating regardless of the number of Voice Processing Modules installed. When the SVMi-16 is installed it also only counts as (8) eight stations of the PSU rating regardless of the number of Voice Processing Modules installed.

### 8WLI

The 8WLI card is an interface card providing a wireless solution for the iDCS 500 Release 2 / OfficeServ system and provides the wired interface between the iDCS 500 Release 2 / OfficeServ system and up to 8 WBS24s (WLAN Base Station 2.4 GHz). The wired interface uses 2B+1D DASL (Digital Adapter Subscriber Loops), and communicates with the MCP2 card using DPRAM (Dual Ported RAM).

A maximum of one 8WLI card can be mounted on the iDCS 500 Release 2 / OfficeServ system, and the 8WLI can interoperate with a maximum of 8 WBS24s. Since two DASL lines are connected to one WBS24, four simultaneous phone calls are possible through each of the WBS connections. Therefore, one 8WLI board can support a maximum of 32 voice channels.

## 2.4 STATION EQUIPMENT

### 2.4.1 iDCS SERIES EQUIPMENT

#### iDCS 28D KEYSET (See Figure 2–1)

- 32 character display (2 x 16) with three associated soft keys and a scroll key
- 28 programmable keys with tri-colored lights
- Four fixed function keys
- Terminal Status Indicator
- Built-in speakerphone
- Eight selectable ring tones
- UP/DOWN buttons for digital control of speaker, handset and ringer volumes
- Desk- or wall-mounted
- Available in dark gray or light gray



FIGURE 2-1

#### iDCS 18D KEYSET (See Figure 2–2)

- 32 character display (2 x 16) with three associated soft keys and a scroll key
- 18 programmable keys with tri-colored lights
- Four fixed function keys
- Terminal Status Indicator
- Built-in speakerphone
- Eight selectable ring tones
- UP/DOWN buttons for digital control of speaker, handset and ringer volumes
- Desk- or wall-mounted
- Available in dark gray or light gray



FIGURE 2-2

#### iDCS 8D KEYSET (see Figure 2–3)

- 32 character display (2 x 16) with three associated soft keys and a scroll key
- 8 programmable keys with tri-colored lights
- Four fixed function keys
- Terminal Status Indicator
- Built-in speakerphone
- Eight selectable ring tones
- UP/DOWN buttons for digital control of speaker, handset and ringer volumes
- Desk- or wall-mounted
- Available in dark gray or light gray

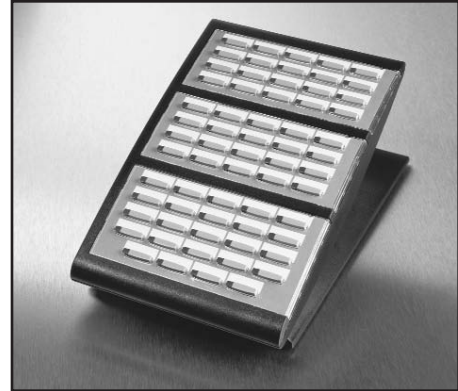


FIGURE 2-3

Note: This keyset type cannot use keyset daughter boards or the 14 button strip.

### **iDCS 64B AOM** (See Figure 2-4)

- 64 programmable keys with red lights
- A maximum of 4 can be assigned to any keyset to provide additional programmable keys
- A maximum of 32 per system
- Available in dark gray or light gray



**FIGURE 2-4**

### **iDCS 14B STRIP** (See Figure 2-5)

- 14 programmable keys with red lights
- A maximum of one can be added to any 28D or 18D keyset to provide additional programmable keys
- Available in dark gray or light gray



**FIGURE 2-5**

### **iDCS KDB-DIGITAL LINE INTERFACE (FKDBD)**

This is a daughterboard that can be installed only in the 18 or 28 button keyset. The FKDBD will provide one additional DLI circuit for the connection of any digital station device such as a keyset, add-on module or DPIM. This FKDBD will only operate when the keyset is connected to an 8 port DLI card so it can use the second B channel. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card.

Note: Only one KDB can be installed on a keyset.

### **iDCS KDB-SINGLE LINE INTERFACE (FKDBS)**

This is a daughter board that can be installed only in the 18 or 28 button keyset. The FKDBS will provide one additional SLI circuit for the connection of any standard telephone device. This FKDBS will only operate when the keyset is connected to an 8 port DLI card it can use the second B channel. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card.

Note: The circuitry on a FKDBS does not provide a loop open disconnect signal or have the over-voltage protection necessary for OPX operation. Only one KDB can be installed on a keyset.

## **iDCS KDB-FULL DUPLEX (FKDBF)**

This is a daughter board that can be installed only in the 18 or 28 button keyset. The standard speakerphone mode of operation for a iDCS keyset is "half duplex". This means that you cannot transmit and receive speech at the same time. Adding a FKDBF to your keyset will convert the speakerphone into full duplex mode enhancing its operation. The FKDBF does not require a second "B" channel like the FKDBD or FKDBS and so can be used on a 16 DLI card. In addition the FKDBF may have up to three (3) external microphones attached to it for conference room type applications. These microphones require an "EXTMIC" key programmed on the keyset to activate or deactivate them.

Note: Only one KDB can be installed on a keyset.

## 2.4.2 DCS SERIES EQUIPMENT

### LCD 24B KEYSET (See Figure 2–6)

- Built-in speakerphone
- 24 programmable keys (16 with tri-colored LEDs)
- Four fixed function keys
- 32 character display (2 x 16) with three associated soft keys and a scroll key
- UP/DOWN buttons for digital control of speaker, handset and ringer volumes
- Eight selectable ring tones
- Desk- or wall-mounted
- Available in almond or charcoal



FIGURE 2-6

### LCD 12B KEYSET (see Figure 2–7)

- 32 character display (2 x 16) with three associated soft keys and a scroll key
- Built-in speakerphone
- 12 programmable keys (six with tri-colored LEDs)
- Four fixed function keys
- UP/DOWN buttons for digital control of speaker, handset and ringer volumes
- Eight selectable ring tones
- Desk- or wall-mounted
- Available in almond or charcoal



FIGURE 2-7

### 7 BUTTON MODEL KEYSET (see Figure 2–8)

- 7 programmable keys
- Three fixed function keys
- UP/DOWN buttons for digital control of speaker and ringer volumes
- Eight selectable ring tones
- Desk or wall mounted
- Available in almond or charcoal



FIGURE 2-8

## SINGLE LINE TELEPHONE (See Figure 2-9)

- Four fixed function keys: hold, flash, new call, and monitor.
- Data Port: selectable to share station extension or utilize a separate extension
- On hook dialing
- Message Waiting/Ring Indicator
- Desk or wall mounted
- Ring volume control,
- Four available ring tones.
- Available in almond and black




**FIGURE 2-9**

Note: This single line telephone set is FCC approved for direct connection to the public telephone network.  
FCC # A3LKOR-24627-TE-T REN 0.9B UL LISTED 19X9 FILE # ETI 8093

## 32 BUTTON ADD-ON MODULE (AOM)

(see Figure 2-10)


- 32 programmable keys
- Two fixed function keys
- UP/DOWN buttons for digital control of speaker and ringer volumes
- Available in almond or charcoal
- One or two can be assigned to any DCS keyset to provide executive off-hook voice announce and additional programmable keys
- Can operate as a stand-alone handsfree telephone unit

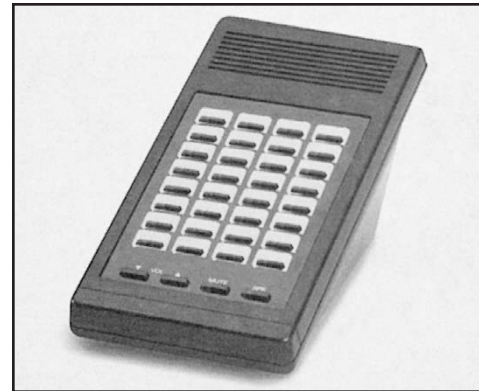

**FIGURE 2-10**

## 64 BUTTON MODULE (See Figure 2-11)

- 64 programmable keys
- Available in almond and charcoal
- A maximum of 4 can be assigned to any DCS keyset to provide additional programmable keys
- A maximum of 32 per System

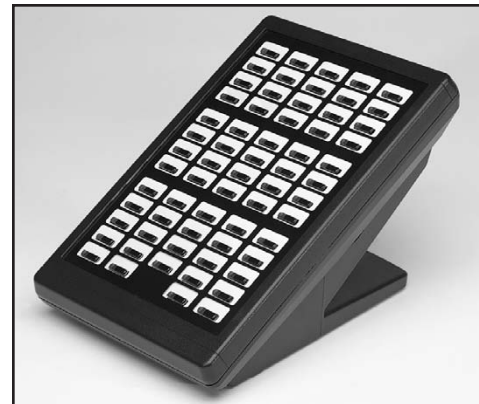

**FIGURE 2-11**



FIGURE 2-12



FIGURE 2-13

## DOOR PHONE INTERFACE MODULE (DPIM) & DOOR PHONE

(see Figures 2–12 and 2–13)

- The DPIM adapts any DLI circuit for use with the door phone unit
- Commonly used to request entry through locked doors (interior or exterior) or as a room monitoring box
- Provides contact control to be used with customer-provided electric door lock
- Door phone is wall-mounted
- Door phone is weather resistant

### KDb-DLI

This is a daughterboard that can be installed only in the 12 or 24 button keyset. The KDb-DLI will provide one additional DLI circuit for the connection of any digital station device such as a keyset, add-on module or DPIM. This KDb-DLI will only operate when the keyset is connected to an 8 port DLI card so it can use the second B channel. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card. [See the installation manual part 3 for details.](#)

### KDb-SLI

This is a daughter board that can be installed only in the 12 or 24 button keyset. The KDb-SLI will provide one additional SLI circuit for the connection of any standard telephone device. This KDb-SLI will only operate when the keyset is connected to an 8 port DLI card it can use the second B channel. Each port on this card is intended for connection to one telephone. Connecting multiple telephones to a port may result in incorrect operation or damage to the card. [See the installation manual part 3 for details.](#)

Note: The circuitry on a KDb-SLI does not provide a loop open disconnect signal or have the over-voltage protection necessary for OPX operation.

## 2.4.3 OfficeServ ITP-50 SERIES EQUIPMENT

### ITP-5012L IP KEYSET (See Figure 2-14)

- Built-in speakerphone
- Five fixed function keys
- 3 Inch x 2.25 LCD display with twelve associated soft keys and a scroll wheel
- UP/DOWN buttons for digital control of speaker, handset and ringer volumes
- Eight selectable ring tones
- Navigation key



**FIGURE 2-14**

### ITP-5021D IP KEYSET (See Figure 2-15)

- 32 character display (2 x 16) with three associated soft keys and a scroll key
- Built-in speakerphone
- 21 programmable keys with tri-colored LEDs
- Five fixed function keys
- UP/DOWN buttons for digital control of speaker, handset and ringer volumes
- Eight selectable ring tones
- Desk or wall-mounted



**FIGURE 2-15**

# PART 3. SPECIFICATIONS

The following tables provide technical data for the iDCS 500 Release 2 hybrid/key telephone system.

<b>3.1a ELECTRICAL SPECIFICATIONS (PSU 60)</b>	
AC INPUT	120 (88—132) VAC (48—63 Hz)* 220 (180—260) VAC (48—63 Hz)
POWER CONSUMPTION (MAX)	120 WATTS MAX. PER PSU FUSE RATING 3 AMP
BTU RATING (MAX)	6.8 BTU / MINUTE
DC OUTPUT	+5 VOLTS 5.0 AMPS MAX -5 VOLTS 0.5 AMPS MAX -48 VOLTS 1.4 AMPS MAXIMUM -54 VOLTS CHARGER 0.45 AMPS MAX

\*Normal factory setting.

<b>3.1b ELECTRICAL SPECIFICATIONS (PSU 60B)</b>	
AC INPUT	100—120 (88—132) VAC (48—63 Hz)* 220—240 (180—260) VAC (48—63 Hz)
POWER CONSUMPTION (MAX)	150 WATTS MAX. PER PSU FUSE RATING 5 AMP
BTU RATING (MAX)	8 BTU / MINUTE
DC OUTPUT	+5 VOLTS 7.0 AMPS MAX -5 VOLTS 1.5 AMPS MAX -48 VOLTS 1.4 AMPS MAXIMUM -54 VOLTS CHARGER 0.45 AMPS MAX

\*Normal factory setting.

## 3.2 DIMENSIONS AND WEIGHTS

	HEIGHT	WIDTH	DEPTH	WEIGHT
iDCS 500 Basic System: Single Cabinet	17.5"	22.5"	12"	35 lb.
Expanded System: Two Cabinets	35"	22.5"	12"	70 lb.
Expanded System: Three Cabinets	52.5"	22.5"	12"	105 lb.
Digital Keypad (All Models)	4.25"	8.5"	9"	2.563 lb.
ITP-5021D	4"	10.5"	8.25"	2.340 lb.
ITP-5012L	4"	10.5"	8.5"	2.570 lb.
iDCS 14B Strip	5"	1.625"	8"	5.5 lb.
iDCS 64B AOM	4"	5.25"	9"	1.1 lb.
32 Button Add-On Module	4.25"	4.25"	9"	1.188 lb.
64 Button Add-On Module	4.25"	4.25"	9"	1.25 lb.
Door Phone	5"	3.88"	1.25"	6.8 oz.

## 3.3 ENVIRONMENTAL LIMITS

OPERATING TEMPERATURE	32—104 °F / 0—40 °C
STORAGE TEMPERATURE	-13—158 °F / -25—70 °C
HUMIDITY	10%—90% Non-Condensing

## 3.4 CABLE REQUIREMENTS

EQUIPMENT	CABLE	AWG	MAX FEET	MAX METERS
DIGITAL KEYPAD	1 PR. TWISTED	24	1300	400
ADD-ON MODULE	1 PR. TWISTED	24	1300	400
SINGLE LINE STATION	1 PR. TWISTED	24	3000	1 KM
DOOR PHONE	2 PR. TWISTED	24	330*	100


\*This is the maximum distance a door phone can be from the DPIM. The DPIM can be up to 900 cable feet from the KSU. The total distance must not exceed 1230 feet.

## 3.5 SYSTEM TONES

TONE	FREQUENCIES	CADENCE
DIAL TONE	350 + 440 Hz	Continuous
RINGBACK TONE	440 + 480 Hz	1 sec on + 3 sec off
DID RINGBACK TONE	440 + 480 Hz	2 sec on + 4 sec off
BUSY TONE	480 + 620 Hz	0.5 sec on + 0.5 sec off
DND / NO MORE CALLS	480 + 620 Hz	0.25 sec on + 0.25 sec off
TRANSFER / CONF	350 + 440 Hz	0.1 sec on + 0.1 sec off
CONFIRMATION TONE	350 + 440 Hz	0.05 sec on + 0.05 sec off
ERROR TONE	480 + 620 Hz	0.05 sec of tone 1/0.05 sec of tone 2

## SYSTEM TONES

Intercom Dial Tone—A steady tone that indicates you can begin dialing.

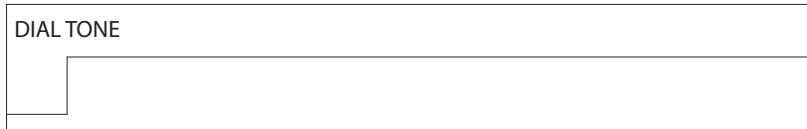


CONTINUOUS

Ringback Tone—Indicates the station you dialed is ringing.




CONTINUOUS

Busy Signal—Indicates the station you dialed is busy.

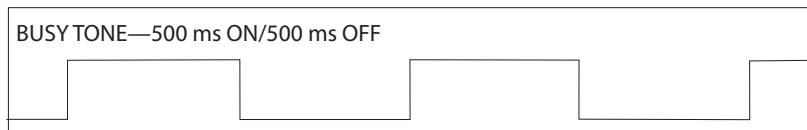


CONTINUOUS

DND/No More Calls Tone—Fast busy tone advises you the station you dialed is in the Do Not Disturb mode or cannot receive any more calls.

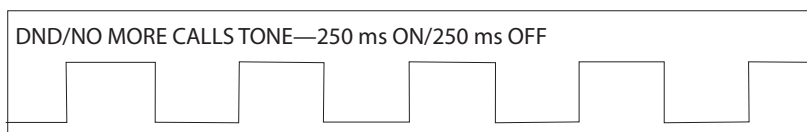


FOR TEN SECONDS

Transfer/Conference Tone—Indicates your call is being held and you can dial another party.

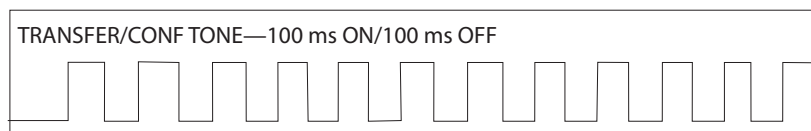


CONTINUOUS

Confirmation Tone—Very short beeps followed by dial tone indicate you have correctly set or canceled a system feature.

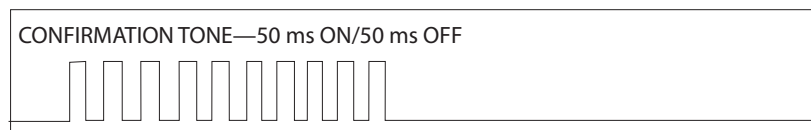

FOR TWO SECONDS

ERROR TONE—A distinctive two level beeping tone indicates you have done something incorrectly. Try again.

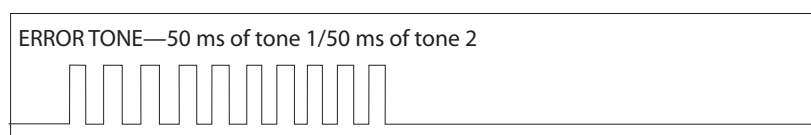

FOR TWO SECONDS

### 3.6 KEYSSET LED INDICATIONS

CONDITION	LED COLOR	LED ON	LED OFF
LINE IDLE	OFF	—	OFF
LINE IN USE	RED / GREEN	STEADY	—
RECALL	AMBER	500 ms	500 ms
CALL ON HOLD	RED / GREEN	500 ms	500 ms
RINGING C.O. CALL	GREEN	100 ms	100 ms
RINGING INTERNAL CALL	GREEN	100 ms	100 ms
DND INDICATION	RED	112 IPM for 500 ms	500 ms
OPERATOR CALLS	RED	100 ms	100 ms
ANS / RLS (DND)* (**)	RED	112 IPM for 500 ms	500 ms
ANS / RLS (HANDSET MODE)**	RED	STEADY	—
TRSF (FORWARD ALL)**	RED	STEADY	—

\*Overrides headset mode

\*\*DCS model keysets only

### 3.7a RESERVE POWER DURATION ESTIMATES (in minutes)\*

No. of PSUs	UPS CAPACITY IN VOLT AMPS (VA)					
	250	450	600	900	1250	2000
1	5	20	30	47	75	180
2		8	10	24	40	70
3		5	7	20	36	64
4				13	22	35
5				10	13	25
6				5	10	20

\*These are approximate values. Specific UPS devices, due to their internal construction, can have greater or lesser values.

### 3.7b RESERVE POWER DURATION ESTIMATES (in hours)\*

No. of PSUs	BATTERY CAPACITY IN AH					
	40	80	120	160	200	240
1	15	x	x	x	x	x
2	7.5	15	x	x	x	x
3	5.3	7.5	15	x	x	x
4	4	5.3	7.5	15	x	x
5	3.2	4	5.3	7.5	15	x
6	2.7	3.2	4	5.3	7.5	15

\*These are approximate values. Specific batteries, due to their internal construction, can have greater or lesser values. Note: X denotes that this system configuration cannot charge batteries of this capacity.

## Samsung iDCS 500 Release 2 Table Size Comparison

	M VERSION	L VERSION
Station Groups	40	80
Trunk Groups	30	30
UCD Groups	20	20
Station Group Members	48	48
Unconditional Group Members	32	32
Trunk Group Members	99	99
Internal Page Members	99 x 5	99 x 5
External Page Members	8 x 4	8 x 4
Toll Restriction Entries	500	500
Toll Allowance Entries	500	500
DID Translation Entries	999	999
Authorization Code Entries	500	500
Account Code Entries	999	999
Station Groups	40	80
LCR Digit Entries	2000	2000
LCR Modify Digit Tables	200	200
LCR Time Tables	4	4
LCR Time Bands	4	4
LCR Route Tables	32	32
Alarm Reminder Buffers	3	3
Speed Dial Entries	2000	2500
System Buffers (MAX)	500	500/950
Station Buffers (MAX)	50	50
AA Plan Tables	12	12
AA Translation Tables	12	12
AA Translation Entries	100 x 12	100 x 12
CID Review Buffers	2000	2000
CID Abandon Lists	100	100

	M VERSION	L VERSION
CID Name Translation Entries	1000	2000
Call Buttons per Station	8	8
Call Logs Entries	2000	2000
Call Log per Station	50	50
Tenant Groups	2	2
Ring Plans	6	6
Programmed Messages	20 (15+5)	20 (15+5)
AOM Pairs per Station	4	4
Call Cost Digit Entries	500	500
Call Cost Rate Tables	8	8
PBX Access Code Entries	5	5
Special Code Entries	10	10
Emergency/Override Code Entries	8	8
Holiday Entries	60	60
Class of Service	30	30
LCR Classes	8	8
Message Waiting per Station	5	5
Conference Groups	24	24
Conference Group Members	5	5
Pickup Groups	99	99
Internal/External Page Zones	5/4	5/4
System Speed Dial Buffers	500	500
Station Speed Dial Buffers	50	50
Redial & External FWD Dial Digits	18	18
IP Keysets	120	240
Virtual Extensions	62	118

# PART 4. BUSINESS FEATURE PACKAGE

## SYSTEM FEATURES

<a href="#">Account Code Entry</a>	<a href="#">External</a>	<a href="#">Distinctive Ringing</a>
<a href="#">Forced - Verified</a>	<a href="#">To Voice Mail</a>	<a href="#">Door Lock Release (Programmable)</a>
<a href="#">Forced - Not Verified</a>	<a href="#">Preset Destination</a>	<a href="#">Door Phones</a>
<a href="#">Voluntary</a>	<a href="#">Preset Forward Busy</a>	<a href="#">E &amp; M Tie Lines T1/Copper</a>
<a href="#">Account Code Key - One Touch</a>	<a href="#">Call Hold</a>	<a href="#">Executive Barge-In (Override)</a>
<a href="#">Administrator Program Key</a>	<a href="#">Exclusive</a>	<a href="#">With Warning Tone</a>
<a href="#">All Call Voice Page</a>	<a href="#">System</a>	<a href="#">Without Warning Tone</a>
<a href="#">Attention Tone</a>	<a href="#">Remote</a>	<a href="#">Trunk Monitor or Service Observing</a>
<a href="#">Auto Answer on CO</a>	<a href="#">Call Park and Page</a>	<a href="#">External Music Interfaces</a>
<a href="#">Audio Message with Alarm</a>	<a href="#">Call Pickup</a>	<a href="#">External Page Interfaces</a>
<a href="#">(Timer) Reminder</a>	<a href="#">Directed</a>	<a href="#">Flash Key Operation</a>
<a href="#">Authorization Codes</a>	<a href="#">Groups</a>	<a href="#">Flexible Numbering</a>
<a href="#">Forced</a>	<a href="#">Established</a>	<a href="#">Group Busy Setting</a>
<a href="#">Voluntary</a>	<a href="#">Call Waiting/Camp-On</a>	<a href="#">Ground Start Trunks (T1/Copper)</a>
<a href="#">Auto Attendant†</a>	<a href="#">Caller Emergency Service ID (CESID)</a>	<a href="#">Hot Line</a>
<a href="#">Automatic Hold</a>	<a href="#">Centrex/PBX Use</a>	<a href="#">In Group/Out of Group</a>
<a href="#">Background Music</a>	<a href="#">Chain Dialing</a>	<a href="#">Incoming Call Distribution</a>
<a href="#">Branch Group</a>	<a href="#">Chain Forward</a>	<a href="#">Incoming/Outgoing Service</a>
<a href="#">Call Activity Display</a>	<a href="#">Class of Service</a>	<a href="#">Individual Line Control</a>
<a href="#">Call Costing</a>	<a href="#">Common Bell Control</a>	<a href="#">Integrated Voice Mail</a>
<a href="#">Caller Identification†</a>	<a href="#">Conference</a>	<a href="#">IP Keysets</a>
<a href="#">Automatic Number Identification (ANI)</a>	<a href="#">Add-On (5 Party)</a>	<a href="#">ISDN Call Progress Monitor</a>
<a href="#">Caller ID</a>	<a href="#">Unsupervised</a>	<a href="#">ISDN Service</a>
<a href="#">Calling Line Identification (CLI)</a>	<a href="#">Split</a>	<a href="#">Primary Rate Interface (PRI)</a>
<a href="#">Calling ID Features</a>	<a href="#">Group Conference</a>	<a href="#">Basic Rate Interface (BRI)</a>
<a href="#">Name/Number Display</a>	<a href="#">Computer Telephony Integration (CTI)</a>	<a href="#">LAN Interface</a>
<a href="#">Next Call</a>	<a href="#">SmartCentre</a>	<a href="#">Least Cost Routing</a>
<a href="#">Save Caller ID Number</a>	<a href="#">Smart Operator</a>	<a href="#">Live System Programming</a>
<a href="#">Store Caller ID Number</a>	<a href="#">TAPI 2.1</a>	<a href="#">From any Display Keypad</a>
<a href="#">Inquire Park/Hold</a>	<a href="#">Customer Set Relocation</a>	<a href="#">With a Personal Computer</a>
<a href="#">Caller ID Review List</a>	<a href="#">Data Security</a>	<a href="#">Meet Me Page and Answer</a>
<a href="#">Investigate</a>	<a href="#">Database Printout</a>	<a href="#">Memory Protection</a>
<a href="#">Abandon Call List</a>	<a href="#">Daylight Saving Time-Automatic</a>	<a href="#">Message Waiting Indications</a>
<a href="#">Caller ID on SMDR</a>	<a href="#">Dialed Number Identification Service (DNIS)</a>	<a href="#">Message Waiting Key</a>
<a href="#">Number to Name Translation</a>	<a href="#">Direct In Lines</a>	<a href="#">Microphone On/Off per Station</a>
<a href="#">Caller ID Send</a>	<a href="#">Direct Inward Dialing (DID) T1/Copper</a>	<a href="#">Multiple Language Support</a>
<a href="#">Caller ID Reject</a>	<a href="#">Day/Night Routing</a>	<a href="#">Music on Hold—Flexible</a>
<a href="#">Call Forwarding</a>	<a href="#">Busy or Camp-On Option</a>	<a href="#">Music on Hold—Sources</a>
<a href="#">All Calls</a>	<a href="#">MOH Source</a>	<a href="#">Networking</a>
<a href="#">Busy</a>	<a href="#">DID Call Limits</a>	<a href="#">Off Premises Extensions (OPX)</a>
<a href="#">No Answer</a>	<a href="#">Direct Inward System Access (DISA)</a>	<a href="#">Operator Group</a>
<a href="#">Busy/No Answer</a>	<a href="#">Direct Trunk Selection</a>	<a href="#">Overflow</a>
<a href="#">Forward DND</a>	<a href="#">Directory Names</a>	<a href="#">Operator</a>
<a href="#">Follow Me</a>	<a href="#">DISA Security</a>	<a href="#">Station Group</a>

<a href="#">Override Code</a>	<a href="#">Secretary Pooling</a>	<a href="#">Toll Restriction Override</a>
<a href="#">Paging</a>	<a href="#">Single Line Connections</a>	<a href="#">Tone or Pulse Dialing</a>
<a href="#">Internal Zones (5)</a>	<a href="#">Speed Dial Numbers</a>	<a href="#">Traffic Reporting</a>
<a href="#">External Zones (4)</a>	<a href="#">Station List (50 Max)</a>	<a href="#">Transfer</a>
<a href="#">All Internal</a>	<a href="#">System List (500 Max)</a>	<a href="#">Screened/Unscreened</a>
<a href="#">All External</a>	<a href="#">Speed Dial by Directory</a>	<a href="#">Voice Mail Transfer Key</a>
<a href="#">Page All</a>	<a href="#">Station Hunt Groups</a>	<a href="#">With Camp-On</a>
<a href="#">Park Orbits</a>	<a href="#">40-M Version, 80-L Version</a>	<a href="#">Trunk Groups (30)</a>
<a href="#">Prime Line Selection</a>	<a href="#">Distributed</a>	<a href="#">Uniform Call Distribution (UCD)†</a>
<a href="#">Private Lines</a>	<a href="#">Sequential</a>	<a href="#">UCD Groups</a>
<a href="#">Programmable Line Privacy</a>	<a href="#">Unconditional</a>	<a href="#">Call Statistics</a>
<a href="#">Programmable Timers</a>	<a href="#">Station Message Detail Recording (SMDR)</a>	<a href="#">Agent Busy/Manual Wrap Up Key</a>
<a href="#">Recalls</a>	<a href="#">Station Pair</a>	<a href="#">Agent ID Numbers</a>
<a href="#">Recall to Operator</a>	<a href="#">System Alarms</a>	<a href="#">Agent Statistics</a>
<a href="#">Redial Review</a>	<a href="#">System Maintenance Alarms</a>	<a href="#">Group Supervisors</a>
<a href="#">Remote Programming—PC</a>	<a href="#">System Directory</a>	<a href="#">Printed Reports</a>
<a href="#">Ring Modes</a>	<a href="#">Tenant Services (2)</a>	<a href="#">Universal Answer</a>
<a href="#">Time Based Routing—Plans</a>	<a href="#">Toll Restriction</a>	<a href="#">Virtual Extensions</a>
<a href="#">Automatic / Manual</a>	<a href="#">By Day or Night</a>	<a href="#">Voice Mail – Inband Integration</a>
<a href="#">Holiday Schedule</a>	<a href="#">By Line or Station</a>	<a href="#">VoIP</a>
<a href="#">Temporary Override</a>	<a href="#">Eight Dialing Classes</a>	<a href="#">Walking Class of Service</a>
<a href="#">Ring Over Page</a>	<a href="#">Special Code Table</a>	

†Requires optional hardware and/or software. Ask your dealer for details.

# 4.1 SYSTEM FEATURE DESCRIPTIONS

## ACCOUNT CODE ENTRY

Station users may enter an account code (maximum 12 digits) before hanging up from a call. This account code will appear in the SMDR printout for that call record. Keypad users may enter this code using an account code key without interrupting a conversation. Single line telephone users must temporarily interrupt the call by hook-flashing and dialing the feature access code. Manually entered account codes can be up to 12 digits long. In some cases users can be forced to enter an account code and this account code may or may not be verified as described below.

### **Forced – Verified**

When set for this option the user must enter an account code for all outgoing calls. The account code entered will be verified from a system list of 999 entries. Forced Verified codes can contain the digits 0~9.

### **Forced - Not Verified**

When set for this option the user must enter an account code for all outgoing calls, but the account code is not verified against the system list. Non verified account codes can contain the digits 0~9, \* and #.

### **Voluntary**

In this case account codes are not required to make outgoing calls but may be used if desired. This is also the method used to assign an account code to incoming calls. These account codes can contain the digits 0~9, \* and #.

## ACCOUNT CODE KEY – ONE TOUCH

The account code (ACC) key can be programmed on any keyset. This key can be programmed with an extender and operates in three different ways depending on the extender as follows.

### **Extender = 000**

When programmed with an extender of 000 the user will be prompted to enter an account code when the key is pressed.

### **Extender = 001~999**

When programmed with an extender ranging from 001 to 999 the key will, when pressed, automatically insert the account code contained in that bin of the system account code list. This is known as One Touch account codes. This option can be denied in system programming to prevent users from bypassing the security of system account codes.

### **No Extender**

When programmed without an extender the key will, when pressed, prompt the user to enter the bin number the system account code table where the account codes are stored.

## ADMINISTRATOR PROGRAM KEY

This feature gives designated stations the ability to administer a number of System functions from their keyset using a flexibly assigned button. The Administrator Program (PROG) key is programmed in MMC 722. The station passcode must be changed from the default value to use this feature. [See the System Administrator Guide for more information.](#)

## ALL CALL VOICE PAGE

Users can page internal zone zero and all external paging zones at the same time by dialing the All Page code. Keysets may be restricted from making or receiving pages in system programming. A maximum of 99 keysets can be programmed in each internal page zone to receive page announcements.

Note: Each IP keyset being paged requires an MGI channel to carry the page audio. If all MGI channels are busy then no IP keysets will receive a page.

## ATTENTION TONE

To get your attention, a brief tone precedes all page announcements and intercom voice calls. There are separate programmable duration timers for page and voice announce tones.

## AUTO ANSWER ON CO

Allows new CO calls directed to a certain keyset to auto answer and be in the call announce mode. This means that private lines and DID calls can be “auto answered” in the same manner as intercom calls. Transferred calls and calls to a station group of which that keyset is a member will continue to ring.

## AUDIO MESSAGE WITH ALARM (TIMER) REMINDER

This feature provides an option that allows a recorded message to be played to a user when they go off hook to answer an alarm reminder ring (timed reminder ring). The message is recorded on the AA card. In addition, if the AA group is busy when the reminder call is answered the system will play a designated MOH source to the user. Alternatively System programming can define an external music source to be played when the Appointment Reminder is answered.

## AUTHORIZATION CODES

Authorization codes are used to give permission to make a call. A maximum of 500 four to ten-digit authorization codes can be either forced or voluntary. When used, authorization codes will automatically change the dialing station’s class of service to the level assigned to the authorization code. Authorization codes may be programmed to print or not print on SMDR.

### Forced

When a station is programmed for forced authorization, the user must always enter this code before dialing is allowed. The dialed authorization code is verified from the system list of 500 authorization codes.

### Voluntary

Any station user can always enter an authorization code before they begin dialing. The dialed authorization code is verified from a system list of 500 authorization codes.

## AUTO ATTENDANT

The integrated digital automated attendant feature (AA) provides eight ports per card for simultaneous answering and call processing. A maximum of five cards can be installed in one system. Each card has sixteen professionally recorded announcements inform callers of the progress of their calls. Several examples are the following: “I’m sorry. There is no answer,” “That station is busy,” and “Invalid Number. Please try again.” A maximum of two minutes of super capacitor backed (100 hours) random access memory (RAM) provide up to 48 customer recordings for announcements or greetings. Twelve individual announcements (boxes), each with its own dialing options, allow you to build call routing branches as needed. Callers are routed through the branches by dialing extension numbers or single digits. This system is compatible with SVMi-8.

NOTE: Announcements recorded on one AA card can not be played to callers on another AA card.

## **AUTOMATIC HOLD**

While a keyset user is engaged on an outside (C.O.) call, pressing another trunk key, route key or CALL button automatically places the call on hold when Automatic Hold is enabled. Pressing TRSF, CONFERENCE, PAGE or a DSS key always automatically places a C.O. call on hold. Intercom calls can be automatically held only by pressing TRSF or CONFERENCE. Each keyset user can enable or disable Automatic Hold.

## **BACKGROUND MUSIC**

Keyset users may choose to hear music through their keyset speakers when optional external sources are installed. Each user may adjust this level by the use of a volume control program at the selected keyset.

## **BRANCH GROUP**

This feature allows stations included in a branch group to answer a ringing call to another station in the group by simply lifting the handset or going on speakerphone mode. This feature works well when there is a need to answer calls for people who may be away from their desk or when a common answering pool is needed. Calls can be directed to a common bell and then can be answered by anyone in the Branch Group. There are a total of 99 branch groups available, but a station can only be in one branch group.

## **CALL ACTIVITY DISPLAY**

The iDCS 500 Release 2 will record and buffer all calling activity within the system. With a Call Activity Display (CAD) key, the iDCS 500 Release 2 will display a “snapshot” of the following information:

- The maximum number of ports that have been used
- The maximum number of trunks that have been used
- The maximum number of stations that have been used
- The current number of ports in use
- The current number of trunks in use
- The current number of stations in use

## **CALL COSTING**

The iDCS 500 Release 2 software provides programmable call costing tables to calculate the cost of incoming and outgoing calls. Rates are calculated by the number dialed, and may include surcharges. Display keysets can be set to show the call duration timer or the call cost. The SMDR report will show either the call duration or the call cost depending on the station selection. One call handled by multiple callers will cost each call segment separately.

## **CALLER IDENTIFICATION**

The iDCS500 supports three methods of identifying an incoming caller depending on the circuit type as described below.

### **Automatic Number Identification (ANI)**

On a digital T1 trunk programmed as E&M trunks calling party information is called ANI. This information is the telephone number of the calling party and is sent as in-band DTMF digits during the call setup. Care should be taken to ensure the system has sufficient DTMF receiver resources to handle the expected volume of call traffic. Although ANI provides the number only, a name can be attached to the telephone number of frequent callers via the CID/ANI translation table.

## Caller ID

On an analog, loop start CO line, calling party information is called Caller ID and is available from the telephone company in two formats, Number only and Name and Number, sometimes called Deluxe. The iDCS 500 Release 2 is compatible with both formats. Even if the telephone company only offers the number only, a name can be attached to the telephone number of frequent callers via the CID/ANI translation table.

## Calling Line Identification (CLI)

On ISDN circuits, calling party information is called CLI and is supported on both BRI and PRI type circuits as described below.

### BRI

On BRI circuits the iDCS500 only supports Number delivery and, like ANI, a name can be attached to the telephone number of frequent callers via the CID/ANI translation table.

### PRI

On 5ESS and NI2 PRI circuits both name and number support is provided on the iDCS500 system. On a DMS100 circuit only Number service is provided.

## CALLER ID FEATURES

The following features apply to all forms of Caller Identification, however, to make them easier to read caller identification is referred to as Caller ID.

### Name/Number Display

Each LCD keyset user can decide if he/she wants to see the name or number in the display. Regardless of which one is selected to be seen first, the NND key is pressed to view the other pieces of information.

### Next Call

In the event that you have a call waiting or a camped-on call at your keyset, you can press the NEXT key to display the Caller ID information associated with this next call in queue at your station. Either the Caller ID name or number will show in the display depending on your selection.

### Save Caller ID Number

At any time during an incoming call that provides Caller ID information, you may press the SAVE key. This saves the Caller ID number in the Save Number feature. Pressing the SAVE number redial key will dial the Caller ID number. The system must be using Least Cost Routing (LCR) to dial the saved number.

### Store Caller ID Number

At any time during an incoming call that provides Caller ID information, you may press the STORE key. This saves the Caller ID number as a speed dial number in your personal speed dial list. The system must be using LCR to dial the stored number.

### Inquire Park / Hold

Having been informed that an incoming call is on hold or has been parked, you may view the Caller ID information before you retrieve the call. This will influence how you choose to handle the call.

### Caller ID Review List

This feature allows display keyset users to review Caller ID information for calls sent to their stations. This list can be from ten to fifty calls in a first in, first out basis. The list includes calls that you answered and calls that

rang your station but that you did not answer. When reviewing this list, you can press one button to dial the person back. The system must be using LCR to dial the stored number. There is also an option called CID REVW ALL in the User ON/OFF options. When set to ON the feature will operate the same as described. However, when set to OFF only calls that are not answered (missed calls) at the station will be recorded in the Review list.

### **Investigate**

This feature allows selected stations with a special class of service to investigate any call in progress. If Caller ID information is available for an incoming call, you will know to whom this station user is speaking. On outgoing calls, you can see who was called. After investigating, you may barge-in on the conversation, disconnect the call or hang up.

### **Abandon Call List**

The system has a system-wide abandon call list that stores Caller ID information for calls that rang but were not answered. The list is accessed using the administrator's passcode. When reviewing this list, you are provided options to CLEAR the entry or DIAL the number. You can see the NND key to toggle between the Caller ID name, number and the date and time the call came in. The system must be using LCR to dial numbers from the abandon call list. The abandoned call list will store up to 100 unanswered calls.

### **Caller ID ON SMDR**

The Station Message Detail Records report can be set to include Caller ID name and Caller ID number for incoming calls. This format expands the printout to 113 characters. Use a wide carriage printer or an 80 column printer set for condensed print.

### **Number to Name Translation**

The system provides a translation table for 1000 entries on iDCS 500 Release 2-M version software and 2000 entries on iDCS 500 Release 2-L version software. When the Caller ID number is received, the table is searched. When a match is found, the system will display the corresponding name.

### **Caller ID Send**

The CID Send feature works in conjunction with the DID numbers assigned to a PRI trunk. When an outgoing call is made over the PRI the system can be programmed to send as Caller ID the DID number associated with that station.

### **Caller ID Reject**

Up to 100 telephone numbers can be programmed into a list. The system will reject C.O. calls if the CID number matches one programmed in this list.

## **CALL FORWARDING**

This feature allows the user to redirect (forward) incoming calls. The calls can be redirected to the attendant, a hunt group, voice mail, external number or another station user. If the destination station is in Do Not Disturb (DND), the calling party will receive DND/Reorder tone. Calls cannot be forwarded to a door phone.

### **All Calls**

This type of forwarding is not affected by the condition of the station. All calls are immediately redirected to the designated destination. If desired, the destination station may redirect the call back to the forwarded station by using the transfer feature. The forwarded station user can continue to originate calls as usual. If no key is programmed as Forward All, the TRSF key lights steady when a Forward All condition is set.

## **Busy**

This feature forwards all calls only when the station set is busy. The station user can originate calls as usual.

## **No Answer**

This feature forwards calls that are not answered within a preprogrammed time. The user can originate calls as usual and receive call if present. The timer is programmable on a per-station basis to allow for differences in individual work habits.

## **Busy /No Answer**

This feature allows the station user to use both types of forwarding simultaneously, provided the destinations have already been entered in the usual manner.

## **Forward DND**

This feature works with the Do Not Disturb feature. This allows calls directed to a station in Do Not Disturb or One Time Do Not Disturb to forward immediately to another destination.

## **Follow Me**

This feature allows the user to forward all calls from another station to the user's station or change the forward destination to the user's current location.

## **External**

Stations can be programmed to forward all, forward busy, forward no answer, forward DND C.O. calls to an external number via a central office trunk if allowed by class of service. Intercom calls may also be programmed to forward to an external number via a central office trunk.

## **To Voice Mail**

Each station may be programmed to allow or deny the ability to forward intercom calls to voice mail. When denied, valuable message time in the voice mail system can be saved.

## **Preset Destination**

If desired this feature provides for a permanent (preset) forward no answer destination for each extension. It can only be programmed by the system technician or system administrator. When any station does not have FWD/NO-ANSWER set, the call will ring this preset destination if one is programmed.

## **Preset Forward Busy**

This feature allows the Preset Forward No Answer setting to also work for Busy status. When PRESET BUSY is turned on the calls will follow the preset for both busy and no answer conditions.

# **CALL HOLD**

## **Exclusive**

Outside calls can be placed on exclusive hold at any keyset by pressing HOLD twice during a call. Calls placed on exclusive hold can only be retrieved at the keyset that placed the call on hold. Intercom calls are always placed on exclusive hold. Exclusive hold for trunk calls can be denied in class of service.

## **System**

Outside calls can be placed on system hold at any station. Users may dial the access code or press the HOLD button. Calls on system hold may be retrieved at any station.

## **Remote**

Outside calls can be placed on hold at a station other than the station placing the call on hold. This feature allows calls to be answered at one keyset and placed on hold at another station. This allows time for the user to proceed to that station or allows the party that the call was intended for to have that call placed at their station. The call or trunk button will flash at the remote hold station. NOTE: Intercom calls cannot be remote held.

## **CALL PARK AND PAGE**

Each C.O. line has its own park zone. This simple method eliminates confusion and ensures that a park zone is always available. Pressing the PAGE key parks the call automatically. There are no extra buttons to press and there is no lost time looking for a free zone.

## **CALL PICKUP**

### **Directed**

With directed call pickup, users can answer calls ringing at any station by dialing a code plus that station's extension number or by pressing the feature button and then dialing the extension. There is a system option to allow a DSS key to perform a pickup function rather than a transfer function when pressed.

### **Groups**

In addition, calls can be picked up from a station group in a similar manner. The group pickup feature allows users to answer any call ringing within any pickup group. There are 99 pickup groups available in the system. A station cannot be in more than one pickup group. To use this feature, station users either dial the access code or press the assigned feature button followed by the pickup group number.

### **Established**

This feature enables a keyset user to pick-up an establish call in progress at a single line extension connected to a modem on a PC. An EP key with this extension number must be programmed on the keyset. Established call pickup is useful with PC dialing programs that outdial from a large list of telephone numbers. Let the computer dial for you, then press the EP key to speak with the called party.

## **CALL WAITING/CAMP-ON**

Busy stations are notified that a call is waiting (camped-on) when they receive a tone. The tone is repeated at a programmable interval. Keysets receive an off-hook ring signal through the speaker and single line stations receive a tone in the handset. The volume of the camp-on tone can be set by the station user. Camped-on calls follow Forward No Answer if a Forward No Answer destination has been set.

Optionally any station can be programmed to automatically camp-on to a busy station instead of having to press the camp-on button or dial a camp-on code.

## **CALLER EMERGENCY SERVICE ID (CESID)**

This is a service where the telephone system sends a number, usually a call back number, to the Public Service Answering point (PSAP) when a station user dials 911. This number is associated in the PSAP with a location indicating exactly where the call originated. This allows the emergency services to respond directly to the correct building or floor of a building rather than to have to make inquiries as to the location of the emergency. This service is sometimes referred to as Enhanced 911 or E-911. This service is provided in two forms in the iDCS 500 Release 2, either via a dedicated 4 port Centralized Automatic Message Accounting (CAMA) trunk card called the E911 card or via an ISDN PRI circuit configured for both way DID connected to the TEPRI card.

## **CENTREX/PBX USE**

CENTREX and PBX lines can be installed in lieu of central office trunks. CENTREX and PBX feature access codes including the command for hook-flash (FLASH) can be stored under one touch buttons. Toll restriction programming can ignore PBX or CENTREX access codes so that toll calls can be controlled when using these services.

## **CHAIN DIALING**

Keypad users may manually dial additional digits following a speed dial call or chain together as many speed dial numbers as are required.

## **CHAIN FORWARD**

The chain forward option determines whether a forwarded intercom call that subsequently forwards to voicemail will target the original station's mailbox or the second station's mailbox.

## **CLASS OF SERVICE**

The system allows a maximum of 30 station classes of service. Each class of service can be customized in memory to allow or deny access to features and to define a station's dialing class. Each station can be assigned different classes of service for day and night operation.

## **COMMON BELL CONTROL**

The MISC daughter board provides relays that may be programmed to control a customer-provided common bell or common audible device. These contacts must be programmed as members of a station group and may provide steady or interrupted closure.

## **CONFERENCE**

The system allows six simultaneous conferences up to 5 parties each. If a SCM daughter board is installed, then the system allows a total of 24 simultaneous conferences up to 5 parties each.

### **Add-On (5 Party)**

Any combination of up to five parties (stations or outside lines) can be joined together in an add-on conference. Parties may be eliminated or added after a conference has been established.

### **Unsupervised**

A station user may set up a conference with two or more outside lines and then exit the conference leaving the outside lines connected in an unsupervised (trunk to trunk) conference.

### **Split**

A keypad user can "split" a conference into separate outside calls, then speak with each caller privately. Then the individual calls can be conferenced again in any combination. NOTE: This feature requires individual trunk buttons and auto-hold must be enabled.

### **Group Conference**

The group conference feature allows a user to establish a 5 party conference (own station and four other parties) with a single key press. Up to 100 stations can be assigned to have the group conference feature and each station can have 5 conferences pre-programmed.

## COMPUTER TELEPHONY INTEGRATION (CTI)

Computer Telephone Integration (CTI) allows integration between the iDCS 500 Release 2 and a personal computer (PC) on a local area network (LAN). Caller ID service is required for TAPI inbound call applications that use the CID information to display computer records in conjunction with the presentation of the call to the station on the iDCS 500 Release 2.

### SmartCentre

Smart Centre is an ACD type reporting package that connects to the iDCS 500 Release 2 CTI link and can provide group status information to a reader board as well as providing a wide variety of printed reports showing current and historical data.

### Smart Operator

Smart Operator is a software application that connects to the iDCS 500 Release 2 CTI link and provides a PC based attendant console adjunct. This application works in conjunction with the operators keyset to give improved visibility of station status within the system and to make directory searching easier. The Smart Operator application is included with every L version system.

### TAPI 2.1

TAPI 2.1 is the method of integrating the iDCS 500 Release 2 system to a computer. TAPI 2.1 is a LAN based solution allowing computers to communicate directly to the telephone system over the computer network. This establishes a logical connection rather than a physical connection between telephone and computer. It eliminates the cost and administrative overhead of connecting every PC to a desktop phone. It emphasizes third-party call control. (Example: calls can be tracked as they are transferred, making it more suited to large office applications). TAPI 2.1 can emulate first-party type call control for the iDCS 500 Release 2 system, rather than from the telephone as TAPI 2.0 does. For example, to make a call the iDCS 500 Release 2, rather than the telephone would dial the phone number, and the call would then be connected to the telephone.

## CUSTOMER SET RELOCATION

Customer Set Relocation allows the customer to exchange or swap similar stations in the iDCS 500 Release 2 without wiring changes. All individual station assignments such as trunk ring, station group, station COS, station speed dial, button appearances, call forwarding, etc. will follow the Customer Set Relocation program.

## DATA SECURITY

Single line extensions used with modems and facsimile machines can be programmed so that they will not receive any system-generated tones that would disrupt data transmissions. In addition, these devices receive DCS C.O. ringing pattern instead of intercom ring pattern. Devices connected to an SLI card receive a disconnect signal upon termination.

## DATABASE PRINTOUT

A copy of the customer database can be obtained by using PCMMC. This information can be directed to a printer or the PC screen and may be done either on-site or remotely. A complete database or specific data blocks may be obtained.

## DAYLIGHT SAVING TIME-AUTOMATIC

The system has a table that can be programmed with the daylight savings change dates for up to 10 years. At 2:00 am on these dates the system will automatically adjust the system clock to match daylight savings time. If no dates are programmed the clock will not change.

## DIALED NUMBER IDENTIFICATION SERVICE (DNIS)

When DNIS service is provided on an incoming E&M trunk the iDCS 500 Release 2 can route calls based on the numbers received. ([See DID](#))

## DIRECT IN LINES

Outside lines may be programmed to bypass the operator(s) and ring directly at any station or group of stations.

## DIRECT INWARD DIALING (DID) T1/COPPER

The term Direct Inward Dialing refers to types of digit steered inbound call handling. These are DID, Both Way DID, Dialed Number Identification service (DNIS) and Direct Dial In (DDI). The iDCS 500 Release 2 supports the types described below.

DID is an inbound only service where multiple telephone numbers are assigned, usually in blocks of twenty, to a single circuit or small group of circuits. These circuits can be single pair analog circuits that will terminate on a DID card. The iDCS 500 Release 2 DID card supports up to four circuits. In addition the DID circuit can be a channel on a digital T1 service terminating on an iDCS 500 Release 2 TEPRI card.

Both way DID is a service that combines DID service with normal outbound local telephone service. This service is provided over E&M tie line circuits. These E&M tie line circuits can terminate on either the iDCS E&M card or on a channel of a digital T1 circuit on an iDCS TEPRI card.

Dialed Number Identification service (DNIS) is a feature of 800 or 900 type numbers that allows the number dialed by the caller to be identified in the telephone system by means of a sequence of DTMF digits (usually four). This service terminates on E&M tie lines. These E&M tie line circuits can terminate on either the iDCS E&M card or on a channel of a digital T1 circuit on an iDCS TEPRI card.

Direct Dial In (DDI). This is the name given to the above three services when they are provided over an ISDN PRI circuit.

The iDCS 500 R2 has an option to select which MOH source is played to callers to a specific DID number.

## DID CALL LIMITS

This option defines the maximum number of simultaneous calls that the system will accept for each DID number. Any call attempts after the Maximum Call (MC) count has been reached will be rejected and busy tone returned.

## DIRECT INWARD SYSTEM ACCESS (DISA)

Users can call in on specific DISA lines at any time, input a security code and receive system dial tone. Users can now place internal calls or if permitted, calls using C.O. lines. The caller must have a tone dial phone and know his/her DISA security code if DISA security codes/passcodes are turned on. DISA lines can be used as both way lines or incoming only and may be allowed or disallowed for any of the 6 ring plan time periods. The C.O. lines used for DISA must have disconnect supervision. The requirement to put in a DISA security code can be disabled if desired.

## DIRECT TRUNK SELECTION

Each station can be allowed access to or denied access from a trunk or trunk group by access code when LCR is activated. When restricted, the station user must use a trunk key or a route key.

## DIRECTORY NAMES

Each station, station group and C.O. line may be assigned a directory name (maximum 11 characters). In addition, each personal speed dial number, system speed dial number and entry in the DID translation table may be assigned a name (maximum 11 characters). These names are displayed during calls with these ports and in the case of station and speed dial names, can be used to originate calls. [See the Dial by Name feature \(Station Features\).](#)

## DISA SECURITY

Telephone fraud and long distance theft are a serious concern. The iDCS 500 Release 2 provides a strong DISA security system. If an incorrect DISA passcode is entered repeatedly (as is the case with “hackers”), the DISA system can be automatically disabled temporarily. Both the number of incorrect passcode attempts and the time that DISA is disabled are programmable. In addition, all failed attempts to access DISA print on SMDR (if provided) with a “DE” DISA error flag.

## DISTINCTIVE RINGING

A user knows the type of call received by the type of ring heard. Outside calls have a single ring repeated while internal calls have a double ring repeated.

In addition any trunk or station can be programmed to ring a keyset with a predefined ring tone (1–8) or a single line port with a predefined cadence (1–5) selection. This provides for easy identification of special lines or extensions that ring your phone.

## DOOR LOCK RELEASE (PROGRAMMABLE)

After answering a call from the door phone, users can dial a code to activate a contact closure. This can be used to operate a customer-provided electric door lock release mechanism. The contact closure timer is programmable from 100–2500 ms.

## DOOR PHONES

The door phone interface module (DPIM) provides for connection of a door phone to a DLI port. Pressing the button on the door phone produces a distinctive ring (three short rings repeated) at the assigned station or station group. If not answered within a programmable time, the system releases the door phone and stops the ringing. Stations may call the door phone directly and monitor the surrounding areas. Door phones follow the system ring mode plan.

## E & M TIE LINES (T1/COPPER)

Your office can be connected to another office with a tie line. Use it to make calls to stations in the other system. If programming allows, you can access lines in the other system to make outside calls. Tie line calls can be put on hold, transferred and conferenced in the same way as are other outside calls. Users accessing the tie line from the other system can get a line in your system and make outgoing calls. These calls can be controlled by assigning a dialing class to the tie line. Your local telephone company may use E&M tie lines to provide DID service. In this case these tie lines can be programmed to follow the DID translation table. [See DID.](#) Translated E & M tie line calls have Ring Plan routing capabilities.

## EXECUTIVE BARGE-IN (OVERRIDE)

The feature allows specially programmed stations with a barge-in key to override the automatic privacy of another station or outside trunk. Programming allows barge-in with or without a warning tone. Stations may also be programmed as “secure” so that they cannot be barged-in on.

## **With Warning Tone**

When the barge-in with tone option is set, the barging-in keyset has its microphone on and the barged-in on station receives an override display. A double burst of warning tone sounds and repeats every ten seconds. This feature does not work from single line sets.

## **Without Warning Tone**

When the barge-in without tone option is set, the barging-in keyset has its microphone muted and the barged-in on station does not receive an override display. This feature does not work from single line sets.

## **Trunk Monitor or Service Observing**

This feature allows the user who barged-in to retain the trunk call after the original station has hung up.

**WARNING:** BARGE-IN WITHOUT TONE MAY VIOLATE STATE OR FEDERAL LAWS CONCERNING THE RIGHT TO PRIVACY. SAMSUNG TELECOMMUNICATIONS AMERICA IS IN NO WAY RESPONSIBLE FOR THE POSSIBLE MIS-USE OF THIS FEATURE.

## **EXTERNAL MUSIC INTERFACES**

The iDCS 500 Release 2 MISC card provides two inputs for connecting to customer provided external music sources. Each cabinet of the iDCS 500 Release 2 can support one MISC card for a total of three cards or six sources in a maximum sized system. These sources can be used to provide background music, or any of the varied Music On Hold (MOH) uses.

## **EXTERNAL PAGE INTERFACES**

The iDCS 500 Release 2 MISC module provides one external page output and two zone control relays. Resources from added miscellaneous applications modules (MISC) can be combined to provide four external zones. Multiple relays may be assigned to each zone.

## **FLASH KEY OPERATION**

While a user is on an outside line, pressing the FLASH key will send a timed disconnect signal to the central office or PBX. This is used for custom calling features on C.O. lines or in conjunction with CENTREX/PBX operation. System programming allows individual flash times for C.O. and PBX lines. When C.O. or PBX flash is not required, setting the timers for two seconds releases the existing call and returns dial tone to make a new call.

## **FLEXIBLE NUMBERING**

System programming allows stations to have two, three or four digit extension numbers beginning with the digit 2 or 3. Three digit default extension numbers begin with 201 and four digit defaults begin with 2001. Station group numbers can be three or four digits beginning with the digit 5.

Using digits other than 2, 3 or 5 will require the technician to change other default feature access codes in the system default numbering plan. User guides will need to be modified as these are all written using the iDCS 500 Release 2 default numbering plan.

## **GROUND START TRUNKS (T1/COPPER)**

The iDCS 500 Release 2 can utilize these trunks to support a positive disconnect signal and prevent call collisions on heavy traffic usage. Caller ID or ANI service is not available on these trunks.

## GROUP BUSY SETTING

This feature provides a busy signal to intercom callers that ring to a station group when all logged-in stations are busy. The feature is activated in MMC 601 and when set to ON setting, allows an intercom caller to hear a busy signal when calling a station group. Upon hearing a busy the intercom caller will know that all stations are busy and can call back. When this option is set to OFF position the intercom caller will hear ring-back tone when all stations are busy and the call will queue for the next available station. Turning this option ON will override the Overflow setting when the group is busy. The default setting is OFF.

## HOT LINE

Stations can be programmed to call a pre-defined station or station group whenever that station goes off-hook. A hot line delay timer of 0–250 seconds can be programmed to allow sufficient time to make a different call. This timer is programmable on a per station basis.

## IN GROUP/OUT OF GROUP

Individuals assigned to a station hunt group may temporarily remove their telephones from the group by pressing the In/Out of Group button providing that there is someone still in the group. There is a system wide option to allow all members to log out of a station group. Stations out of a group will not receive calls to that group but will continue to receive calls to their individual extension numbers. When desired, the user may put him/herself back into the group by pressing the button again. Users who do not have this button may dial the access code and the group desired. A station user is allowed to be in several groups, providing a key and the extender of that group are assigned for each group on the user's phone.

## INCOMING CALL DISTRIBUTION

Incoming calls can be assigned to ring a distributed station hunt group. This allows all members of the group to share the call load.

## INCOMING/OUTGOING SERVICE

Outside lines are available for incoming or outgoing service. Programming allows any outside line to be used for incoming calls only, outgoing calls only or both way service.

## INDIVIDUAL LINE CONTROL

Each station in the system can be individually programmed to allow or deny dialing out as well as allow or deny answering for each outside line.

## INTEGRATED VOICE MAIL

The iDCS 500 Release 2 can be equipped with Samsung's proprietary voice mail/auto attendant card. This card provides 4 to 8 ports of voice processing. Because it is built into the system it provides such features as one touch call record, answering machine emulation, and voice mail box administration with interactive key-set displays.

## IP KEYSETS

The iDCS 500 Release 2 system allows the use of Samsung proprietary keysets that use Internet Protocols (IP) for voice and data transport. The M version of the system can support up to 120 IP stations and the L version can support up to 240 IP stations. [For more information on how to setup the IP keysets please refer to the VOIP Special Applications Section of the Technical Manual.](#)

## ISDN CALL PROGRESS MONITOR

This feature option is to allow customers using Central Office based Account Codes to place calls over PRI. When activated, calls over a PRI circuit will be capable of in-band signaling prior to the call being answered. The option is in MMC 210. Under normal PRI progress control in-band signaling is provided after the call is answered. This normal condition is set ON by default. To activate the feature and provide in-band signaling prior to answer the setting should be changed to OFF.

## ISDN SERVICE

### Primary Rate Interface (PRI)

The iDCS 500 Release 2 supports Primary Rate Interface ISDN. PRI allows simultaneous data calls, calling party and calling line identification, high speed call setup and disconnect are among the benefits of ISDN calling. The 23+D configuration of ISDN allows call information to be delivered via the data channel (the "D" of 23B+D) thus leaving the bearer channels (the "B" of 23B+D) available for single use or combined use to provide a wider bandwidth for data and video. The iDCS 500 Release 2 supports the most popular protocol standards in the U.S.

PRI Protocols supported:      National ISDN-2 (NI2)  
   AT&T No. 5 ESS  
   DMS 100/250

### Basic Rate Interface (BRI)

The iDCS 500 Release 2 BRI card supports trunk or station level Basic Rate Interface services (BRI). Trunk or station BRI use is software programmable. BRI allows simultaneous data calls, called party and calling number identification, high speed call setup and disconnect are among the benefits of ISDN calling. The 2B+D configuration of ISDN allows call information to be delivered via the data channel (the "D" of 2B+D) thus leaving the bearer channels (the "B" of 2B+D) available for single use or combined use to provide a wider bandwidth for data and video.

## LAN INTERFACE

The iDCS 500 Release 2 MCP2 card provides a 10/100 base T Ethernet interface for connection to a data network. This interface allows a high speed connection for PC programming across an IP network. This interface also allows the system software to be uploaded to the SmartMedia card via the PCMMC program.

## LEAST COST ROUTING

Least Cost Routing (LCR) is the ability to automatically select the most cost effective central office route for the outside number dialed by any station. The iDCS 500 Release 2 LCR program includes the following features:

- Option to use or not use LCR on a tenant basis
- Programmable LCR access code
- Digit analysis table of 2000 entries each with ten digits
- Routing by time of day and day of week (4 time bands per day)
- Modify digits table of 200 entries
- Flexible trunk group advance timer
- Option to use or not use trunk group advance warning tones

## **LIVE SYSTEM PROGRAMMING**

The system can be programmed from any display keyset or personal computer without interrupting normal system operation. There are 3 levels of programming: technician, customer and station. The technician level has access to all programs and can allow the customer access to system programs as needed. Technician and customer access are controlled by different security passcodes. Programming from a PC requires the PCMMC program. The system can also be programmed remotely via an optional modem card or over the internet via the LAN card.

## **MEET ME PAGE AND ANSWER**

After a user makes a Meet Me Page, the user may remain off-hook to allow the paged party to meet the user for a private conversation.

## **MEMORY PROTECTION**

In the event that power is lost to the system, all customer data contained in memory is retained by the use of a "super capacitor" for approximately 7 days. Additionally, the Smart Media card may be used to store the system database. The PCMMC computer program may be used to produce a backup copy of the customer data.

## **MESSAGE WAITING INDICATIONS**

When calling a station and receiving a busy signal or the no answer condition, the caller can leave an indication that a message is waiting. The message button will flash red at the messaged keyset. A single line phone connected to a 16MWSLI or 8MWSLI will have a message light otherwise it will receive a distinctive message waiting dial tone. Five message waiting indications can be left at any station.

## **MESSAGE WAITING KEY**

The Message Waiting (MW) key is used in conjunction with a voicemail card. The MW key is programmed with an extender matching a station or station group number and is used to access the voice mailbox associated with the extender.

## **MICROPHONE ON/OFF PER STATION**

The microphone can be disabled at any keyset. When the microphone is disabled, the keyset cannot use the speakerphone, although on-hook dialing and group listening are still possible.

## **MULTIPLE LANGUAGE SUPPORT**

The iDCS 500 Release 2 can be programmed to support multiple languages in the display. This is on a per-keyset option and when set the keyset will have its display information presented in the programmed language. The languages are defined in MMC 121. The current languages are as follows: English, Spanish, Italian, German, Portuguese, Norwegian, Danish, Dutch, Swedish, US Spanish, and Canadian French.

## **MUSIC ON HOLD—FLEXIBLE**

The iDCS 500 Release 2 allows its music sources to be used in flexible manner as follows:

Each keyset can have a designated music source for playing as Background Music (BGM) through the keyset speaker.

Each Station can have a designated music source for playing to callers placed on Exclusive hold at that station.

Each Trunk can have a designated music source for playing to callers placed on hold. This setting is overridden by some of the other settings such as station music on hold, DID MOH and UCD MOH.

Each UCD group can have a designated music source to be played while a caller is in queue.

Each entry in the DID translation table can have a designated music source to be played when a caller to that DID number is placed on hold.

## MUSIC ON HOLD – SOURCES

The iDCS 500 Release 2 provides for up to six different types of Music on Hold source including silence or “NONE” as listed below:

- None: No audio is played to the listener
- Tone: A tone or “beep” is repeated at a programmable interval
- Chime: A music chime source (Old Folks At Home) located on the MCP2 card is played to the listener.
- External Source: An external source connected to a MISC card, such as a digital announcer or radio, is played to the listener.
- Digital Announcement on AA card: If the system is equipped with an AA card the last port of this card can be flagged as a MOH source and used to repeatedly play a message recorded on the AA card to the listener.
- Voicemail Sound File: If the iDCS 500 R2 system has an optional CADENCE card installed, up to 100 custom recorded sound files from the Voice Mail card can be used for MOH sources. For more information on creating the sound files see SVMi System Administrator Manual-Recording Greeting by Number. If you select this option be advised that each VMMOH source requires a dedicated CADENCE port/channel.

## NETWORKING

The iDCS 500 Release 2 networking feature package allows up to 4 iDCS 500 Release 2 systems to be connected together with some basic feature transparency. The physical connection between the systems is via an IP network or a proprietary PRI connection and is based on the Q-SIG specification. The following features are supported between two networked systems.

- Auto Answer Across Network: This setting will allow station to station calls across the network to follow the auto answer setting of the called keyset.
- Call Completion, Busy Station (CCBS) also known as Callback or Busy Station Callback. When a station in one system calls a station in another system across the network link and the destination station is busy the calling station can set a Callback to the busy station. When the busy station becomes idle the system will notify the callback originating station by ringing that station and when the originating station answers, the system will call the destination station.

Note: This feature will ONLY work between a station in the main system and a station in a remote and vice versa. This feature will not work between two remote systems.

- Call Completion, No Response (CCNR) also known as Callback or No Answer Callback. When a station in one system calls a station in another system across the network link and the destination station does not answer the calling station can set a Callback to the called station. When that station indicates the user is present by becoming busy then idle the system will notify the callback originating station by ringing that station and when the originating station answers, the system will call the destination station.

Note: This feature will ONLY work between a station in the main system and a station in a remote and vice versa. This feature will not work between two remote systems.

- Forward External: This feature operates in the same manner as a non networked system with the exception that, because calls across a network link are trunk calls, network calls do not follow the ICM FWD EXT ON/OFF setting in MMC 210. It is therefore suggested that this setting be set to ON in a networked switch to avoid confusion in operation between networked and non networked calls.
- Call Intrusion (Barge In): Call across the network link can be barged in on however the barging station will not be muted.
- Call Offer/Call Waiting (Camp On): This feature operates in the same manner as in a non networked switch. When a called station is busy the caller can press a camp on key and appear as a ringing call on the second call button. The Auto camp on feature will not work on calls across a network link if set to ON in MMC 110.
- Call Transfer: Calls answered in one network node can be transferred to a station or station group in another network node.
- Transfer Retrieve: Calls on Transfer Hold during a screened transfer can be retrieved by pressing the call button for that call.
- Transfer Recall: Calls transferred across a network link will recall to the transferring station after the originating systems transfer recall timer expires. After recalling, if not answered prior to that systems attendant recall timer expiring, the call will recall to that systems designated operator group. Attendant recalls will not recall to a 'Centralized Attendant'.
- DID with Pass Through: Incoming DID, DNIS or DDI calls can be routed through one switch across a network link to be processed by the DID table of the destination switch.
- Do Not Disturb (DND): This feature operates in the same manner as in a non networked switch.
- Caller ID: Caller ID in its various forms that are currently available (Analog CID Name and Number, ANI Number, PRI Name and Number and BRI number) will be transported across the network link with the original call.
- Centralized Attendant: This feature basically allows a user in any switch to dial "0" and ring at the designated Central attendant group. Each system on the network requires its own designated attendant group for local usage, recalls and the like.
- Intercom Calling/Uniform dialing plan: Station to station and station to group calls can be made across the network link without having to dial an access code for a call within the network. LCR can also be programmed to route calls across a network link to access local trunks in another networked system.
- Centralized Voice Mail with Message Waiting Lights: This feature will only operate with SVMi voicemail systems only. Users in one node can call forward to the SVMi group in a different switch and messages left in that switch will be indicated on the VMSG key in the origination switch. Messages can be returned to the SVMi by pressing the VMSG key.

## OFF PREMISES EXTENSIONS (OPX)

A single line (tip and ring) extension from an 4SLI card may be connected to telephone company-provided OPX circuits to remote locations. Other SLI cards such as 8SLI and KDb-SLIs do not support off premises extensions as they do not have over voltage protection.

## OPERATOR GROUP

The operator group can contain 32 stations to answer incoming calls. Calls to this group can be set for distributed, sequential or unconditional ringing. Operators can use the In/Out of Group feature to meet flexible operator requirements. Operator groups are selectable per ring plan.

## **OVERFLOW**

### **Operator**

When calls ringing a operator group go unanswered, they can overflow to another destination after a programmed period of time. The operator group has its own timer. The overflow destination can be a station or station group.

### **Station Group**

When calls ringing a station group go unanswered, they can overflow to another destination after a programmed period of time. Each station group has its own timer. The overflow destination can be a station or station group located in that system.

## **OVERRIDE CODE**

This feature allows users to make emergency outside calls from a station that has a forced code such as Account code or authorization code enabled but without requiring them to enter a forced code. The basis of this feature is an override code table containing 8 entries of up to 11 digits each. The iDCS 500 Release 2 will examine digits that are dialed from a station to see if they match any entry in the Override Code table. If the digits match the table, the system will process the call without requiring a forced code.

## **PAGING**

System software allows the use of five internal and four external paging zones. Stations can page any individual zone, all external zones or all external zones plus internal zone zero simultaneously. Using system programming, each station may be allowed or denied the abilities to make and/or receive page announcements to any zone or combination of zones.

## **PARK ORBITS**

The system has 10 park orbits (0–9). These orbits can be used to park calls prior to paging and allows the call to be retrieved by dialing a park code plus the orbit number. Calls parked in this manner can also be retrieved by dialing the park pickup code (10) plus the station or trunk number. This feature is in addition to Call Park and Page.

## **PRIME LINE SELECTION**

Any station can be programmed to select a specific line, trunk group, telephone number, station or station group when the handset is lifted or the speaker key is pressed (same as Hot Line feature).

## **PRIVATE LINES**

For private line use, stations can be prevented from dialing and/or answering any line.

## **PROGRAMMABLE LINE PRIVACY**

Each outside line can be programmed to ignore the automatic line privacy. This allows up to four other parties to join your conversation by pressing the line button. This is similar to 1A2 key telephone operation.

## **PROGRAMMABLE TIMERS**

There are over 50 programmable system timers to allow each installation to be customized to best fit the end user's application.

## RECALLS

Calls put on hold, transferred or camped-on to any station will recall to the originating station if not answered within a programmable time. A recall that goes unanswered for the duration of the attendant recall timer will recall to the system operator group. Hold, transfer, camp-on and attendant recalls have individual programmable timers. Calls recalling to buttons with tri-colored LEDs will flash amber.

## RECALL TO OPERATOR

This function will allow the call to recall the operator instead of to the transferring station after the transfer recall time expires.

## REDIAL REVIEW

The Redial Review feature allows a review of the last number before dialing or allows access to the Call Log Blocks if assigned. These Call Log Blocks record the last ten (10) numbers dialed. When the LNR key is pressed the last number dialed is displayed. The log can then be scrolled using the Volume (Up/Down) keys and a previously dialed number can be selected.

## REMOTE PROGRAMMING—PC

Remote programming allows the technician to access the system database from a remote location for the purpose of making changes to the customer data. The modem daughterboard installed on the IOM board and a PC using an optional software package will be needed to implement this feature.

## RING MODES

### Time Based Routing - Plans

Each C.O. line can be programmed to ring at any station or station group. Each line can be assigned a ring destination based on six (6) different ring plans based on time of day and the day of the week. The system operator (intercom dial "0") can also be a different station group for each ring mode.

### Automatic / Manual

Ring destinations will automatically change based on time of day and day of week. At any time the system can be manually forced into a specific ring plan. It will remain in this ring plan until manually taken out.

### Holiday Schedule

The system has a table of 20 dates that are used to define holidays. On a date designed as a holiday the system will remain in a ring plan for that calendar day providing the system was already in that ring plan. This feature will override the ring plan time table.

### Temporary Override

At any time the system can be forced into a specific ring plan for a temporary period of time until the next scheduled ring plan automatically takes effect.

## RING OVER PAGE

Any outside line can be programmed to ring over a customer-provided paging system. Outside lines, door phones and station groups may ring over page in the day or night mode.

## SECRETARY POOLING

Each keyset may be defined as an executive (BOSS in programming) or a secretary (SECY in programming) in system programming. Each executive can have up to four secretaries and each secretary can have up to four executives. These arrangements are known as executive/secretary pools. There can be multiple pools in a system. When an executive is in DND, all calls to the executive ring the first secretary assigned to that executive; if that secretary is busy, the call will hunt to the next available secretary assigned to that executive. If the secretary must communicate with the executive while he/she is in DND, pressing the corresponding executive button on the secretary's keyset results in an Auto Answer intercom call being made to the executive (providing the executive is free). There is also a system wide option to allow the stations to ring rather than auto announce the executive secretary calls. A station can only be the executive of one secretary pool. In addition, a station cannot be in more than one pool.

## SINGLE LINE CONNECTIONS

Single line ports allow connection of a variety of single line telephones plus facsimile machines, answering machines, loud bells, computer modems, cordless phones and credit card machines. When connecting customer-provided equipment to these extensions, compatibility should be checked out before purchase to ensure correct operation. Central office ring cadence can be selected for SLT stations. This is helpful when optional devices cannot detect iDCS 500 Release 2 intercom ring cadence.

## SPEED DIAL NUMBERS

The system maintains a library of speed dial numbers that can be allocated to either a shared system wide list or to an individual user list. The M version software has a library of 2000 numbers and the L version software has 2500 numbers.

M version software can have a maximum of 500 numbers in the system list. L version software can be programmed to either 500 or 950 numbers in the system list.

The remaining numbers in the library can be assigned in blocks of 10 each to individual stations for their personal use. A maximum of 5 blocks (50 numbers) can be assigned to a station.

## SPEED DIAL BY DIRECTORY

The iDCS 500 R2 system provides the user with the ability to look up a speed dial number and place the call. There are three speed dial selections: personal, system and station. This feature requires a display keyset.

## STATION HUNT GROUPS

System programming allows up to 40 station hunt groups on an iDCS 500-M system and 80 station hunt groups on an iDCS 500 Release 2-L system. One of three ring patterns—sequential, distributed and unconditional—is available for each group. Each unconditional group may contain a maximum of 32 stations and each sequential and distributed group may contain a maximum of 48 stations. A station may be assigned to more than one group. Each station group has its own recall timer for calls transferred to that group. There is a Next Hunt timer for each group to provide circular hunting within the group.

## STATION MESSAGE DETAIL RECORDING (SMDR)

The system provides records of calls made, received and transferred. Connecting a customer-provided printer or call accounting system will allow collection of these records. Each call record provides the following details: station number, outside line number, start date, start time, duration of call, digits dialed (maximum 18) and an account code if entered. The system may print a header followed by 50 call records per page or send continuous records with no header for use with a call accounting machine. [See the sample printouts.](#)

The SMDR format contains many options that allow it to be customized for a company's individual needs. Options to print include incoming calls, outgoing calls, in and out of group status, change in DND status, authorization codes, and caller ID on incoming calls.

When Caller ID is enabled a wide carriage printer is required.

## STATION PAIR

This feature allows station to be assigned as a "pair". That is to say a primary and secondary. Calling the primary station will make both stations ring. Selected features such as Message Notification, DND, Callback, and Class of Service act as one station. This is convenient when an individual has two offices or an office extension and a cordless extension. NOTE: Not all system features are applicable to station pairs. Features designed for a single user may conflict with paired stations.

## SYSTEM ALARMS

A DISA alarm will warn the customer if the DISA security system has been triggered by too many incorrect password attempts. The alarm can ring any station or group of stations and show an appropriate display at the assigned stations.

## SYSTEM MAINTENANCE ALARMS

The iDCS 500 Release 2 continuously performs internal system diagnostics. When either a major or minor fault is detected the system can ring stations with an ALARM KEY assigned. The keyset display shows information that includes the description, location and date and time stamp for each alarm.

A log of 100 alarms are stored in a buffer and can be reviewed at a display keyset or sent to a printer.

## SYSTEM DIRECTORY

Each station, station group and outside line can have an 11 character directory name. This name will appear on keyset displays to provide additional information about lines and stations.

## TENANT SERVICE (2)

The iDCS 500 Release 2 supports two forms of tenant service as detailed below.

- System Splitting: In the first form there are several programs that allow the iDCS 500 Release 2 to be installed in tenant applications. These features allow a technician to split the system in two with each tenant having individual control over operator groups, page zones, speed dial numbers, night service (manual or automatic), DISA and customer level programming. Each tenant is totally separate in the system and no intercom calling between tenants is permitted.
- Port Splitting: In this form of tenant services system programming is used to allow or deny access for making and receiving calls on a per station basis. These settings can be applied to Trunks, trunk groups, stations and station groups. This allows common items on the system such as the operator group and LCR to be used by everyone on the system while ensuring that each company can only access their own lines and incoming calls.

## TOLL RESTRICTION

There are 500 allow and 500 deny entries of 11 digits each. Each of these entries can apply to dialing classes B, C, D, E, F and G. Expensive 976, 1-900, 411 and operator-assisted calls, as well as specific area and office codes, can be allowed or denied on a per-class basis. Class A stations have no dialing restrictions and Class H stations cannot make outside calls.

Any outside line may be programmed to follow station toll restriction or follow the toll restriction class assigned to it. Each station and trunk can have a different dialing class for each ring plan.

### **Special Code Table**

A Special Code Table of ten entries (four digits each) allows use of telephone company features such as CID blocking (\*67) or call waiting disable (\*70) without interference to toll restriction or LCR. The Special Code table allows use of these custom calling features on a per call basis.

## **TOLL RESTRICTION OVERRIDE**

Program options allow system speed dial numbers to follow or bypass a station's toll restriction class. In addition, users may make calls from a toll restricted station by using the walking class of service or authorization code feature.

## **STONE OR PULSE DIALING**

Outside lines can be programmed for either tone or pulse dialing to meet local telephone company requirements.

## **TRAFFIC REPORTING**

The iDCS 500 Release 2 system can store peg counts for various types of calls. These peg counts can be printed on-demand, daily, hourly, or up to three separate programmable shifts. The report includes statistics for each trunk, trunk group, station, station groups and page announcements. [For more details and explanations see sections 4.9 and 4.10 of this document.](#)

## **TRANSFER**

System operation permits station users to transfer calls to other stations in the system. Transfers can be screened, unscreened or camped-on to a busy station.

## **TRUNK GROUPS**

Outside lines can be grouped for easy access by dialing a code or pressing a button. There are 30 trunk groups available.

## **UNIFORM CALL DISTRIBUTION (UCD)**

UCD is used whenever the user expects to have more ringing calls than people to answer them. It prevents callers from receiving busy signals or lengthy delays before answering. Callers reaching a busy station group are held in queue for an available agent. First and second announcements reassure the caller until an agent becomes free. Programmable automatic logout removes a station from the group if a call is placed to an unattended station, thus preventing unanswered calls. A wrap-up timer prevents calls to a station for a programmable period of time to allow the agent to finish up work associated with the call. NOTE: Requires optional hardware. Ask your dealer for details.

### **UCD Groups**

The UCD group option allows callers in queue at a UCD group to be temporarily diverted to an announcement device and then placed back in the queue. A wrap-up timer will allow agents to complete paperwork before receiving the next UCD call.

## **Call Statistics**

UCD supervisor positions using a display keyset can monitor the number of calls in queue, the time that the oldest caller has been waiting, the total number of calls received for the current day and the average time a caller waits to be answered.

## **Agent Busy / Manual Wrap Up Key**

This is an enhancement to the call center operation that allows a button to be programmed in the flexible field of the keyset that when depressed will remove the keyset from active status within the group. When depressed again it will place the keyset back into active status for receiving calls. This provides a method for agents to extend their wrap-up time manually when necessary. This also allows agents to perform other duties such as receiving or making telephone calls without having to log out of the group or being automatically logged out if away from the phone for a short time.

## **Agent ID Numbers**

This enhancement to the call center operation allows agents to be given a PIN number to use when logging in and out of a UCD group. This allows agents to be able to move from location to location and keep their productivity records. This new option has been added to MMC 607 (requiring PIN number to log in or out) and to MMC 718 (setting PIN numbers). There are a total of 300 PIN numbers available in the system. This feature when used in conjunction with the Smart Centre reporting package will keep agent records by PIN numbers for productivity management.

## **Agent Statistics**

UCD supervisor positions using a display keyset can monitor the number of agents in a group and how many agents are currently logged in. Each station's status can be reviewed for the number of calls answered and the average call length of the current day.

## **Group Supervisors**

Multiple supervisors can be assigned to each group or one station can be given supervisor status for multiple groups. The group supervisor (using a display keyset) can add and delete agents in real time from the group to handle the workload.

## **Printed Reports**

Agent supervisors may run printed reports to a customer-provided printer, showing the data available on the supervisor displays.

## **UNIVERSAL ANSWER**

Station users may dial the Universal Answer code or press the UA key to answer any outside lines programmed to ring the UA device. The UA device can be a station, group of stations, common bell or ring over page.

## **VIRTUAL EXTENSIONS**

The iDCS 500 Release 2 has a number of virtual extension ports encoded in the system database. They can be assigned as keyset or single line analog ports. The M version has 62 and the L version has 118. These ports have all the attributes of an actual station port including call forwarding. These virtual ports can be exchanged with real station ports using the set relocation feature to provide hot desking.

## VOICE MAIL – INBAND INTEGRATION

The iDCS 500 Release 2 system uses DTMF tones (inband signaling) to communicate with any compatible voice mail system. Stations can call forward to a voice mail system. When answered, the system will send DTMF tones routing the caller directly to the called station user's mailbox. Keypad users can press one button to retrieve messages from the voice mail system. A Voice Mail Transfer key permits keypad users to easily transfer a caller directly to an individual voicemail box without navigating through menus.

Note: Although most voice mail systems will work with the iDCS 500 Release 2, the system data has default values set to work with the Starmail Voice Processing System. They may need to be changed if you are using another system.

## VoIP

The iDCS 500 Release 2 Media Gateway Interface (MGI) cards support up to sixteen voice calls per card over an IP network connection using the industry standards based H.323 or SIP protocol. The MGI cards fit into any universal iDCS 500 Release 2 card slot. The iDCS 500 Release 2 supports a maximum of five MGI cards per cabinet.

VoIP is transported by the iDCS 500 Release 2 MGI cards by utilizing the ITU standards based on H.323 or SIP protocol. This standard addresses the means of transferring voice, data, and images through IP (Internet Protocol) networks.

With VoIP certain compression standards have also been adopted to represent each second of voice with an amount of bandwidth. The iDCS 500 Release 2 MGI3 utilizes G.711, G.729A or G.723 standards voice compression codec's while the MGI2 supports G711, G729, and G729A only. This allows for a selectable 64kbps (G711), 8Kbps (G729A) or 6.3Kbps (G723) bandwidth use when preparing voice compression for IP transport. Compression is used to reduce the digitized voice into a smaller bandwidth that can be carried in smaller packets. The VoIP gateway determines the compression method for each call setup. There is also a certain amount of frame/packet overhead in each compression channel. 64K of bandwidth can support 6~7 calls simultaneously. This can vary depending on efficiency features like Silence Suppression and multiframe counts. Unlike switched networks, VoIP connections consist of a sequence of numbered data packets. Since voice conversation is usually considered "real time" these packets need to be delivered in a consistent manner with minimal delay. This can be controlled via a Gatekeeper which tracks and monitors voice packets. Gatekeepers are part of the H.323 standard but are not required. The iDCS 500 Release 2 MGI cards are Gatekeeper compliant.

In any Ethernet environment, packet transfers are subject to delays and/or loss. If these delays are greater than 200ms the voice quality will deteriorate. The Ethernet data traffic and network topology should be a consideration when using VoIP. Network congestion will affect call quality in any VoIP application.

## WALKING CLASS OF SERVICE

This feature allows users to make calls or use features from a station that is restricted. The users may either use the WCOS feature code or the authorization code feature. Both methods change the class of service to correspond with the station passcode or authorization code that is dialed. After the call is completed, the station returns to its programmed class of service.

# STATION FEATURE

[Add-On Module](#)

[Appointment Reminder](#)

[Automatic Hold](#)

[Automatic Privacy](#)

[Background Music](#)

[Busy Station Callback](#)

[Busy Station Indications \(BLF\)](#)

[Call Forwarding](#)

[Call Forwarding Override](#)

[Call Logs](#)

[Call Pickup](#)

[Direct Station Selection \(DSS\)](#)

[Do Not Disturb \(Override\)](#)

[Do Not Disturb \(Programmable\)](#)

[Door Lock Release](#)

[Exclusive Hold](#)

[Group Listening](#)

[Headset Operation](#)

[Hearing Aid Compatible](#)

[Line Queuing with Callback](#)

[Line Skipping](#)

[Loud Ringing Interface](#)

[Manual Signalling](#)

[Message Waiting Light / Indication](#)

[Mute Microphone / Handset](#)

[Off-Hook Ringing](#)

[Off-Hook Voice Announce \(Executive\)](#)

[Off-Hook Voice Announce \(Standard\)](#)

[One Time Do Not Disturb](#)

[One Touch Dialing Keys](#)

[On-Hook Dialing](#)

[Privacy Release](#)

[Programmable Keys](#)

[Programmed Station Messages](#)

[Protection from Barge-In](#)

[Redial](#)

[Remote Hold](#)

[Ring Modes](#)

[Ringing Preference](#)

[Speakerphone](#)

[Station Lock](#)

[Terminal Status Indicator](#)

[Tri-Colored Lights](#)

[Volume Settings](#)

[Wall-Mountable Keysets](#)

## 4.2 STATION FEATURE DESCRIPTIONS

### ADD-ON MODULE

#### iDCS 14 BUTTON AOM

The 14B AOM attaches to the right hand side of an iDCS 18D or iDCS 28D keyset and provides 14 buttons with red LEDs. These buttons can be used for DSS keys, speed dial bins or any key that does not require a dual colored LED. Does not require a separate DLI port. It uses the same DLI port as the keyset is attached to.

#### 32 BUTTON AOM

The DCS 32-button add-on module (AOM) adds to the capability of any keyset. The 32 programmable buttons with red buttons can be used for feature keys, DSS/BLF keys or one touch speed dial buttons. Because this AOM has a microphone and a speaker it can be used to provide executive off hook voice announce or as a stand alone unit whenever a handset and dial pad are not required. Requires one DLI port per 32B AOM.

#### 64 BUTTON MODULE

The 64-button module adds to the capability of any keyset. Up to four 64-button modules can be added to each keyset. The 64 programmable red LED buttons with red LED can be used for feature keys, DSS/BLF keys

†Requires optional hardware and/or software. Ask your dealer for details.

or one touch speed dial buttons. A maximum of 4 can be installed on a iDCS 500 Release 2 system running iDCS 500 Release 2-M version software, or a maximum of 32 can be installed on a iDCS 500 Release 2 system running iDCS 500 Release 2-L version software. Requires one DLI port per 64B module.

## **APPOINTMENT REMINDER**

When programmed for a specific time, a keyset will sound a distinctive ring to remind the user of meetings or appointments. Alarms can be set for “today only” or for every day at the same time. Up to three alarms may be set at each keyset. Display keysets can program a message to be displayed when the alarm rings. Non-display keyset users must have the system administrator program messages for them.

## **AUTOMATIC HOLD**

Station users can enable or disable automatic hold at their keysets. While a user is engaged on an outside (C.O.) call, pressing another trunk key, route key or CALL button automatically puts the call on hold when this feature is enabled. Pressing TRSF, CONFERENCE, PAGE or a DSS key will always automatically place the call on hold. This type of automatic hold is not a user-selectable option. Intercom calls can not be automatically held except when using transfer, conference, or page.

## **AUTOMATIC PRIVACY**

All conversations on outside lines and intercom calls are automatically private. The privacy feature can be turned off on a per-line basis.

## **BACKGROUND MUSIC**

Keyset users may choose to hear music through their keyset speakers when optional external sources are installed. Each user may adjust this level by the use of a volume control program at the selected keyset.

## **BUSY STATION CALLBACK**

When reaching a busy station, callers may request a callback by pressing one button or dialing a code. The system rings the caller back when that station becomes idle (a system-wide maximum of 100 callbacks are allowed at one time including busy station and busy trunk).

## **BUSY STATION INDICATIONS (BLF)**

DSS/BLF keys may be assigned to any keyset or add-on module. These buttons will be off when the station is idle, light red when that station is in use and flash distinctively when that station is in the DND mode. The system can be programmed to allow the DSS keys to be used to pickup calls at other keysets.

## **CALL FORWARDING**

Station users can forward internal and outside calls to other destinations immediately (Forward All), when busy (Forward Busy) or if not answered in a programmable number of seconds (Forward No Answer). These forward destinations can all be different. Once a destination has been programmed, it can be turned on and off with a programmable key. Forward All takes priority over Busy and No Answer conditions.

In addition to the three usual methods of forwarding described above, a fourth option called Follow Me is available. This option allows a station user to set a Forward All condition from his/her station to another station while at the remote station. To display the Follow Me condition, the TRSF/transfer key lights steady red at the station that is forwarded. The TRSF/transfer key also lights if Forward All is set and no key is programmed for Forward All. Keyset users can be given an external call forward button to forward their calls to an external phone number. Each outside line may be programmed to either follow or ignore station call forwarding. A per-station option controls whether internal calls forward to voice mail or not. Single line telephones must have the system administrator program this feature for them.

## CALL FORWARD OVERRIDE

When this option is set to yes for a station then intercom calls from that station will override any call forwarding settings of the called station.

## CALL LOGS

With the call log feature, a display keyset user can review up to 50 of the last incoming calls from the Caller ID review list or up to 50 of the last external telephone numbers that were dialed. The numbers can be viewed, stored and/or dialed using the associated soft keys. LCR must be enabled for dialing and storing numbers from the CID review list. Optional hardware and/or software may be needed for Caller ID.

## CALL PICKUP

With directed call pickup, a user can answer calls ringing at any station by dialing a code plus that extension number. The group pickup feature allows the user to answer any call ringing within a pickup group. Pickup keys may be customized with extenders to allow pickup from a specific station or pickup group. The iDCS 500 Release 2 has 99 programmable pickup groups.

## DIRECT STATION SELECTION (DSS)

Programmable keys can be assigned as DSS keys and associated with extension numbers. Users press these keys to call or transfer calls to the assigned stations.

## DO NOT DISTURB (OVERRIDE)

The DND Override feature allows a keyset with a DND Override key (DNDO) and the appropriate class of service to override the DND setting at a called keyset. This will allow a user to go into DND while waiting for an important call and have that call transferred to them via a screened transfer from a station (for example the users secretary) with a DNDO key.

## DO NOT DISTURB (PROGRAMMABLE)

The Do Not Disturb (DND) feature is used to stop all calls to a station. System programming can allow or deny use of the DND feature for each station. Parties calling a station in DND will receive reorder tone. When in DND mode, calls may be forwarded to another destination. [See Forward DND option.](#) A keyset without a DND button can activate DND via the feature access code. The ANS/RLS key will flash at 112 ipm (rapidly) when DND is set. There is a programmable option to allow a C.O. line to override DND at its ring destination if that destination is a single station.

## DOOR LOCK RELEASE

Stations programmed to receive calls from a door phone can dial a code to activate a contact closure for control of a customer-provided electronic door lock.

## EXCLUSIVE HOLD

Pressing HOLD twice will hold a call exclusively at a station so no other station can pick up that call. Intercom calls are automatically placed on exclusive hold. Exclusive hold for trunk calls can be denied in class of service.

## GROUP LISTENING

This feature allows users to turn on the speaker while using the handset. It allows a group of people to listen to the distant party over the speaker without the microphone turned on.

## **HEADSET OPERATION**

Every keyset can be programmed to allow the use of a headset. In the headset mode, the hookswitch is disabled and the ANS/RLS key is used to answer and release calls. Keyset users may turn headset operation ON/OFF by keyset programming or more easily by pressing the headset ON/OFF key. The headset key lights steady red when the keyset is in headset mode.

## **HEARING AID COMPATIBLE**

All iDCS 500 Release 2 keysets are hearing aid compatible as required by Part 68 of the FCC requirements.

## **LINE QUEUING WITH CALLBACK**

When the desired outside line is busy, the user can press the CALLBACK key or dial the access code to place his/her station in a queue. The user will be called back when the line is available (a maximum of 100 callbacks are allowed system-wide at one time including busy station and busy trunk).

## **LINE SKIPPING**

When the user is talking on an outside line and the automatic hold feature is turned off, he/she may press an idle line key and skip to that line without causing the previous call to go on hold.

## **LOUD RINGING INTERFACE**

The MISC daughter board provides an audible ring tone output. This can be connected to a paging system or single loud speaker to provide loud ring tone for a specific station only. The tone is preset and can not be changed.

## **MANUAL SIGNALLING**

Keysets can signal each other via a programmable key. This allows one station to alert another without establishing a voice conversation. Each press of the key results in a 500 milliseconds of ring tone being set to the intended station. An individual manual signaling key must be programmed for each station to be signaled.

## **MESSAGE WAITING LIGHT/INDICATION**

When calling a station and receiving a busy signal or the no answer condition, the caller can leave an indication that a message is waiting. The message button will flash red at the messaged keyset. A single line phone connected to a 16MWSLI or 8MWSLI will have a message light otherwise it will receive a distinctive message waiting dial tone. Five message waiting indications can be left at any station.

## **MUTE MICROPHONE/HANDSET**

Any keyset user can mute the keyset's handset transmitter by pressing the MUTE key. In addition, keyset users can also mute the keyset microphone while the keyset is in speakerphone mode.

## **OFF-HOOK RINGING**

When a keyset is in use, the system will provide an off-hook ring signal to indicate that another call is waiting. The ring signal is a single ring repeated. The interval is controlled by a system-wide timer. Single line stations will receive a tone burst through the handset receiver instead of a ring.

## **OFF-HOOK VOICE ANNOUNCE (EXECUTIVE)**

A keyset associated with an add-on module may receive an executive off-hook voice announcement while on another call. The called keyset user may reply handsfree without interrupting the call in progress. Only keysets with an off-hook voice announce button (OHVA) can off-hook voice announce to keysets with AOMs.

## **OFF-HOOK VOICE ANNOUNCE (STANDARD)**

Keysets may receive a voice announcement while on another call. The calling station must have an OHVA key. When transferring a call to a busy keyset or while listening to busy signal, the station user can press the OHVA key to make an OHVA call to the busy keyset. If the called keyset is in the DND mode, it cannot receive OHVA calls. The L version of software has an user programmable option that will allow the OHVA to be heard through the speaker rather than in the handset.

## **ONE TIME DO NOT DISTURB**

The Do Not Disturb (One Time) feature is used to stop all calls to a station when the user is on an outside line and does not want to be disturbed for the duration of the call. Upon completion of the call, DND is canceled and the station is returned to normal service. This feature requires a programmed button.

## **ONE TOUCH DIALING KEYS**

Frequently used speed numbers can be assigned to one touch dialing keys for fast accurate dialing.

## **ON-HOOK DIALING**

Any keyset user can originate calls without lifting the handset. When the called party answers, the user may speak into the microphone or lift the handset for more privacy.

## **PRIVACY RELEASE**

This feature will allow another station to join in on your conversation by temporarily releasing privacy on the C.O. line from your keyset.

Requires a Privacy Release key to be programmed on your keyset. A maximum of three (3) other people can join in. This uses one of the conference circuits in the system.

## **PROGRAMMABLE KEYS**

LCD 24B and STD 24B keysets have 24 programmable keys, LCD 12B and Basic 12B keysets have 12, and 7B keysets have 12. The iDCS 28D keyset has 28 programmable keys with tri-colored lights, the iDCS 18D keyset has 18 programmable keys with tri-colored lights, and the iDCS 8D keyset has 8 programmable keys with tri-colored lights. The ITP-5021-D has 21 programmable keys with tri-colored lights and the ITP5012-L has 99 programmable keys.

Each key can be programmed for more than 25 different uses to personalize each phone. Examples of keys include individual outside line, individual station, group of lines, group of stations and one touch speed dial buttons. Using these keys eliminates dialing access codes.

The following feature keys have extenders that make them more specific: SPEED DIAL, SUPERVISOR, PAGE, DSS, DIRECTED PICKUP, GROUP PICKUP, DOOR PHONE, BOSS, PROGRAMMED MESSAGE, IN AND OUT OF GROUP, FORWARD and VOICE MAIL TRANSFER. The extender can be a station, a group or another identifying number.

## **PROGRAMMED STATION MESSAGES**

Any station may select one of 20 or 30 messages to be displayed at a calling party's keyset (20 for iDCS 500 Release 2-M version software and 30 for iDCS 500 Release 2-L version software). Ten messages are factory-programmed but may be reprogrammed. On iDCS 500 Release 2-L version software two can be individually customized, i.e., RETURN ON: MAR/22 and RETURN AT 3:30p the remaining messages can be customized by the system administrator (16 characters maximum). NOTE: The calling party must have a display keyset to view these messages.

## PROTECTION FROM BARGE-IN

Each station can be programmed as secure or not secure. Secure stations cannot be barged-in on. A station that is not secure cannot be barged-in on when talking to a secure station.

## REDIAL

There are three types of external redial available to all station users. Each type can redial up to a maximum of 18 digits.

- **AUTO RETRY**—When an outside number is dialed and a busy signal is received, the auto retry feature can be used to reserve the outside line and automatically redial the number for a programmable number of attempts (available to keyset users only).
- **LAST NUMBER**—The most recently dialed number on a C.O. line is saved and may be redialed by pressing the redial key or dialing the LNR access code.
- **MANUAL RETRY with LNR**—When you make an outside call and receive a busy signal you can press the LNR key to redial the same number again. This operation can be manually repeated for a limited number of attempts as defined by system programming (available to keyset users only).
- **MEMO REDIAL**—When you are calling directory assistance you can store the number you are given using the dial pad and SAVE number feature. There is no need for a pencil and paper (available to keyset users only).
- **SAVE NUMBER**—Any number dialed on a C.O. line may be saved for redial at a later time.

## REMOTE HOLD

When you wish to place a call on hold at another station, press TRSF and dial the station number (or press the appropriate DSS key). Press the HOLD key. This will place the call on system hold on an available CALL button or Line Key at the remote station.

## RING MODES

Each keyset user can select one of three distinct ways to receive intercom calls. The phone can automatically answer on the speakerphone, voice announce through the speaker or receive ringing. When the ring mode is selected, keyset users can choose one of eight distinct ring tones. Forced Auto Answer is invoked by the calling station and is controlled by the calling station's class of service.

## RINGING PREFERENCE

Lifting the handset or pressing the speaker button automatically answers a call ringing at the keyset. Using this method, users are assured of answering the oldest call first. When ringing preference is turned off, the user must press the flashing button to answer. Users may answer ringing lines in any order by pressing the flashing button.

## SPEAKERPHONE

DCS LCD 24B and DCS LCD 12B keysets have built-in speakerphone. The speakerphone enables calls to be made and received without the use of the handset. The iDCS 28D keyset and the iDCS 18D keyset can have a Full Duplex Speakerphone Module added. All ITP phones are speaker phones.

## STATION LOCK

With a programmable personal station passcode, any keyset or single line station can be locked and unlocked to control use of each telephone. There are two lock options: 1=LOCKED OUTGOING and 2=LOCKED ALL CALLS. See the following table for more details.

## TERMINAL STATUS INDICATOR

iDCS keysets are equipped with a terminal status indicator lamp. The terminal status indicator light is positioned on the top right corner of the keyset above the display. The terminal status indicator is a tri-colored (red, green, and amber) light that provides greater visibility of your keysets status than the individual key LEDs. The terminal status indicator provides the following indications:

	0 UNLOCKED	1 LOCKED OUTGOING	2 LOCKED ALL CALLS
Make Outside Calls	YES	NO	NO
Receive Outside Calls	YES	YES	NO
Make Intercom Calls	YES	YES	NO
Receive Intercom Calls	YES	YES	NO

- Busy/Off Hook      Steady Red
- Intercom Ring      Flashing Red
- Outside Call Ring      Flashing Green
- Recall Ring      Flashing Amber
- Message Waiting      Flashing Red
- Do Not Disturb      Fast Flash Red at 1 Second Intervals

## TRI-COLORED LIGHTS

DCS LCD 24B keysets have 16 keys equipped for tri-colored LED indications (green, red and amber). The DCS LCD 12B model has six of these keys and the DCS 7 button keysets have three. All programmable keys on the iDCS keysets have tri-colored LEDs. To avoid confusion, your calls always light green, other calls show red and recalls light amber.

## VOLUME SETTINGS

Each keyset user may separately adjust the volume of the ringer, speaker, handset receiver, background music, page announcement and off-hook ring tone.

## WALL-MOUNTABLE KEYSETS

Each keyset, add on module and 64 button module can be wall mounted by reversing the base wedge.

# DISPLAY FEATURES

[Account Code Display](#)

[Call Duration Timer](#)

[Call for Group Identification](#)

[Call Processing Information](#)

[Caller ID Information](#)

[Calling Party Name](#)

[Calling Party Number](#)

[Conference Information](#)

[Date and Time Display](#)

[Dialed by Name](#)

[Dialed Number](#)

[Enhanced Station Programming](#)

[Identification of Recalls](#)

[Identification of Transfers](#)

[Message Waiting Caller Number](#)

[Outside Line Identification](#)

[Override Identification](#)

[Programmed Message Display](#)

[Soft Keys](#)

[Stopwatch Timer](#)

[Text Messaging](#)

[UCD Supervisor Displays](#)

## 4.3 DISPLAY FEATURE DESCRIPTIONS

### ACCOUNT CODE DISPLAY

Account codes are conveniently displayed for easy confirmation. If entered incorrectly, users may press the ACCOUNT key again and reenter the account code.

### CALL DURATION TIMER

The system can automatically time outside calls and show the duration in minutes and seconds. Station users may manually time calls by pressing the TIMER button.

### CALL FOR GROUP IDENTIFICATION

When a call is made to a station group, the display shows [CALL FOR GROUP] and the user's group number. These calls can be answered with a different greeting than calls to the user's extension number.

### CALL PROCESSING INFORMATION

During everyday call handling, the keyset display will provide information that is helpful and in some cases invaluable. Displays such as [CALL FROM 203], [TRANSFER TO 202], [701: RINGING], [TRANSFER FM 203], [708 busy], [Camp on to 204], [Recall from 204], [Call for 501], [message from 204] and [FWD ALL to 204] keep users informed of what is happening and where they are. In some conditions, the user is prompted to take action and in other cases the user receives directory information.

### CALLER ID INFORMATION

Caller ID information is dependent on the use of display keysets. The following list explains the displays that are used with Caller ID.

#### **Name / Number Display**

Each display keyset user can decide if he/she wants to see the Caller ID name or Caller ID number in the display. Regardless of which one is selected to be seen first, the NND key is pressed to view the other piece of CID information.

## **Next Call**

In the event that there is a call waiting or a camped-on call at the user's keyset, the user can press the NEXT key to display the Caller ID information associated with the next call in queue at the station. Either the CID name or CID number will show in the display depending on the N/N (MMC 119) selection.

## **Save CID/ANI Number**

At any time during an incoming call that provides CID information, the user may press the SAVE key. This saves the CID number in the Save Number feature. Pressing the SAVE number redial key will dial the CID number. The system must be using LCR to dial the saved number.

## **Store CID/ANI Number**

At any time during an incoming call that provides CID information, the user may press the STORE key. This saves the CID number as a speed dial number in the personal speed dial list. The system must be using LCR to dial the stored number.

## **Inquire Park/Hold**

When a user is informed that an incoming call is on hold or has been parked, the user may view the Caller ID or ANI information before he/she retrieves the call. This will influence how the user chooses to handle the call.

## **CID/ANI Review List**

This feature allows display keyset users to review CID information for calls sent to their stations. This list can be from ten to fifty calls in a first in, first out basis. The list includes calls that were answered and calls that rang the user's station but that were not answered. When reviewing this list, the user can press one button to dial the person back. The system must be using LCR to dial the stored number.

## **Investigate**

This feature allows selected stations with a special class of service to investigate any call in progress. If CID/ANI information is available for an incoming call, the selected stations can know to whom the iDCS 500 Release 2 user is speaking. On outgoing calls, the selected stations can see who was called. After investigating, the selected stations may barge-in on the conversation, disconnect the call or hang up.

## **Abandon Call List**

The system has a system-wide abandon call list that stores CID/ANI information for calls that rang but were not answered. The list is accessed using the operator's passcode. When reviewing this list, you are provided options to CLEAR the entry or DIAL the number. You can use the NND key to toggle between the CID name, CID or ANI number and the date and time the call came in. The system must be using LCR to dial numbers from the abandon call list. The abandoned call list will store up to 100 unanswered calls.

## **CALLING PARTY NAME**

For intercom calls, display keysets show the calling party's name before answering. The names must be stored in the system directory list and can be up to 11 characters long.

## **CALLING PARTY NUMBER**

When an intercom call is received, all display stations show the calling party's extension number before the call is answered.

## **CONFERENCE INFORMATION**

When a conference is set up, each extension and outside line number is displayed at the controlling station when it is added. When a station is added, its display shows [Conf with xxx] alerting the user that other parties are on the line.

## **DATE AND TIME DISPLAY**

In the idle condition, the current date and time are conveniently displayed. Display keysets can have a 12 or 24 hour clock in either the ORIENTAL or WESTERN display format with information shown in upper case or lower case letters.

## **DIAL BY NAME**

Each station and speed dial number can have an associated directory name. Any station or speed dial number can be selected by scrolling alphabetically through a directory list. There are three directories:

1. System wide speed dial list
2. Personal speed dial list
3. Station directory list

This online “phone book” allows display keyset users to look up and dial any speed dial number or station in seconds.

## **DIALED NUMBER**

When an outside call is made, digits are displayed as the user dials them. If the display indicates an incorrect number was dialed, the user can quickly hang up before billing begins.

## **ENHANCED STATION PROGRAMMING**

Personal programming options are easier to select and confirm with the help of the display.

## **IDENTIFICATION OF RECALLS**

Hold recalls and transfer recalls are identified differently than other ringing calls. Hold recalls indicate the recalling line or station number and the associated name. Transfer recalls indicate the recalling line or station and where it is coming from.

## **IDENTIFICATION OF TRANSFERS**

The display will identify who transferred a call to the user.

## **MESSAGE WAITING CALLER NUMBER**

When the message indication is on, pressing the MESSAGE button displays the station number(s) of the person(s) who have messages for the user. Display keyset users can scroll up and down to view message indications.

## **OUTSIDE LINE IDENTIFICATION**

Each line can be identified with an 11 character name. Incoming calls display this name before the call is answered. This feature is helpful when individual lines must be answered with different greetings.

## **OVERRIDE IDENTIFICATION**

If another station barges-in on a user's conversation, the display will alert the user with a [Barge from 2xx] display if the system is set for barge-in with tone.

## **PROGRAMMED MESSAGE DISPLAY**

Preprogrammed station messages set by other stations are displayed at the calling station's keyset.

## **SOFT KEYS**

Below the display, there are three soft keys and a SCROLL button. These keys allow the user to access features in his/her class of service without requiring the keyset to have designated feature keys.

## **STOPWATCH TIMER**

Display keyset users find this feature very convenient to time meetings, calls and other functions. Users simply press once to start the timer and press again to stop the timer.

## **TEXT MESSAGING**

This feature allows two display keyset users to respond to each other with preprogrammed messages. After receiving an Off Hook Voice Announcement or Station Camp-On, you may respond with a text message while continuing to talk and listen to your outside party. The other station can view this message and take the appropriate action or respond back with another text message.

There can be 30 messages stored in the system memory that can be sent to another display keyset. Only the display keysets that are allowed in system programming (MMC 318) will receive the TMSG soft key in the display and can use this feature.

## **UCD SUPERVISOR DISPLAYS**

With the optional AA card, when UCD is used, multiple supervisors can view information about the UCD groups calls or agents.

### **Call Screen**

This allows the supervisor to view how many calls are in queue, the longest wait time, how many calls have been received today, what the average time in queue is and how many calls were abandoned.

### **Agent Screen**

This allows the supervisor to monitor how many agents are logged in, check each agents status (IN GROUP, OUT OF GROUP, or DND), view each agents total number of calls, average call length or average ring time.

Note: Accessing this screen will also allow a Supervisor to change the status of each agent (IN GROUP, OUT OF GROUP, or DND).


# SAMPLE DISPLAYS

Display model keysets have a large, easy-to-read, 32 character liquid crystal display. Helpful call processing information is provided so everyday call handling is quick and easy. Here are just some of the displays you may see.



```
209:Tim Kelly  
FRI 23 Sep 02:54
```

Idle display shows extension, name, day, date and time.

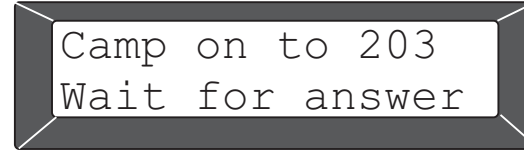

```
Camp on to 203  
Wait for answer
```

This station is camped-on to extension 203 and is waiting for 203 to answer.



```
Call for 501  
202 Mr. Smith
```

This station in the sales department is receiving a group call from Mr. Smith.




```
Call for 501  
706 Local #6
```

This display tells you this is a new incoming call to the sales department.




```
203: Busy  
CBK MSG CAMP →
```

This station is calling station 203 which is currently busy.

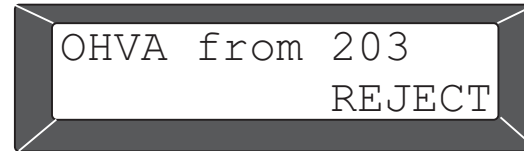


```
OHVA from 203  
REJECT
```

This station is receiving an off-hook voice announcement from station 203.

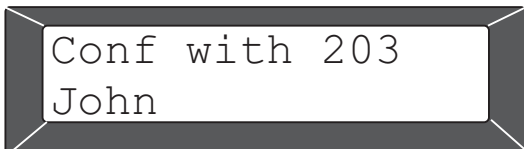

```
Conf with 203  
John
```

This station is on a conference call with John, extension 203. Assume other parties will hear your conversation.

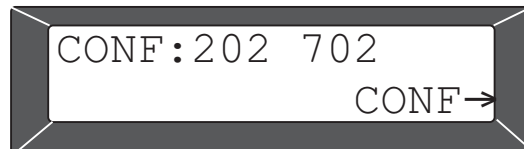


```
CONF:202 702  
CONF→
```

This station is on a conference call with extension 202 and trunk 702 and has the option to add two more parties.



```
Transfer to 203  
John
```

This station is transferring a call to John at extension 203.

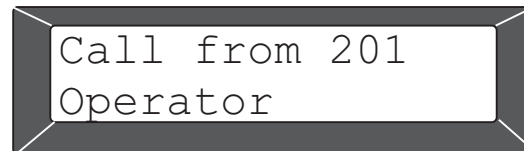

```
Call from 201  
Operator
```

This station is receiving a call from extension 201.



```
DO NOT DISTURB  
ON OFF
```


This station is setting the Do Not Disturb feature.



```
703 Local 3  
CONF PAGE MUTE →
```

This station is speaking on trunk 703.


# SAMPLE CALLER ID DISPLAYS

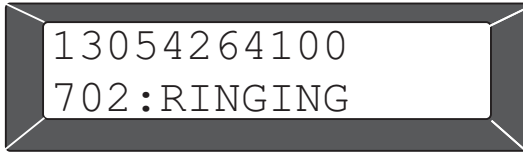

This display shows an incoming call from 1-305-426-4100 on Line 702 ringing directly at your station.



This display shows the information on the abandoned call list. This call came in on May 25 at 9:41 A.M. on line 702. The user can CLEAR the entry, DIAL the caller back or examine further NND information.

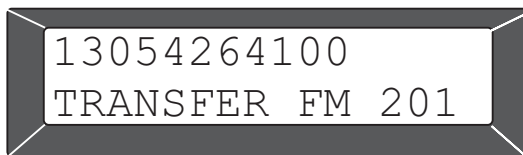


This display shows a call from 1-305-426-4100 that has been transferred to you from station 201.



This display shows an entry in a station review list showing the three initial options. The arrow indicates other options available to you by pressing the SCROLL key.



This display shows an investigation of a station that is talking to Samsung Telecom. Investigator can BARGE-in to the conversation, DROP the call from the system or examine further NND information.

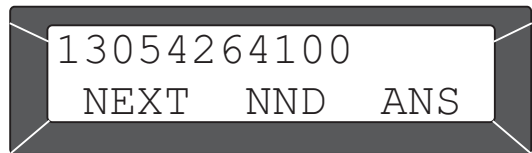

This display is seen while examining calls in queue at your keyset.



This display shows an incoming call from Samsung Telecom ringing at group 500.



This display can be seen when investigating an intercom call. The investigator can BARGE-in or DROP the connection.



This display is seen while using the INQUIRE feature. It shows the three options available while you are checking on a held or parked call.

# SAMPLE UCD DISPLAYS

```
005 calls in  
queue now
```

There are five calls currently waiting to be answered by the UCD group.

```
06 available  
04 logged in
```

There are six members in the group. Four of the members are currently logged in.

```
longest wait  
time is 02:24
```

The longest call on hold (waiting to be answered) was for two minutes, 24 seconds. This data applies to all calls since the supervisor data was last cleared. It does not necessarily represent calls currently in queue.

```
201: answered  
065 calls today
```

The agent at station 201 has answered 65 calls today.

```
124 calls  
received today
```

The UCD group has received 124 calls today.

```
201: average  
call time 04:43
```

The average call length for station 201 is four minutes and 43 seconds.

```
average time in  
queue is 03:51
```

The average time on hold (waiting to be answered) is three minutes and 51 seconds.

```
202: Sondra  
STATUS: OUT
```

Station 202 is currently out of the group. (The display can also show IN GROUP and DND.)


T	EXT	AUTH	TRK	MM/DD	STT	TIME	DURATION	FG	DIALED	DIGIT	ACCOUNT	CODE
1	3951		725	03/21	13:51:17	00:00:08	IA					
1	3951		725	03/21	13:51:25	00:00:14	IT					
1	217		744	03/21	13:51:29	00:00:14	IA					
1	235		725	03/21	13:51:39	00:00:06	T					
1	219		726	03/21	13:51:25	\$ 10.75	O		3056401067		*1234567890#	
1	217		744	03/21	13:51:43	00:00:40	I					
1	278		725	03/21	13:53:40	00:00:07	O		18007864782			
1	3951		726	03/21	13:54:45	00:00:07	IA					
1	219		726	03/21	13:55:03				GROUP OUT			
1	3951		726	03/21	13:54:52	00:00:30	IT					
1	217		726	03/21	13:55:22	00:00:16	TT					
1	235		726	03/21	13:55:30				DND ON			
1	218		726	03/21	13:55:38	00:00:33	TT					
1	235		726	03/21	13:57:50				DND OFF			
1	279	6398	727	03/21	13:57:32	\$ 13.25	O		3056401066			
1	219		726	03/21	14:00:45				GROUP IN			
1	219		726	03/21	13:56:11	00:05:38	T					
1	296		725	03/21	13:54:40	00:07:06	O		3055922900217			
1	219		717	03/21	14:03:57	00:00:15	O		19544530000		*1234567890#	

**Call Type Flag Definitions**

0	Outgoing Call	DE	DISA call with error
I	Incoming Call	T	Transferred call that was terminated
DI	DISA call in	IT	Incoming transfer
DO	DISA call out	FI	Incoming call forwarded to an external number
FO	Outgoing record of forwarded call	OT	Outgoing transfer - Outgoing call made and transferred
IA	Incoming Ring Time Before Being Answered	TT	Caller received a transferred call and transferred it again

## 4.4 SAMPLE SMDR PRINTOUT (WITHOUT CALLER ID)

T	EXT	AUTH	TRK	MM/DD	STT	TIME	DURATION	FG	DIALED	DIGIT	ACCOUNT	CODE	CID/ANI	NUMBER	CID/ANI	NAME
1	3951			03/21	13:51:17	00:00:08	IA							13055922900		SAMSUNG TELECOM
1	3951			03/21	13:51:25	00:00:14	IT							13055922900		SAMSUNG TELECOM
1	217			03/21	13:51:29	00:00:14	IA							13055922900		SAMSUNG TELECOM
1	235			03/21	13:51:39	00:00:06	T							13055559748		PIZZA DELIVERY
1	219			03/21	13:51:25	\$ 10.75	O			3056401067						
1	217			03/21	13:51:43	00:00:40	I									
1	278			03/21	13:53:40	00:00:07	O			18007864782						
1	3951			03/21	13:54:45	00:00:07	IA									
1	219			03/21	13:55:03					GROUP OUT						
1	3951			03/21	13:54:52	00:00:30	IT							13055922900		SAMSUNG TELECOM
1	217			03/21	13:55:22	00:00:16	TT							13055922900		SAMSUNG TELECOM
1	235			03/21	13:55:30					DND ON				13055556420		PIZZA DELIVERY
1	218			03/21	13:55:38	00:00:33	TT									
1	235			03/21	13:57:50					DND OFF						
1	279	6398	701	03/21	13:57:32	\$ 13.25	O			3056401066						
1	219			03/21	14:00:45					GROUP IN						
1	219			03/21	13:56:11	00:05:38	T							13055922900		SAMSUNG TELECOM
1	296			03/21	13:54:40	00:07:06	O			3055922900217						

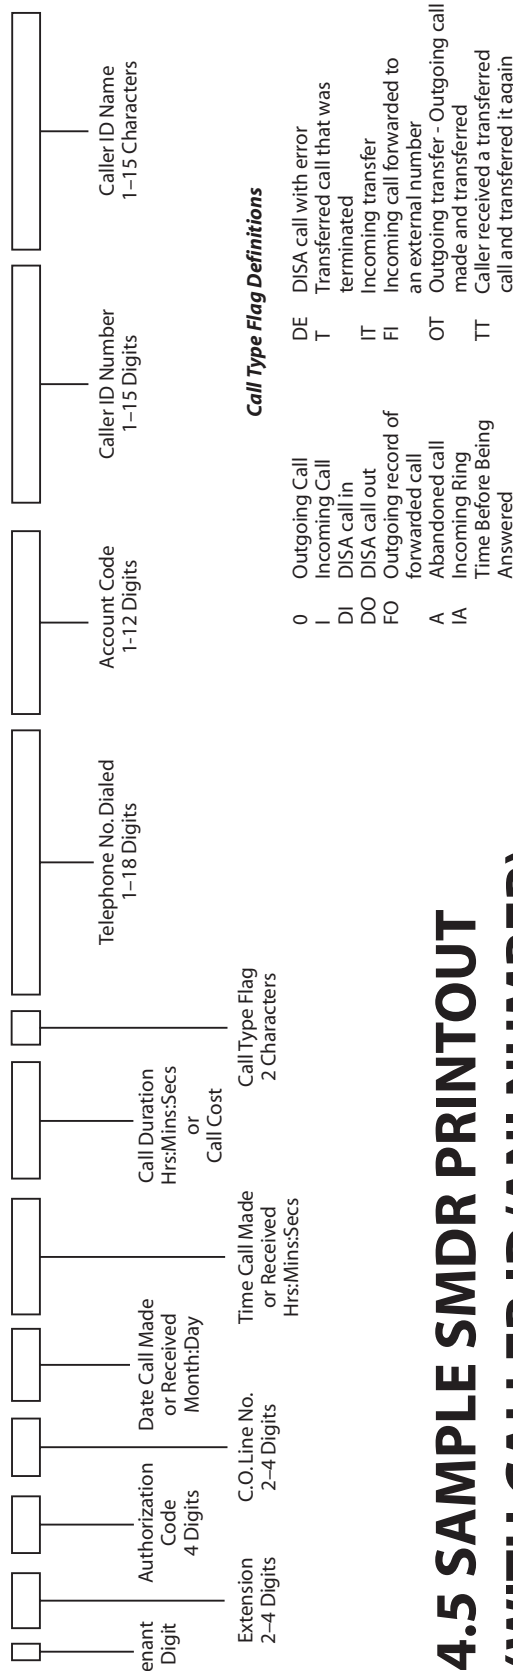

## 4.5 SAMPLE SMDR PRINTOUT (WITH CALLER ID/ANI NUMBER)

## 4.6 SAMPLE UCD REPORT

=====

UCD GROUP 529 : SALES

FROM: SUN 02 Feb 00:00  
TO : SUN 02 Feb 02:54

### CALL STATISTICS

=====

AVERAGE RING TIME(TIME TO ANSWER).....00:40  
NUMBER OF TIMES ALL AGENTS BUSY.....00002  
AVERAGE TIME IN QUEUE.....00:51  
TOTAL CALLS RECEIVED.....00011  
LONGEST QUEUE TIME(TODAY).....02:14  
TOTAL CALLS ABANDONED.....00004

### AGENT STATISTICS

=====

MEMBER	AGENT	NAME	CALLS ANSWERED	AVERAGE CALL TIME	RING TIME
01	210	JOHN	0002	01:55	00:05
02	211	SAM	0001	02:18	00:06
03	208	MIKE	0003	01:22	00:04
04	207	PETER	0001	03:16	00:05

=====

UCD GROUP 515 : SUPPORT

FROM: MON 03 Jan 08:30  
TO : SUN 02 Jan 02:54

### CALL STATISTICS

=====

AVERAGE RING TIME(TIME TO ANSWER).....00:07  
NUMBER OF TIMES ALL AGENTS BUSY.....00005  
AVERAGE TIME IN QUEUE.....01:06  
TOTAL CALLS RECEIVED.....00023  
LONGEST QUEUE TIME(TODAY).....01:02  
TOTAL CALLS ABANDONED.....00001

### AGENT STATISTICS

=====

MEMBER	AGENT	NAME	CALLS ANSWERED	AVERAGE CALL TIME	RING TIME
01	223	FRED	0012	02:33	00:08
02	213	JANE	0010	01:04	00:04

## 4.7 UCD CALL STATISTICS

### CALLS IN QUEUE NOW

How many calls are currently in queue. This statistic is a real time statistic and so will not print on a report.

### ABANDONED CALLS

This shows the number of callers that reached the UCD group, but hung up before being answered. A high number probably means that there are not enough agents available and the wait time is too long.

### AVERAGE RING TIME

This is calculated from the time an agent begins to ring until the time an agent answers the call, this does not include ringing at an agent station that does not answer or is logged out because of the ring next option.

### NUMBER OF TIMES ALL AGENTS BUSY

This is the number of times that a call is placed to an UCD group and all agents are busy or out of group. This check is made when the call is first placed to the group.

Example: If there are 5 members in a group, 3 are Out of Group one is busy and one is idle, and a call is placed to the group, because there is an idle station the all agents busy counter is not incremented.

If the idle station rings, does not answer and is logged out, although the condition of the group is now all agents busy, the check has been made and the agent busy statistic does not increment.

Also if a call comes into a group with all agents busy and then one becomes idle, the busy counter will increment because the check has been made.

### AVERAGE TIME IN QUEUE

This is calculated as an average of all the calls that were in queue.

Note that this is ONLY an average of the calls that were in queue. The caller must have overflowed to the UCD recording to be considered in queue.

A call is considered in queue until it is answered or until it goes to the final destination.

### TOTAL CALLS RECEIVED

The total number of times that calls were sent to a group. This includes calls that were answered by the group, calls that went to a group with all agents busy or out of group, calls that are abandoned and calls that go to UCD final destination. This includes intercom calls to the UCD group.

If this number is less than the total calls received by all the agents it is possible that calls were transferred from one agent to another.

If this number is more than the total calls received by all the agents it is possible that calls were unanswered by an agent and went to final destination or callers hung up while in queue.

This statistic includes:

- a) Calls answered by agent.
- b) Calls that are not answered by an agent and go to final destination.
- c) Calls that are sent to the UCD group but callers hang up before being answered.

### **LONGEST QUEUE TIME TODAY**

This shows the longest call in queue today. The queue time is calculated as follows:

- a) Queue time begins when a caller starts to hear the first UCD message.
- b) Queue time ends when a caller is either
  - Answered by an agent
  - System gets disconnected from C.O. or
  - Caller is transferred to final destination

### **LONGEST QUEUE TIME NOW**

This shows the longest call currently in queue. The queue time is calculated as follows:

- a) Queue time begins when a caller starts to hear the first UCD message.
- b) Queue time ends when a caller is either
  - Answered by an agent
  - System gets disconnected from C.O. or
  - Caller is transferred to final destination

## **4.8 UCD AGENT STATISTICS**

### **LOGGED IN**

The number of stations programmed in the UCD group and the number of stations that are currently logged in. This statistic is a real time statistic and so will not print on a report.

### **STATUS**

This screen shows the agents name, extension number and status. The status can be In Group, Out of group or in DND. This statistic is a real time statistic and so will not print on a report.

### **CALLS ANSWERED**

The total number of calls answered by the agent. This does not include ring no answer to an agent station. If this total number is less than the calls received by the group it is possible that calls were unanswered by an agent and went to final destination or that callers hung up while in queue. If this total number is more than the calls received by the group it is possible that calls were transferred from one agent to another.

### **AVERAGE CALL TIME**

This is an average of all the call durations for the agent.

### **AVERAGE RING TIME**

This is an average of all the ring times for the agent. Ring times are previously explained.

# 4.9 SAMPLE TRAFFIC REPORT

TRAFFIC REPORT FOR [ STA Miami ] Mar/21/1999 13:35

\*\*\*\*\* SYSTEM STATISTICS \*\*\*\*\*

BEGINNING: Mar/15/1999 00:42

ENDING: Mar/21/1999 13:32

ACTIVITY	SYSTEM TOTAL
INCOMING TRUNK CALLS - ANSWERED.....	3041
INCOMING TRUNK CALLS - NOT ANSWERED.....	26
OUTGOING TRUNK CALLS .....	2168
A SELECTED TRUNK WAS BUSY.....	44
INTERCOM CALLS - COMPLETED.....	7178
INTERCOM CALLS - NOT ANSWERED.....	1540
TRUNK RECALLS TO STATION.....	145
TRUNK RECALLS TO OPERATOR GROUP.....	32
INTERNAL PAGE USED.....	35
EXTERNAL PAGE USED.....	79
ALL PAGE USED.....	231

\*\*\*\*\* TRUNK GROUPS \*\*\*\*\*

GROUP	OUTGOING	BUSY
9	1245	18
800	521	3
801	20	3
802	0	0

\*\*\*\*\* INDIVIDUAL TRUNKS \*\*\*\*\*

TRUNK	TRUNK-NAME	ATTA	ANSD	NOT-ANSD	OUTGOING	BUSY
701	LOCAL 1	0	737	0	19	12
702	LOCAL 2	0	541	4	26	11
703	LOCAL 3	0	290	1	37	21

\*\*\*\*\* STATION HUNT GROUPS \*\*\*\*\*

GROUP	<----- OUTSIDE CALL ----->		<-INTERCOM->
	ANSD	NOT-ANSD	
500	439	19	61
501	261	37	38
502	40	2	77
503	87	5	162
504	19	1	44

\*\*\*\*\* INDIVIDUAL STATIONS \*\*\*\*\*

EXT	STATION-NAME	<----- OUTSIDE CALL ----->					<-INTERCOM->			
		ATTA	ANSD	NOT-ANSD	DIALED	ICM-TRSF	TRK-TRK	PICKUP	ANSD	DIALED
201	Operator	9	360	11	15	341	0	0	39	72
202	Barbara	12	60	2	80	20	0	12	49	66
203	Ivania	4	25	1	36	3	0	18	86	29

# 4.10 TRAFFIC REPORT OVERVIEW

A\*\*\*\*\* SYSTEM STATISTICS \*\*\*\*\*

1 BEGINNING: 04/01/99 08:00 ENDING: 04/01/99 17:30

2 ACTIVITY	SYSTEM TOTAL
3 INCOMING TRUNK CALLS - ANSWERED.....	0000
4 INCOMING TRUNK CALLS - NOT ANSWERED.....	0000
5 OUTGOING TRUNK CALLS .....	0000
6 A SELECTED TRUNK WAS BUSY.....	0000
7 INTERCOM CALLS - COMPLETED.....	0000
8 INTERCOM CALLS - NOT ANSWERED.....	0000
9 TRUNK RECALLS TO STATION.....	0000
10 TRUNK RECALLS TO OPERATOR GROUP.....	0000
11 INTERNAL PAGE USED.....	0000
12 EXTERNAL PAGE USED.....	0000
13 ALL PAGE USED.....	0000

**1. BEGINNING & ENDING**

This identifies when the statistics were collected. It includes dates and time.

**2. ACTIVITY:** Overall summary of traffic in the system for activities 3 to 13.

**3. INCOMING TRUNK CALLS-ANSWERED:** These are any incoming trunk calls to the system. These calls are pegged when answered by any device and/or station in the system whether it is a new call or a recall.

**4. INCOMING TRUNK CALLS-NOT ANSWERED:** These are any incoming trunk calls that were not answered by any station or device in the systems. These are the same calls that would be flagged as abandoned in SMDR.

**5. OUTGOING TRUNK CALLS:** These are all outgoing trunk calls that were originated by any station or through the DISA feature. Outgoing trunk calls are valid calls as defined by the SMDR START TIME in MMC 501.

**6. A SELECTED TRUNK WAS BUSY:** Pegged every time a trunk or trunk group was busy regardless of the manner in which it was selected (e.g., DTS key, LCR, "9" 7XX, TRK GROUP SELECT, SPD, External call forward, DISA).

**7. INTERCOM CALLS COMPLETED:** These are all intercom calls that were completed to any station, station group or device.

**8. INTERCOM CALLS NOT COMPLETED:** These are all intercom calls that were not answered and resulted in the calling party hanging up. A call to a station group that overflows to another station is considered not answered whether the overflow destination did or did not answer.

**9. TRUNK RECALLS TO STATION:** These are trunk calls that were placed on any kind of hold and recalled a station. These are also trunk calls that were transferred and were not answered and recalled the transferring station. This includes members of the operator group that put calls on hold and then recall the operators station.

- 10. **TRUNK RECALLS TO OPERATOR GROUP:** These are any trunk calls that recalled to the operator group.
- 11. **INTERNAL PAGE USED:** Peg count of every time internal page was accessed.
- 12. **EXTERNAL PAGE USED:** Peg count for every time external page was accessed.
- 13. **ALL PAGE USED:** Peg count of every time the all page feature was accessed. This does not include internal or external page, only 55+\* or PAGE \*.

**B\*\*\*\*\* TRUNK GROUPS \*\*\*\*\***

1 GROUP	2 OUTGOING	3 BUSY
9	0000	0000
800	0000	0000
801	0000	0000

- 1. **GROUP:** A listing of all trunk groups assigned in the system.
- 2. **OUTGOING:** These are the number of outgoing trunk calls made using each trunk group. Pegged every time a member of this trunk group was used to make a valid outgoing call. A valid outgoing call is defined by the SMDR Start Time programmed in MMC 501.
- 3. **BUSY:** This is the number of times each trunk group was busy when someone attempts to access it.

**C\*\*\*\*\* INDIVIDUAL TRUNKS \*\*\*\*\***

1TRUNK	2TRUNK-NAME	3ATTA	4ANSD	5NOT-ANSD	6OUTGOING	7BUSY
701		0000	0000	0000	0000	0000
702		0000	0000	0000	0000	0000
703		0000	0000	0000	0000	0000
704		0000	0000	0000	0000	0000
705		0000	0000	0000	0000	0000
706		0000	0000	0000	0000	0000
707		0000	0000	0000	0000	0000
708		0000	0000	0000	0000	0000
709		0000	0000	0000	0000	0000
710		0000	0000	0000	0000	0000

- 1. **TRUNK:** A listing of each trunk in the system.
- 2. **TRUNK NAME:** The names of each trunk as programmed in MMC 404.
- 3. **ATTA:** Average Time To Answer for trunks is counted in the number of seconds that ringing voltage is detected at the trunk interface and the timer stops when trunk is answered by station or device in the system. The ATTA is the sum of all answered times divided by the answered call count.
- 4. **ANSD:** This is the number of times this specific trunk was answered by any station or device whether it is a new call or a recall.
- 5. **NOT-ANSD:** This is the number of times this specific trunk rang the system but was not answered. These are the same calls that would be flagged as abandoned in SMDR.

- 6. **OUTGOING:** This is the number of times this trunk was used to make an outgoing call. A valid outgoing call is defined by the SMDR START TIME programmed in MMC 501.
- 7. **BUSY:** This is the number of times this trunk was busy when accessed by a button or dial code.

D\*\*\*\*\* STATION HUNT GROUPS \*\*\*\*\*

<----- 1 OUTSIDE CALL ----->				5 <-INTERCOM->
2GROUP	3ANSD	4NOT-ANSD		
500	0000	0000	6ANSD 0000	
501	0000	0000	0000	
502	0000	0000	0000	
503	0000	0000	0000	
504	0000	0000	0000	

- 1. **OUTSIDE CALLS:** These statistics are for outside calls that reach these station groups regardless how they arrive there.
- 2. **GROUP:** Listing of all station groups in the system.
- 3. **ANSD:** This column is a peg count of all answered trunk calls that rang to the specific group directory number regardless of how these arrived.
- 4. **NOT-ANSD:** The number of times any trunk call directed to the specific group number was not answered by any member of the group.
- 5. **INTERCOM:** An intercom call made from a station or device within the system to the specific group number.
- 6. **ANSD:** This is a count of how many times an intercom call was answered by any group member of that specific group.

E\*\*\*\*\* INDIVIDUAL STATIONS \*\*\*\*\*

<----- 1 OUTSIDE CALL ----->										11 <-INTERCOM->
2	3	4	5	6	7	8	9	10	12	13
EXT	STATION-NAME	ATTA	ANSD	NOT-ANSD	DIALED	ICM-TRSF	TRK-TRK	PICKUP	ANS	DIALED
201		0000	0000	0000	0000	0000	0000	0000	0000	0000
202		0000	0000	0000	0000	0000	0000	0000	0000	0000
203		0000	0000	0000	0000	0000	0000	0000	0000	0000
204		0000	0000	0000	0000	0000	0000	0000	0000	0000
205		0000	0000	0000	0000	0000	0000	0000	0000	0000

- 1. **OUTSIDE CALLS:** These statistics are for outside calls that in any way reach individual stations or devices.
- 2. **EXT:** Listing of all extension numbers in the system. This also includes AA, VM, and CADENCE ports.
- 3. **STATION NAME:** The name for each particular station as programmed in MMC 104.
- 4. **ATTA:** Average Time To Answer for stations is counted in the number of seconds that ringing signal is applied to a station for trunk calls and recalls. The ATTA is the sum of all answered times divided by the answered call count. Use the same calculation method as used for individual trunk ATTA.

5. **ANSD:** This is a count of how many times an outside call was answered by the specific station. Outside callers recalling a station are not counted again when they are answered.
6. **NOT-ANSD:** This is a count of how many times a trunk call was directed to the station but was not answered by this station.
7. **DIALED:** Peg count of how many times the station made a valid outside call. An outside call is defined by the SMDR start time in MMC 501.
8. **ICM-TRSF:** This is the number of times a trunk call was successfully transferred to another station using the intercom. It includes both screened and unscreened transfer.
9. **TRK-TRK:** This is the number of times a trunk call was transferred to another trunk (tie line) This is called a trunk-to-trunk transfer. This field gets pegged every time the station completes a trunk to trunk transfer.
10. **PICKUP:** This is a count of the outside calls that were picked up by the specific station. Picked-up calls are calls that are not ringing at your station but were answered by you. This peg count is separate from the number of answered call in #5 of Individual Stations section E.
11. **INTERCOM:** Statistics for intercom calls. An intercom call made from a station or a station device within the system to another station.
12. **ANSD:** This is the number of times an intercom call was answered by this specific station. Screened transfers count as an answered intercom call.
13. **DIALED:** The number of times the specific station dialed another station or station group. Screened transfers count as a dialed intercom call.

# PART 5. GENERAL USER INFORMATION

## 5.1 RADIO FREQUENCY INTERFERENCE

**WARNING:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy. If not installed and operated in accordance with the instruction manual, it may cause interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The following measures can be tried:

1. Reorient the receiving antenna.
2. Relocate the telephone with respect to the receiver.
3. Move the telephone equipment away from the receiver.
4. Plug the Key Service Unit into a different AC outlet so that the KSU and receiver are on different circuits.

## 5.2 FCC REQUIREMENTS

The iDCS 500 Release 2 electronic telephone system complies with Part 68 of the Federal Communications Commission Rules and Regulations.

### UNAUTHORIZED MODIFICATIONS

Any changes or modifications performed on this equipment that are not expressly approved in writing by SAMSUNG TELECOMMUNICATIONS AMERICA could cause noncompliance with the FCC rules and void the user's authority to operate the equipment.

NOTE: Allowing this equipment to be operated in such a manner as to not provide for proper answer supervision is a violation of Part 68 of the FCC's rules.

### NOTIFICATION TO TELEPHONE COMPANY

Before connecting the iDCS 500 Release 2 system to the telephone network, the telephone company may request the following information:

- Your telephone number or all numbers that will be connected to the iDCS 500 Release 2 system.
- FCC Registration Numbers:

Key System—Fully Protected	A3LKOR-43066-KF-E
Multi-Function (Hybrid)—Fully Protected	A3KLOR-43065-MF-E
- Ringer Equivalence Number 0.5 B for TRK-B1
- Ringer Equivalence Number 1.6 B for TRK-C1

The iDCS 500 Release 2 may be configured as a key system or a hybrid system. Depending on the method of operation, the appropriate FCC number LCR must be given to the telephone company. Certain features such as pooled access by button or dial access, LCR, off premise extensions and tie lines may require the hybrid registration. Check with the local telephone company providing the service if you are in doubt. It is the customer's responsibility to comply with local telephone company tariffs.

## TELEPHONE CONNECTION REQUIREMENTS

The Federal Communications Commission (FCC) has established rules which permit the DCS to be connected directly to the telephone network using telephone company network access jacks usually referred to as "Registered Jacks."

<b>5.3 TELEPHONE COMPANY INTERFACES</b>			
<b>CIRCUIT TYPE</b>	<b>DCS CARD TYPE</b>	<b>FACILITY INTERFACE CODE</b>	<b>NETWORK JACK</b>
LOOP START LINE	TRK-B TRK-B1 TRK-C1 T1-SF T1-ESF	O2LS2  04DU9-DN 04DU9-1KN	RJ21X RJ11C RJ14C RJ48C
GROUND START LINE	T1-SF T1-ESF GTRK	O4DU9-BN 04DU9-1KN O2GS2	RJ48C RJ21X RJ11C RJ14C
DID LINE	T1-SF T1-ESF DID	O4DU9-BN 04DU9-1KN O2RV2-T	RJ48C RJ21X RJ11C RJ14C
E & M TIE LINE	T1-SF T1-ESF E & M	O4DU9-BN 04DU9-1KN TL11M	RJ48C RJ2EX
OFF PREMISES EXTENSION	SLI-4 circuit board only	OL13C	RJ21X RJ11C RJ14C
E911	E911	O2RV2-O	
ISDN-PRI	TE/PRI	04DU9-1KN	RJ48C
ISDN-BRI	4BRI	02155	NT1

### RINGER EQUIVALENCE (REN)

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of the RENs should not exceed 5.0. To be certain of the number of devices that may be connected to the line, as determined by the number of RENs, contact the telephone company to determine the maximum REN for the calling area.

### INCIDENCE OF HARM

If the terminal equipment, the iDCS 500 Release 2, causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is

not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

## CHANGES TO TELEPHONE COMPANY EQUIPMENT OR FACILITIES

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications so that you may maintain uninterrupted service.

## SERVICE CENTER

If trouble is experienced with the iDCS 500 Release 2, please contact your local SAMSUNG TELECOMMUNICATIONS AMERICA for repair or warranty information. If the trouble is causing harm to the telephone network, the telephone company may request that you remove the equipment from the network until the problem is resolved.

## FIELD REPAIRS

Only technicians certified on the iDCS 500 Release 2 are authorized by SAMSUNG TELECOMMUNICATIONS AMERICA to perform system repairs. Certified technicians may replace modular parts of a system to repair or diagnose trouble. Defective modular parts can be returned to SAMSUNG TELECOMMUNICATIONS AMERICA for repair.

## GENERAL

This equipment must not be used on coin telephone lines. Connection to party line service is subject to state tariffs.


The iDCS 500 Release 2 system uses toll restriction and LCR features that are programmed to allow dialing over the public telephone network. The North American Numbering Plan (NANP) determines these network area codes and exchange codes. Failure to update the system programming or software may deny you access to new area codes and exchanges. Bell Communication Research (Bellcore) administers the NANP and publishes it. To obtain the latest information and keep your system current, contact Bellcore at (201) 829-3071.

## HEARING AID COMPATIBILITY

All models of the iDCS 500 Release 2 are hearing aid compatible as specified in Part 68 of the FCC Rules.

## 5.4 UNDERWRITERS LABORATORIES

The iDCS 500 Release 2 system has been tested to comply with safety standards in the United States as listed below. This system is listed with Underwriters Laboratories.

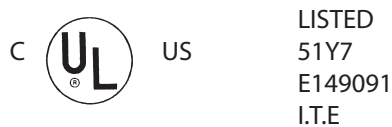

## 5.5 MUSIC ON HOLD WARNING

**IMPORTANT NOTICE:** In accordance with US copyright laws, a license may be required from the American Society of Composers, Authors and Publishers (ASCAP) or other similar organizations if copyrighted music is transmitted through the Music on Hold feature. SAMSUNG TELECOMMUNICATIONS AMERICA hereby disclaims any liability arising out of failure to obtain such a license.

## 5.6 EQUAL ACCESS REQUIREMENTS

The iDCS 500 Release 2 is capable of providing users access to interstate providers of operator services through the use of access codes. Modifications of this equipment by call aggregators to block access dialing codes is a violation of the Telephone Operator Consumer Act of 1990 and Part 68 of the FCC Rules.

## 5.7 DISA WARNING

Lines that are used for the Direct Inward System Access feature must have the disconnect supervision options provided by the telephone company.

**WARNING:** As it is impossible to control who may access your DISA line it is suggested that you do not turn this feature on unless you intend to use it. If you do use this feature, it is good practice to frequently change pass-codes and periodically review your telephone records for unauthorized use.

# PART 6. HOTEL / MOTEL FEATURE PACKAGE

## 6.1 GENERAL OVERVIEW

The iDCS 500 Release 2 Hotel / Motel software package combines the iDCS 500 Release 2 business features with additional features created to meet the needs of the Hotel / Motel industry. This combination meets the requirements of the Hotel General Business offices as well as those of the Hotel Guest. The iDCS 500 Release 2 Hotel / Motel package MUST be activated in MMC 813 before it can be used. Activating the hotel mode will default the system.

Samsung's iDCS 500 Release 2 Hotel / Motel software is designed to operate in small to medium sized hotel properties. Those with, up to approximately, 300 rooms.

The iDCS 500 Release 2 Hotel / Motel software offers a bi-directional PMS link. All system transactions related to the guest and meeting rooms will be sent to the PMS system via this link. Likewise any information input from a PMS or POS terminal will be sent into the iDCS 500 Release 2 via this same link. Station status can be changed via these PMS and POS PC terminals. Message lights can be activated, Do Not Disturb can be set, etc, across the PMS link.

The system's design makes it operational without the need for additional PMS equipment. The key to utilizing the iDCS Hotel / Motel software without a PMS is the front desk display keyset. The keyset can be programmed with features and functions pertinent to the hospitality industry, that make it convenient to perform day to day routine functions. However in the case of larger hotels, the owner / operator would probably choose to interface to the bi-directional PMS link.

For those systems that are not utilizing a PMS software package, the iDCS 500 Release 2 Hotel / Motel software will maintain a record of all transactions that occur throughout the system. These records are maintained until the guest or meeting room is checked out. The iDCS 500 Release 2 will maintain 10,000 transaction records. These transaction records represent one line of the guest room bill. These records are purged once the room is checked out.

## 6.2 HOTEL / MOTEL FEATURES

[Bi-Directional PMS](#)

[Call Costing](#)

[Check In](#)

[Check Out](#)

[Deposit Posting](#)

[DSS Key Use During Feature Activation](#)

[Enhanced User Programming](#)

[Executive DND](#)

[Express Check-In](#)

[Guest Services Billing](#)

[100 Item Codes with Costing](#)

[Lobby Phone Service](#)

[Printed Reports](#)

[Phone Bill](#)

[Guest and Meeting Room Bill](#)

[Room Status](#)

[Wake Up Call Activity](#)

[Room Dialing Restrictions](#)

[Room Rate Discounts](#)

[Room Status Conditions](#)

[Available](#)

[Occupied](#)

[Needs Cleaning](#)

[Needs Maintenance](#)

[Hold \(Late Check Out\)](#)

[Hold and Needs Cleaning](#)

[Hold and Needs Repair](#)

[Cleaned](#)

[Repaired](#)

[Room Status](#)

[Printed Reports](#)

[Keyset Indications](#)

[Room Status Update](#)

[Automatic \(Daily Timer\)](#)

[Manual](#)

[Staff I.D. Codes \(500\)](#)

[Staff Locator](#)

[Station Types](#)

[Business Office](#)

[Hotel Administrator](#)

[Meeting Room](#)

[Guest No Smoking Room](#)

[Guest Smoking Room](#)

[Fax Station](#)

[Telephone Credit Limit](#)

[Transaction Record Output \(To PMS\)](#)

[Wake Up Calls](#)

[Set by Attendant](#)

[Set by Guest](#)

[Answered](#)

[Not Answered](#)

[Cancelled](#)

[With Auto Attendant Announcement](#)

### BI-DIRECTIONAL PMS

The iDCS 500 Release 2 offers a bi-directional PMS link. This link allows for the integration of a PC, with a PMS software package installed, to be utilized for inputting room related charges as well as creating room bills, reports, etc. Any transactions, related to guest or meeting rooms, that take place within the hotel system, will be sent immediately to this link from the iDCS 500 Release 2.

Also, any information input at a PMS or POS terminal will be sent into the iDCS 500 Release 2 via this same link. This link will allow for system billing and room status information to be updated via PMS and POS, PC terminals.

### CALL COSTING

The iDCS 500 Release 2 Hotel / Motel software provides call costing, for guest and meeting room phones. The call cost will appear on the guest's room bill, the SMDR report, the transaction record output, and the PMS output.

The system uses programmable call costing tables to calculate the cost of incoming and outgoing calls. Rates are calculated by the number dialed, duration of the call and may include surcharges.

## CHECK IN

The iDCS 500 Release 2 Hotel / Motel software allows an Administrator keyset to check a guest into a room by pressing the CHECK IN key and following the prompts in the display. When the CHECK IN key is pressed the clerk can credit the room account if the guest wishes to prepay for the room and/or the phone service. The clerk can also assign the guest's name to the room.

This feature offers 64-Button Module support. Meaning that the associated DSS key assigned to a 64-Button Module, can be used to enter the room number that is being checked in.

## CHECK OUT

In addition the feature allows an Administrator keyset to check a guest out of a room by pressing the CHECK OUT key. The CHECK OUT option will print out the total room charges and clear the room information from the transaction record buffer. It also changes the room to the Needs Cleaning status. Checking a guest out of a room prior to the ROOM CLEAN TIME will automatically change the room to the NEEDS CLEANING status.

This feature offers 64-Button Module support. Meaning that the associated DSS key assigned to a 64-Button Module, can be used to enter the room number that is being checked out.

## DEPOSIT POSTING

The credit feature allows any Administrator keyset to add a cash deposit to a room bill, to offset charges already incurred or to prepay either the room or phone charges or both. This feature requires a CREDIT key to be assigned to the administration phones. This feature offers 64-Button Module support. Meaning that the associated DSS key assigned to a 64-Button Module, can be used to enter the room number that the deposit is being posted to.

## DSS KEY USE DURING FEATURE ACTIVATION

When utilizing the Administrator keyset to activate system features / functions, many will request the room number to be entered. In most cases the associated DSS key can be pressed to enter the station number.

The exceptions are Wake Up Call Setting and Lobby Phone Service. These features will not respond to the DSS key press. The associated station number must be assigned via the keypad.

## ENHANCED USER PROGRAMMING

The iDCS 500 Release 2 allows the System Administrator access to several non-volatile MMCs. These MMCs give stations assigned as ADMINISTRATOR and NORMAL, the ability to change Station Call Forwarding, System Time and Date, etc. for any station within the system.

This Enhanced System Programming is accessible through the PROG key.

The MMCs available to Enhanced User Programming are as follows: MMC 100: Station Lock, MMC 102: Call Forward, MMC 104: Station Name, MMC 115: Set Programmed Message, MMC 116: Alarm and Message, MMC 505: Assign Date and Time, MMC 705: Assign System Speed Dial, MMC 706: System Speed Dial by Name, and MMC 722: Station Key Programming.

## EXECUTIVE DND

The Executive DND feature (SET DND key) allows Front Desk personnel to set and cancel DND to a guest's room. This means that a guest can request that their room be flagged as DND, saving the guest from having to learn system feature codes. This key will allow Front Desk personnel to change DND status, as an additional guest service.

This feature can be set and canceled from the guest room phone. This feature offers 64-button module support. Meaning that the associated DSS key assigned to a 64-button module can be used to enter the room number to set DND to.

## **EXPRESS CHECK-IN**

This feature is designed to expedite the Check In procedure. It is a second check in option. It is used expressly to check in a guest quickly.

The Express Check In feature (X-CHIN key) eliminates several steps from the standard Check In procedure. This feature does not request any billing type, or guest's name information.

This feature offers 64-button module support. Meaning that the associated DSS key assigned to a 64-button module, can be used to enter the room number that is being checked in.

## **GUEST SERVICES BILLING**

The guest service billing feature allows a staff member, to enter an item code and a dollar amount to a specific room bill using specific telephone stations. The dollar amount entered at time of sale for the item code, can be multiplied by the tax rates defined for the items or will have the tax amount added if the tax is a fixed dollar amount.

There are 100 item codes in the system. Each item code can have a name, with up to 10 characters, programmed to describe the charge.

This feature requires a staff ID code to be entered to add or delete a charge to a room. The staff ID codes are assigned in the Authorization Code table. The staff ID code will be verified from the table, and if an incorrect code is entered, an error tone will be returned and the station will return to idle.

The room number will also be verified, from the list of rooms that are checked in. If a room number is not occupied, an error tone will be returned and the station will return to idle.

This feature can be used by either a keyset or a single line telephone with DTMF dialing. The keyset requires a BILL key.

## **LOBBY PHONE SERVICE**

This feature allows a hotel operator to bill a call to a guest room even though it was made at a remote location, such as a lobby phone. This phone can be a dial "0" type or a Hotline to the operator.

The guest will request the operator to bill an outside call to his/her room. The operator will press the Remote Bill key (RB) and place the guest on transfer hold, then enter the guest's room number and receive confirmation tone. The operator can then dial the number for the guest and transfer the ringing call back to the guest.

## **PRINTED REPORTS**

In those cases where the bi-directional PMS link is not used, the iDCS 500 Release 2 Hotel / Motel software package will provide various printed reports of selected activities throughout the system. These reports are initiated from any administrator's display keyset and sent to a printer connected to the network or through a serial port on the IOM card. This serial IOM port will be assigned as HM REPT.

In order to provide a permanent record, it is advisable to use two-part paper in the printer, or do a room bill printout, prior to checking the room out.

## Phone Bill

The Phone Bill report provides only the phone bill information for a specific room. This print out is separate from the guest room bill. This allows a guest to pay for them separately, so no phone calls appear on the room bill. When using this feature you have the option of saving or deleting all telephone call information from the guest's bill.

The information in the phone bill includes the date and time the report was requested, the room number requested, date and time of call, the number dialed, call duration and the charge for the call.

## Guest and Meeting Room Bill

This printout includes all room-related charges, from time of check in. Associated taxes and/or surcharges are automatically calculated by the system based on programmable rate table entries. Any deposits made are automatically deducted from the total bill. This printout also includes daily room charges, phone calls, services charged to the room, wake up call activity, and any deposits made. This printout is made on a per room basis.

## Room Status

The system can print six different Room Status reports. There are five (5) individual reports for the following room status conditions: Available, Occupied, Needs Cleaning, Needs Maintenance, and Hold for Late Checkout. A sixth report will show all rooms and all room status conditions.

## Wake Up Call Activity

This report will detail all wake up call information related to a specific room since check in. The printout includes the time a wake up call was set, the requested wake up time, the time the call was answered, unanswered wake up calls, canceled wake up calls and charges for the service if programmed.

## Room Dialing Restrictions

This feature is used to program station to station calling restrictions and is sometimes referred to as intercom blocking. For instance you can restrict rooms from dialing the administration offices while still being able to dial the front desk, other hotel service phones or other guest rooms.

## Room Rate Discounts

The iDCS 500 Hotel / Motel software offers a method of discounting room rates, on a day-by-day basis. This discount is based on a percentage of the full room rate. The percentage is programmable and variable.

## Room Status Conditions

The system will indicate the status of each guest or meeting room when requested. [See Room Status](#). The five possible conditions are (the last four conditions in the list are sent to update PMS information only):

- AVAILABLE – Ready to check in.
- OCCUPIED – Guest is checked in.
- NEEDS CLEANING – Condition after check out or morning update for all occupied rooms.
- NEEDS MAINTENANCE – Temporary condition for rooms requiring some repair or maintenance.
- HOLD (LATE CHECK OUT) – Indicates a guest requires a late check out so hotel staff will delay cleaning.
- CLEANED – Message sent for updating PMS. Indicates that the room has been cleaned.
- REPAIRED – Message sent to update PMS. Indicates that the room has been repaired.

- HOLD AND NEED CLEANING – Message sent to update PMS. Indicates that the room is being held and requires cleaning.
- HOLD AND NEEDS MAINTENANCE – Message sent to update PMS. Indicates that the room is being held and requires maintenance.

## ROOM STATUS

The iDCS 500 Release 2 Hotel / Motel system provides three methods to review the five room status conditions.

1. An administrator's display keyset can be used to view the status of any individual room and scroll through the list of all other rooms to view their status.
2. One or more 64 Button Modules can be used to view the status of all rooms for any of the five room conditions (Example: press the Room Status View key for "AVAILABLE" and all the buttons corresponding to available rooms will light red).
3. Printed reports can be obtained to review the room status conditions for all rooms. [See Printed Reports–Room Status, earlier in this document.](#)

## ROOM STATUS UPDATE

The system operation provides two methods to update the status of each guest or meeting room.

### Automatic

The hotel manager informs the system technician of the preprogrammed time he wants all rooms to automatically change from "Occupied" to "Needs Cleaning" on a daily basis. In addition each room is automatically changed to "Needs Cleaning" upon check out.

### Manual

Hotel personnel, such as maids, maintenance men or administrators, can dial a code from the guest/meeting room telephone to manually update the room status as required.

The manual room status update codes are:

- 0= Room needs to be cleaned.
- 1= Room cleaned. This updates the room status to either AVAILABLE or OCCUPIED.
- 2= Room needs maintenance. This makes the room NOT AVAILABLE for check in.
- 3= Room repaired. This updates the room status to either AVAILABLE or OCCUPIED.

## STAFF I.D. CODES

These are simply Authorization Codes that hotel employees must enter to access various Hotel / Motel features. These codes will appear on the Room Bill printout to indicate who posted the charges to a specific room. They provide a measure of security and control for hotel management. There are 500 STAFF ID codes in the software.

## STAFF LOCATOR

The Staff Locator feature (SLOCAT key) will allow Front Desk personnel to find any member of the hotel staff at any given time. The main requirement for this feature to function correctly is the staff members logging into the room.

This feature is known elsewhere as the Maid Locator feature and is generally used by housekeeping personnel only. However it can be used for locating housekeeping and maintenance personnel, as well as other members of the hotel staff, including management personnel.

Staff member's locations are viewed on the 64-button module. As the staff members move from room to room, they simply log into that room. The system will log them out of the previous room and into the current one. At the end of the day, the Front Desk personnel can clear the information, making the system ready for the next day.

## **STATION TYPES**

The system software enables station ports to be defined for a specific use throughout the hotel. Each telephone can be designated as being one of the five following types. A class of service has been established for each station type.

1. BUSINESS OFFICE – This is the default setting. The station will operate in the manner associated with a normal business station.
2. HOTEL ADMINISTRATOR – Only stations designated as Administrator can access special Hotel / Motel features, such as Check In, Check Out, Room Status, Print Report, etc.
3. MEETING ROOM – A meeting room is similar to a guest room in the respect that it generates a room bill but has different class of service option requirements.
4. GUEST NO SMOKING – When a station is designated as this type, it will appear in the administrator's key-set display as a no smoking room. This station type will generate a room bill and follow its associated class of service options.
5. GUEST SMOKING – When a station is designated as this type, it will appear in the administrator's keyset display as a smoking room. This station type will generate a room bill and follow its associated class of service options.
6. FAX STATION – When a station is designated as this type, the associated station number can be paired with a fax extension so that calls from the fax extension can be billed to the room..

## **TELEPHONE CREDIT LIMIT**

This feature is designed to control phone charges for hotel guests that do not use a credit card. These guests will need to make a cash deposit for their phone calls. When the credit warning threshold has been reached the guest will receive two beeps in their ear, (the warning threshold is determined by the COST RATE feature and occurs one billing period prior to the credit limit being reached). When the credit limit is reached, the call will be dropped, and the phone will then be restricted. An additional deposit is required to re-activate the phone.

## **TRANSACTION RECORD OUTPUT**

The iDCS 500 Release 2 Hotel / Motel software provides an output for all Hotel / Motel transactions. Any transactions, related to guest or meeting rooms, that take place within the hotel system, will be immediately sent –"on the fly" to a serial port on the IOM card. The serial port will be assigned as PMS. This transaction stream would typically be connected to a PC with a PMS software package, for system reports.

## WAKE UP CALLS

The iDCS 500 Release 2 Hotel / Motel software package supports a comprehensive wake-up feature.

- SET BY ATTENDANT – The hotel administrator stations or operator/attendant can set a wake call.
- SET BY GUEST – Each hotel guest can set his/her own wake up call using the telephone in their room.
- ANSWERED – Both the guest room bill and wake up call activity report will show the date and time the guest answered the wake up call.
- NOT ANSWERED – Both the guest room bill and wake up call activity report will show each wake up call attempt that was not answered by the hotel guest. This information will print out on the printer connected to the serial port designated for the Hotel / Motel Report.
- CANCELED – Both the guest room bill and wake up call activity report will indicate each canceled wake up call. Only Hotel / Motel administrator's keysets can cancel wake up calls. The guest can reprogram a wake up request if he made a mistake. System programming provides a programmable number of wake up call attempts and a programmable time interval between attempts.
- WITH AUTO ATTENDANT ANNOUNCEMENT – The system can be programmed to play one of the 64 automated attendant messages when a guest answers a wake up call. This message can be one of the 16 pre-recorded messages or one of the 48 customer recorded messages.

Note: It is recommended that the recording used as the Wake Up Announce Recording, be the last recorded message. This will minimize the amount of re-recording needed, should the message need to be changed.

## **6.3 SAMPLE REPORTS AND PRINTOUTS**

### **6.3.1 GUEST ROOM BILL PRINTOUT**

### **6.3.2 ROOM STATUS PRINTOUTS**

**- AVAILABLE**

**- OCCUPIED**

**- NEEDS CLEANING**

**- NEEDS MAINTENANCE**

**- HOLD**

**- ALL**

### **6.3.3 TRANSACTION RECORD OUTPUT SAMPLE**

### **6.3.4 INDIVIDUAL GUEST PHONE BILL**

### **6.3.5 ALL GUEST PHONE BILL (SMDR)**

### **6.3.6 INDIVIDUAL WAKEUP ACTIVITY REPORT**


### **6.3.7 SAMPLE GUEST PHONE TEMPLATES**

## 6.3.1 GUEST ROOM BILL PRINTOUT

Printout includes the following information:

- Date and time the bill was printed
  - Room number requested
  - Daily room charge
  - Phone calls and their charges
  - Wake up call activity
    - Time wake up was set for
    - Each wake up call attempt, answered/not answered
    - Cancelled wake up
  - Room related charges and applicable taxes
  - Item codes and associated descriptions for room related charges
    - Date and time item was billed
  - Details column
    - Staff code of employee performing function
    - Duration of phone calls
    - Time wake up call was set for
  - Room and/or phone deposits
  - Total room charges
- \* \* \*
- Automatically increments the daily room charge
  - Automatically applies room and phone deposits to the total bill
  - Room bills are printed on a per room basis
  - By default, printout will print a header, followed by 50 lines per page
  - Printout size is adjustable through programming

### EQUIPMENT REQUIRED

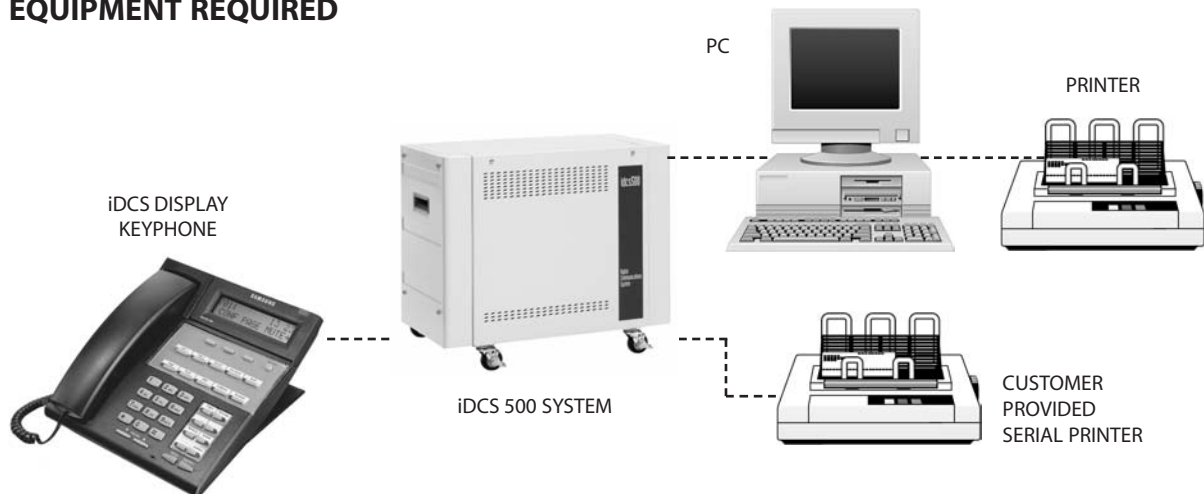


GUEST BILL FROM [SUNSHINE SUITES ] 01/28/99 14:13

CHARGES BILLED TO ROOM NUMBER : 210

ROOM	DATE	TIME	ITEM	DESCRIPTION	DETAILS	CHARGE
210	01/27	12:11	02	RM CHARGE	1234	100.00
210	01/27	12:11	02	STATE TAX		6.00
210	01/27	12:11	02	BED TAX		1.50
210	01/27	12:11	00	RM Deposit	5555	-100.00
210	01/27	12:30	03	RM SVC	9876	20.00
210	01/27	12:30	03	STATE TAX		1.20
210	01/27	12:30	03	SVC CHARGE		2.00
210	01/27	12:31	TEL	3055922900	00:00:49	.75
210	01/27	14:55	89	W/UP SET	05:30	000.00
210	01/27	14:55	05	MOVIE RNTL	5555	5.00
210	01/27	14:55	05	STATE TAX		.30
210	01/27	14:55	TEL	18008764782	00:02:03	.25
210	01/27	14:58	01	PH Deposit	1234	-2.50
210	01/27	14:58	TEL	3055922900	00:02:18	1.25
210	01/27	15:01	92	W/UP CANCL		000.00
210	01/27	15:01	04	DRY CLEAN	1234	22.00
210	01/27	15:01	04	SVC CHARGE		2.00
210	01/27	19:35	89	W/UP SET	06:00	000.00
210	01/28	06:00	91	W/UP N/ANS		000.00
210	01/28	06:01	90	W/UP ANS		000.00
210	01/28	06:30	03	RM SVC	5555	18.50
210	01/28	06:30	03	STATE TAX		1.11
210	01/28	06:30	03	SVC CHARGE		2.00
210	01/28	12:00	02	RM CHARGE		100.00
210	01/28	12:00	02	STATE TAX		6.00
210	01/28	12:00	02	BED TAX		1.50
210	01/28	13:32	TEL	18008764782	00:01:59	.25
210	01/28	14:06	TEL	3055922900	00:01:03	.75
					TOTAL	189.86

Page 1 of 1

Sunshine

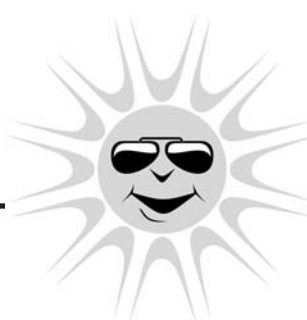

Suites

Preliminary Documentation

6.11

## 6.3.2 ROOM STATUS PRINTOUT

Printout includes the following information:


- Date and time the report was printed
- Status of guest and meeting rooms
  - On an individual, status type basis
- OR
- As a complete report of all rooms and their status
- Room Status Printout Types:
  - **AVAILABLE**
  - OCCUPIED
  - NEEDS CLEANING
  - NEEDS MAINTENANCE
  - HOLD
  - ALL
- Room status is updated by either the administrator access, automatic room update or maid codes.



- By default, the printout will print a header followed by 50 lines per page
- Printout size is adjustable through programming

NOTE: Systems utilizing the optional 64 button module, can temporarily display room status, when a printout is not needed.

### EQUIPMENT REQUIRED

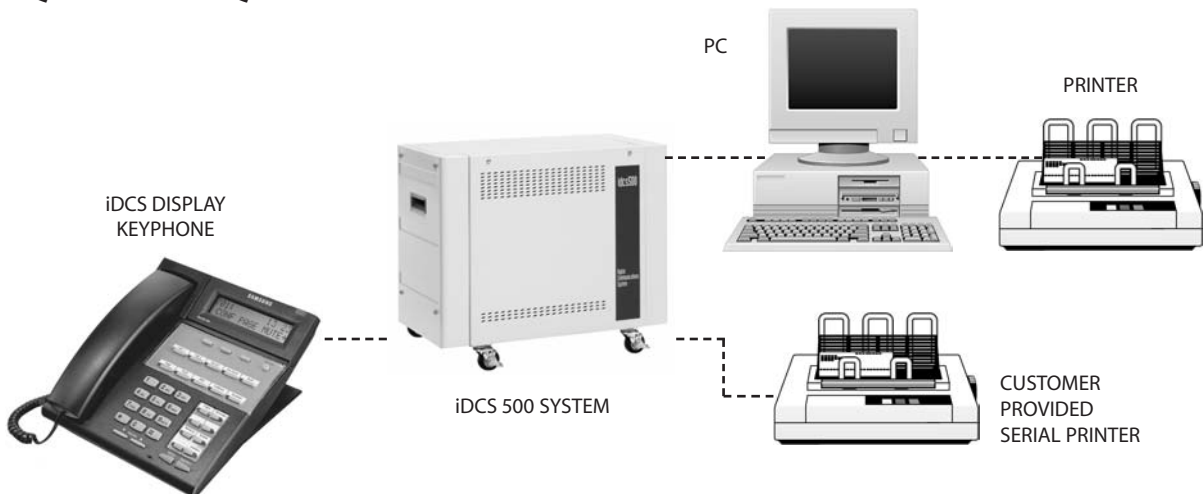

ROOM STATUS PRINTOUT

AVAILABLE


11:59

12/02

ROOM	STATUS	ROOM	STATUS	ROOM	STATUS
209	AVAILABLE	220	AVAILABLE	213	AVAILABLE
215	AVAILABLE	217	AVAILABLE	219	AVAILABLE
220	AVAILABLE	221	AVAILABLE	223	AVAILABLE
225	AVAILABLE	226	AVAILABLE	227	AVAILABLE
228	AVAILABLE	301	AVAILABLE	302	AVAILABLE
303	AVAILABLE	304	AVAILABLE	306	AVAILABLE
307	AVAILABLE	403	AVAILABLE	405	AVAILABLE
406	AVAILABLE	407	AVAILABLE	409	AVAILABLE

---

Sunshine

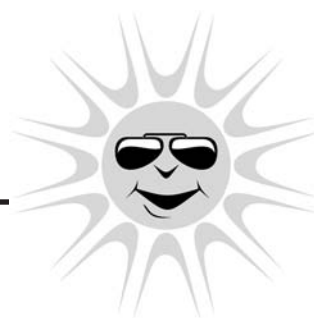

Suites

---

# ROOM STATUS PRINTOUT

Printout includes the following information:


- Date and time the report was printed
- Status of guest and meeting rooms
  - On an individual, status type basis
- OR
- As a complete report of all rooms and their status
- Room Status Printout Types:
  - AVAILABLE
  - **OCCUPIED**
  - NEEDS CLEANING
  - NEEDS MAINTENANCE
  - HOLD
  - ALL
- Room status is updated by either the administrator access, automatic room update or maid codes.



- By default, the printout will print a header followed by 50 lines per page
- Printout size is adjustable through programming

NOTE: Systems utilizing the optional 64 button module, can temporarily display room status, when a printout is not needed.

## EQUIPMENT REQUIRED

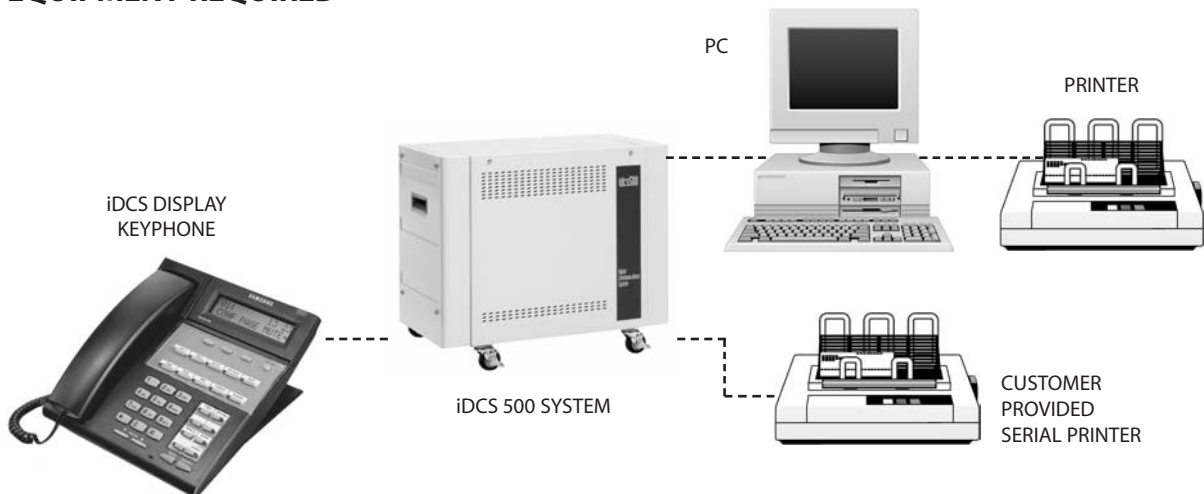

55 LINES

ROOM STATUS PRINTOUT

OCCUPIED


13:56

11/02

ROOM	STATUS	ROOM	STATUS	ROOM	STATUS
211	OCCUPIED	212	OCCUPIED	214	OCCUPIED
216	NEED MAINTENANCE	218	OCCUPIED	222	OCCUPIED
224	OCCUPIED	305	OCCUPIED	308	NEEDS CLEANING
309	HOLD	310	NEEDS MAINTENANCE	401	NEEDS CLEANING
402	NEED MAINTENANCE	404	NEEDS CLEANING	408	NEEDS CLEANING

---

Sunshine

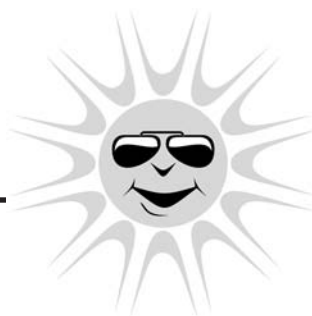

Suites

---

# ROOM STATUS PRINTOUT

Printout includes the following information:


- Date and time the report was printed
- Status of guest and meeting rooms
  - On an individual, status type basis
- OR
- As a complete report of all rooms and their status
- Room Status Printout Types:
  - AVAILABLE
  - OCCUPIED
  - **NEEDS CLEANING**
  - NEEDS MAINTENANCE
  - HOLD
  - ALL
- Room status is updated by either the administrator access, automatic room update or maid codes.



- By default, the printout will print a header followed by 50 lines per page
- Printout size is adjustable through programming

NOTE: Systems utilizing the optional 64 button module, can temporarily display room status, when a printout is not needed.

## EQUIPMENT REQUIRED

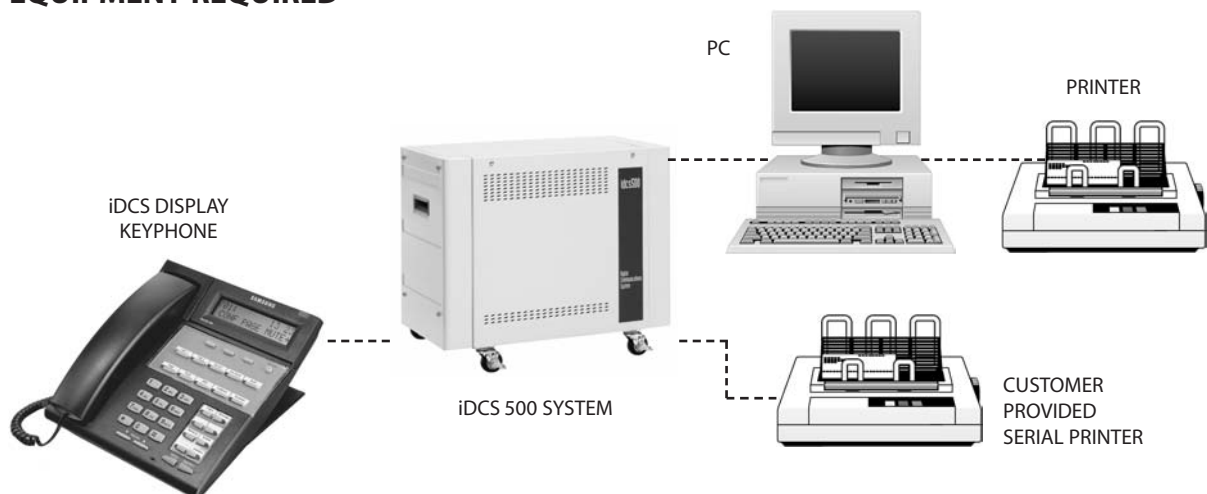

ROOM STATUS PRINTOUT


NEEDS CLEANING

13:50 11/02

ROOM	STATUS	ROOM	STATUS	ROOM	STATUS
211	NEEDS CLEANING	212	NEEDS CLEANING	214	NEEDS CLEANING
215	NEEDS CLEANING	218	NEEDS CLEANING	220	NEEDS CLEANING
222	NEEDS CLEANING	224	NEEDS CLEANING	303	NEEDS CLEANING
305	NEEDS CLEANING	310	NEEDS CLEANING	401	NEEDS CLEANING
404	NEEDS CLEANING	408	NEEDS CLEANING		

---

Sunshine

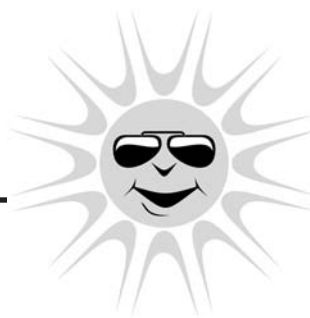

Suites

---

# ROOM STATUS PRINTOUT

Printout includes the following information:


- Date and time the report was printed
- Status of guest and meeting rooms
  - On an individual, status type basis
- OR
- As a complete report of all rooms and their status
- Room Status Printout Types:
  - AVAILABLE
  - OCCUPIED
  - NEEDS CLEANING
  - **NEEDS MAINTENANCE**
  - HOLD
  - ALL
- Room status is updated by either the administrator access, automatic room update or maid codes.



- By default, the printout will print a header followed by 50 lines per page
- Printout size is adjustable through programming

NOTE: Systems utilizing the optional 64 button module, can temporarily display room status, when a printout is not needed.

## EQUIPMENT REQUIRED

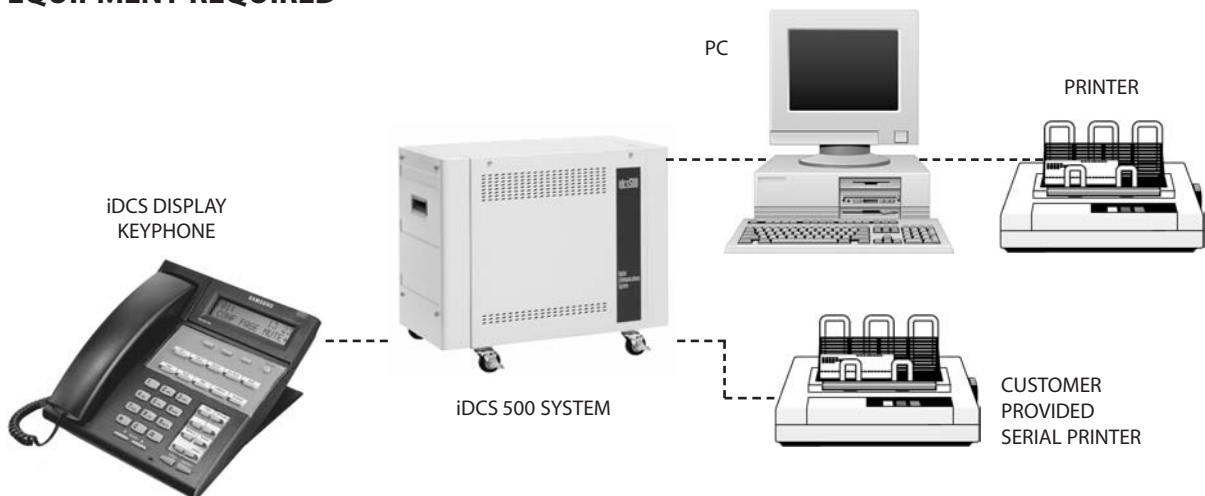

55 LINES

ROOM STATUS PRINTOUT

NEED MAINTENANCE

14:01 11/02

ROOM STATUS

ROOM STATUS

ROOM STATUS


216 NEED MAINTENANCE

308 NEED MAINTENANCE

402 NEED MAINTENANCE

---

Sunshine

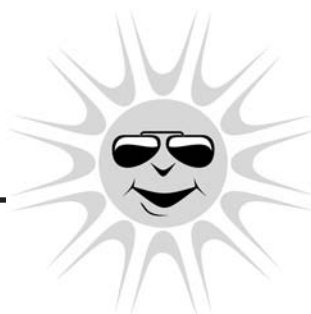

Suites

---

# ROOM STATUS PRINTOUT

Printout includes the following information:


- Date and time the report was printed
- Status of guest and meeting rooms
  - On an individual, status type basis
- OR
- As a complete report of all rooms and their status
- Room Status Printout Types:
  - AVAILABLE
  - OCCUPIED
  - NEEDS CLEANING
  - NEEDS MAINTENANCE
  - **HOLD**
  - ALL
- Room status is updated by either the administrator access, automatic room update or maid codes.



- By default, the printout will print a header followed by 50 lines per page
- Printout size is adjustable through programming

NOTE: Systems utilizing the optional 64 button module, can temporarily display room status, when a printout is not needed.

## EQUIPMENT REQUIRED

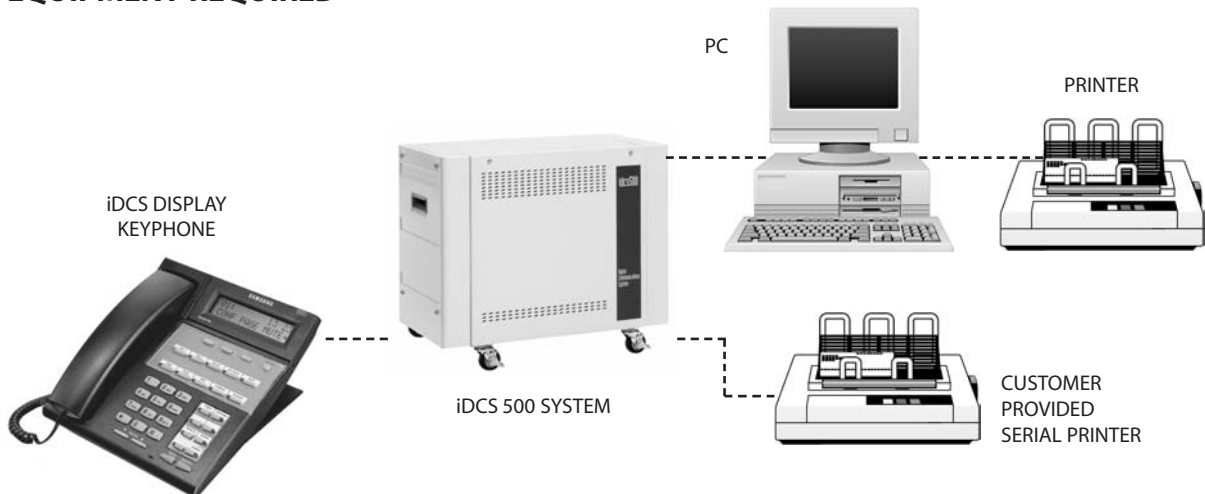

55 LINES

ROOM STATUS PRINTOUT      HOLD      11:58    12/02

ROOM	STATUS	ROOM	STATUS	ROOM	STATUS
212	HOLD	214	HOLD	309	HOLD
401	HOLD				

---

Sunshine



Suites

# ROOM STATUS PRINTOUT

Printout includes the following information:


- Date and time the report was printed
- Status of guest and meeting rooms
  - On an individual, status type basis
- OR
- As a complete report of all rooms and their status
- Room Status Printout Types:
  - AVAILABLE
  - OCCUPIED
  - NEEDS CLEANING
  - NEEDS MAINTENANCE
  - HOLD
  - **ALL**
- Room status is updated by either the administrator access, automatic room update or maid codes.



- By default, the printout will print a header followed by 50 lines per page
- Printout size is adjustable through programming

NOTE: Systems utilizing the optional 64 button module, can temporarily display room status, when a printout is not needed.

## EQUIPMENT REQUIRED

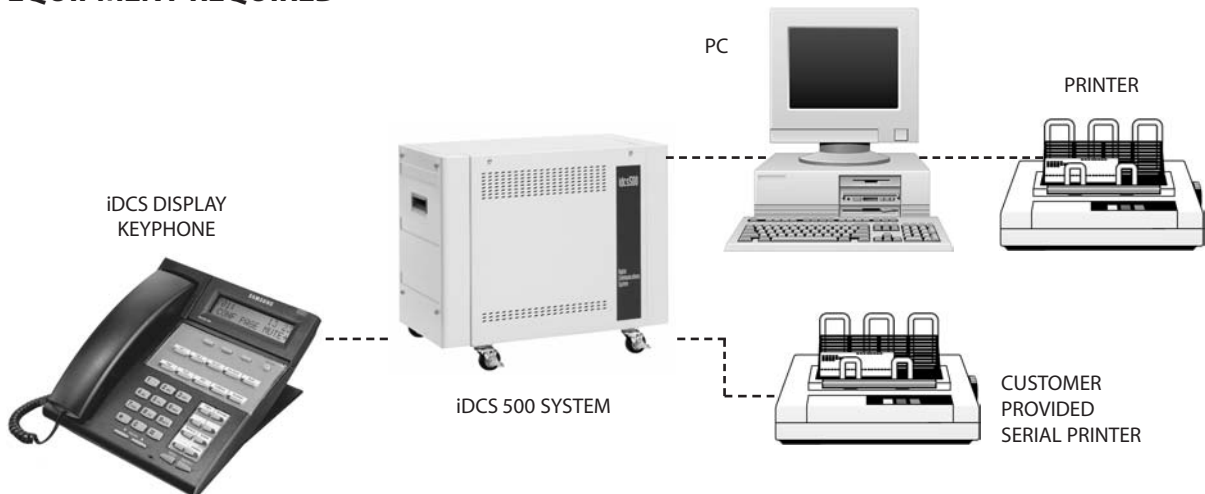


55 LINES

ROOM STATUS PRINTOUT ALL 13:58 11/02

ROOM	STATUS	ROOM	STATUS	ROOM	STATUS
209	AVAILABLE	210	AVAILABLE	211	OCCUPIED
212	OCCUPIED	213	AVAILABLE	214	NEEDS CLEANING
215	NEEDS CLEANING	216	NEED MAINTENANCE	217	AVAILABLE
218	NEEDS CLEANING	219	AVAILABLE	220	NEEDS CLEANING
221	AVAILABLE	222	NEEDS CLEANING	223	AVAILABLE
224	NEEDS CLEANING	225	AVAILABLE	226	AVAILABLE
227	AVAILABLE	228	OCCUPIED	301	OCCUPIED
302	OCCUPIED	303	NEEDS CLEANING	304	AVAILABLE
305	NEEDS CLEANING	306	AVAILABLE	307	AVAILABLE
308	NEED MAINTENANCE	309	HOLD	310	NEEDS CLEANING
401	NEEDS CLEANING	402	NEED MAINTENANCE	403	AVAILABLE
404	HOLD	405	AVAILABLE	406	OCCUPIED
407	AVAILABLE	408	NEEDS CLEANING	409	AVAILABLE

Sunshine

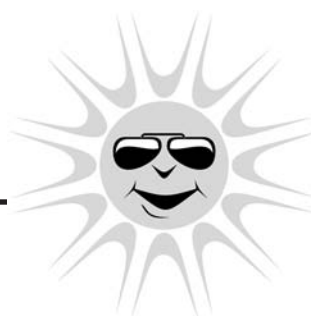

Suites

# 6.3.3 TRANSACTION RECORD OUTPUT SAMPLE

The PMS output stream includes information from all transactions within the Hotel / Motel system. This is a one way output only, from the phone system to the PMS system.


This information includes:

- Check In confirmation with:
  - Room charges and applicable taxes
  - Updated room status
- Check Out information with:
  - Updated room status
- Room related charges and applicable taxes
- Daily room charge updates
- Room / phone deposits
- Maid / maintenance room status updates
- Phone calls and charges
- Wake up calls time set for
- Unanswered wake up calls
- Cancelled wake up calls



- The system outputs this information immediately after transaction is completed.

## EQUIPMENT REQUIRED

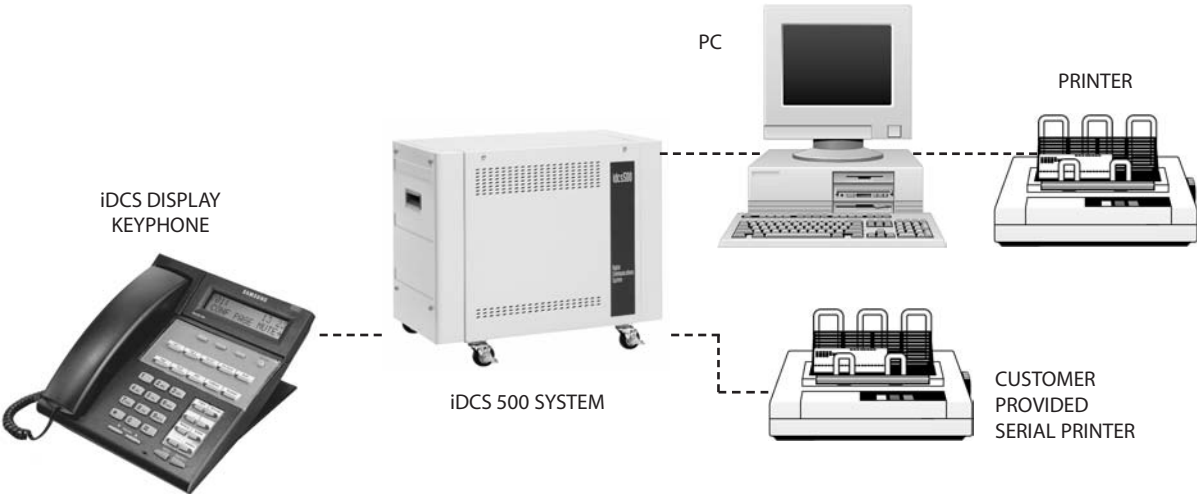

55 LINES

\*HOTEL LETTERHEAD IS CUSTOMER PROVIDED. DOTTED OUTLINE INDICATES DEFAULT PRINTOUT SIZE.

211	01/29	06:10	02	RM CHARGE	5555	69.99
211	01/29	06:10	02	STATE TAX		4.19
211	01/29	06:10	02	BED TAX		1.50
211	01/29	06:10	93	Check In	5555	000.00
211	01/29	06:10	96	Occupied	5555	000.00
209	01/29	06:11	03	RM SVC	9876	25.00
209	01/29	06:11	03	STATE TAX		1.50
209	01/29	06:11	03	SVC CHARGE		2.00
216	01/29	06:11	89	W/UP SET	06:00	000.00
213	01/29	06:11	TEL	3055922900	00:00:34	.75
214	01/29	06:12	00	RM Deposit	1234	-20.00
211	01/29	06:13	94	Check Out		000.00
211	01/29	06:13	97	Clean Room		000.00
209	01/29	06:12	TEL	18008764782	00:01:29	.25
216	01/29	06:15	92	W/UP CANCL		000.00
217	01/29	06:16	07	MISC	5555	150.00
209	01/29	12:00	02	RM CHARGE		100.00
209	01/29	12:00	02	STATE TAX		6.00
209	01/29	12:00	02	BED TAX		1.50
209	01/29	12:00	97	Clean Room		000.00
210	01/29	12:00	02	RM Charge		100.00
210	01/29	12:00	02	STATE TAX		6.00
210	01/29	12:00	02	BED TAX		1.50
210	01/29	12:00	97	Clean Room		000.00
213	01/29	12:00	02	RM CHARGE		69.00
213	01/29	12:00	02	STATE TAX		4.14
213	01/29	12:00	02	BED TAX		1.50
213	01/29	12:00	97	Clean Room		000.00
215	01/29	12:00	02	RM CHARGE		89.99
215	01/29	12:00	02	STATE TAX		5.39
215	01/29	12:00	02	BED TAX		1.50
215	01/29	12:00	97	Clean Room		000.00
216	01/29	12:00	02	RM CHARGE		79.95
216	01/29	12:00	02	STATE TAX		4.79
216	01/29	12:00	02	BED TAX		1.50
216	01/29	12:00	97	Clean Room		000.00
217	01/29	12:00	02	RM CHARGE		250.00
217	01/29	12:00	02	STATE TAX		15.00
217	01/29	12:00	02	BED TAX		1.50
217	01/29	12:00	97	Clean Room		000.00
216	01/29	15:38	89	W/UP SET	06:00	000.00
216	01/30	06:00	91	W/UP N/ANS		000.00
216	01/30	06:01	90	W/UP ANS		000.00

# 6.3.4 INDIVIDUAL GUEST PHONE BILL


Printout includes the following information:

- Date and time the bill was printed
- Room number requested
- Date and time phone call was initiated
- Number dialed
- Duration of call
- Charge of call
- Total charge for all calls
- Displays all call information since check in



- Automatically applies phone credits to the bill
- Phone bills are printed out on a per room basis
- Phone bill information may be:
  - Printed and saved in memory
  - Printed and cleared from memory
- By default, printout will print a header, followed by 50 lines per page
- Printout size is adjustable through programming

## EQUIPMENT REQUIRED

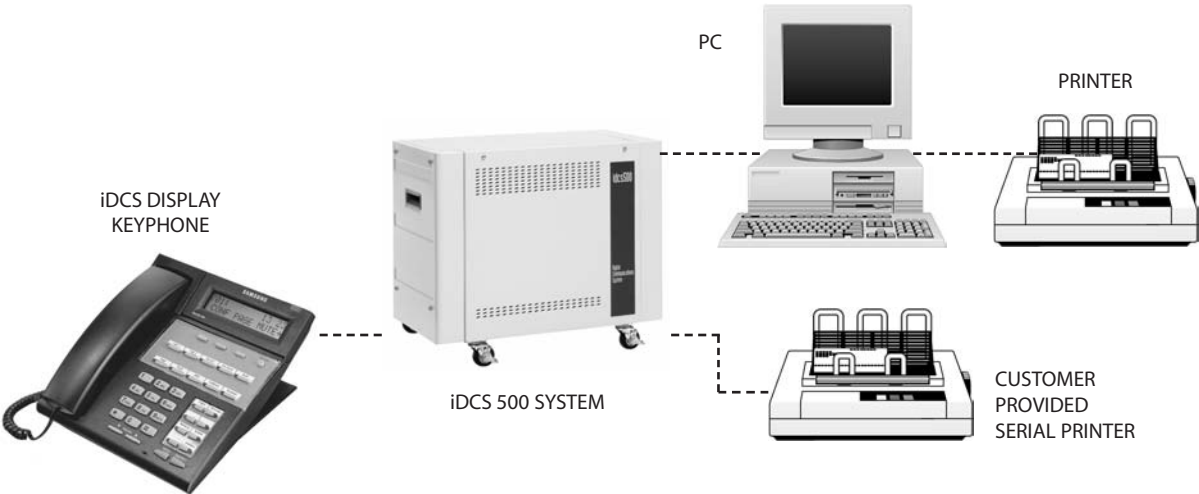

55 LINES

\*HOTEL LETTERHEAD IS CUSTOMER PROVIDED. DOTTED OUTLINE INDICATES DEFAULT PRINTOUT SIZE.


PHONE BILL FROM [SUNSHINE SUITES ] 02/11/99 13:44

CHARGES BILLED TO ROOM NUMBER: 211

ROOM	DATE	TIME	ITEM	DESCRIPTION	DETAILS	CHARGE
211	02/10	15:30	TEL	3055922900	01:01:00	.35
211	02/10	20:44	TEL	18008764782	00:01:45	.25
211	02/11	06:34	TEL	18008764782	00:02:00	.25
211	02/11	13:15	TEL	3055922900	00:02:16	.45
211	02/11	13:40	TEL	3055922900	00:02:31	.55
					TOTAL	1.85

---

Sunshine

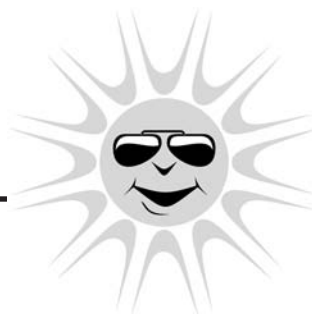

Suites

# 6.3.5 ALL GUEST PHONE BILL (SMDR)

SMDR REPORT FOR [H/M Sample] J 01/02/95 17:12

T EXT	AUTH TRK	MM/DD	STT	TIME	DURATION	FG	DIALED DIGIT	CALL COST	CID/ANI NUMBER	CID/ANI NAME
1 201	701	01/02	17:15:13	00:00:28	IT				13054264100	SAMSUNG TELECOM
1 205	701	01/02	17:15:41	00:00:02	T				13054264100	SAMSUNG TELECOM
1 217	702	01/02	17:24:49	00:00:25	IT				13055557890	CURTIS SMITH
1 202	702	01/02	17:25:14	00:00:03	T				13055552354	SUSAN HOLLINS
1 202	702	01/02	17:25:56	00:00:00	O		4264100	\$000.00		
1 217	702	01/02	17:26:35	00:00:11	IT				13054264385	SAMSUNG TELECOM
1 203	702	01/02	17:26:46	00:00:16	T				13054264385	SAMSUNG TELECOM
1 203	702	01/02	17:27:13	00:00:20	O		4264385	\$001.00		
1 203	702	01/02	17:28:04	00:00:00	O		4264385	\$000.00		
1 201	701	01/02	17:28:34	00:00:04	IT					
1 203	701	01/02	17:28:38	00:00:14	T				13055559748	JOAN LEVIN
1 203	702	01/02	17:29:54	00:01:27	OT		5556420	\$001.75		LENNY WILKINS
1 205	702	01/02	17:31:06	00:03:00	TT					
1 209	702	01/02	17:33:24	00:02:18	T				13055556420	PIZZA DELIVERY
1	701	01/02	17:41:45	00:00:30	A				13055556420	PIZZA DELIVERY
1	701	01/02	17:42:15	00:00:02	A				13055553426	TERRY FRUITT
1 203	702	01/03	17:51:17	00:00:22	O		5555069	\$001.00		BLANCHE MARKER
1	701	01/03	17:56:02	00:00:05	A				13055556733	ALEX DAULTON

Tenant 1 Digit	Authorization Code 4 Digits	Date Call Made or Received Month:Day	Call Duration Hrs:Mins:Secs	Telephone No. Dialed 1-18 Digits	Call Cost 6 Digits	Caller ID Number 1-15 Digits	Caller ID Name 1-15 Characters

Extension 2-4 Digits	C.O. Line No. 2-4 Digits	Time Call Made or Received Hrs:Mins:Secs	Call Type Flag 2 Characters

**Call Type Flag Definitions**

0	Outgoing Call	DE	DISA call with error
I	Incoming Call	T	Transferred call that was terminated
DI	DISA call in	IT	Incoming transfer
DO	DISA call out	FI	Incoming call forwarded to an external number
FO	Outgoing record of forwarded call	OT	Outgoing transfer - Outgoing call made and transferred
A	Abandoned call	TT	Caller received a transferred call and transferred it again

# 6.3.6 INDIVIDUAL WAKEUP ACTIVITY REPORT

Printout includes the following information:

- Date and time the report was printed
- Room number requested
- Time wake up activity performed
- Item code for activity performed
- Description of activity performed
- Details column
  - Time wake up call is set for
- Charges for wake up related service




### ACTIVITY TYPES:

- W/UP SET      The time a wake up call is set for
- W/UP ANS     Wake up call answered
- W/UP N/ANS   Wake up call not answered
- W/U CANCEL    Wake up call cancelled



- Displays all wake up call activity since room was checked in
- Wake up activity report print on a per room basis
- By default, printout will print a header, followed by 50 lines per page
- Printout size is adjustable through programming

### EQUIPMENT REQUIRED

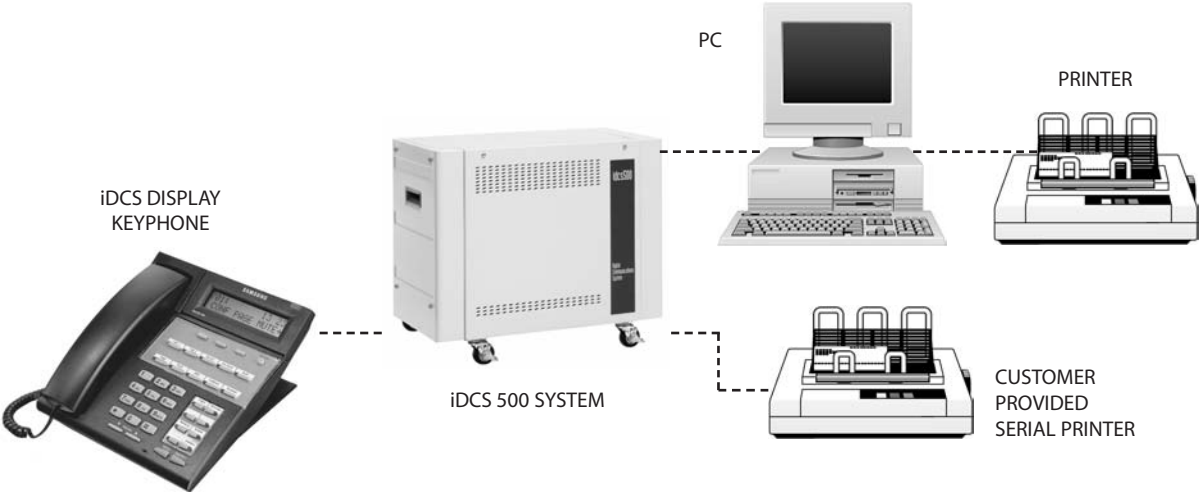

55 LINES

\*HOTEL LETTERHEAD IS CUSTOMER PROVIDED. DOTTED OUTLINE INDICATES DEFAULT PRINTOUT SIZE.


WAKE UP ACTIVITY FROM [SUNSHINE SUITES ] 01/22/98 14:35

CHARGES BILLED TO ROOM NUMBER: 213

ROOM	DATE	TIME	ITEM	DESCRIPTION	DETAILS	CHARGE
213	01/23	12:22	89	W/UP SET	05:30	000.00
213	01/23	12:25	92	W/UP CANCL		000.00
213	01/24	11:51	89	W/UP SET	05:30	000.00
213	01/25	05:30	91	W/UP N/ANS		000.00
213	01/25	05:31	90	W/UP ANS		000.00
					TOTAL	000.00

---

Sunshine

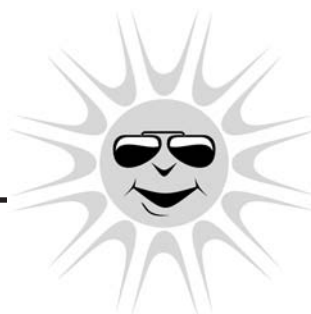

Suites

---

# 6.3.7 SAMSUNG SINGLE LINE TELEPHONE SAMPLE GUEST PHONE TEMPLATE

**SUNSHINE SUITES**  MESSAGE WAITING

Front Desk	Extension 201
Maid Service	Extension 205
Restaurant	Extension 206
Pro Shop	Extension 208
Taxi	555-1212
Pizza Delivery	555-1213

Dial 9 for Local Calls  
Dial 80 for Long Distance Calls  
Room to Room Dialing:  
DIAL room number

FLASH  NEW CALL  HOLD

RECEIVE VOLUME MONITOR

LOW  HIGH

Note: Custom templates for the Samsung family of phones, can be created using the software program DESI for Windows by DESI Telephones Labels, Inc.

**KEY SYSTEMS DEALER AGREEMENT  
SAMSUNG TELECOMMUNICATIONS AMERICA  
KEY SYSTEMS LIMITED WARRANTY**

SAMSUNG TELECOMMUNICATIONS AMERICA ("STA"), warrants to its authorized Dealers and to the original retail purchaser ("Users") of a STA product for a period of 24 months from the date of shipment of the Product from STA's facility, that the Product (except for lamps, fuses, and other consumable items) will be free from defects in material and workmanship. Repaired or replaced materials shall be warranted for the balance of the warranty remaining on the original equipment, or 90 days from date of shipment from STA's facility, whichever is longer.

This warranty is for the benefit of and shall apply only to authorized Dealers and to Users. This warranty will not apply if the defect arises out of accident, neglect, alteration or misuse, failure of electric power, air conditioning, humidity control, causes other than ordinary use, or causes beyond STA's control. All warranty claims shall be waived unless reported, in writing, to STA or its authorized Dealer, prior to the expiration of the applicable warranty period.

The obligation of STA under this warranty is, at the sole option of STA: 1) the repair or replacement (with new or refurbished parts), of the defective or missing parts that are causing the malfunction and which are determined to be the defective by STA, and the return shipment of such parts to the Dealer (Dealer or User shall be responsible to pay for shipment of the defective parts to STA and for all the expenses connected with their removal and reinstallation); or 2) in lieu of repair or replacement, STA may refund the price charged by STA to its Dealer for such parts as are determined by STA to be defective and which are returned to STA through an authorized Dealer within the warranty period and no later than 30 days after such malfunction, whichever occurs first.

To obtain service under this warranty:

- (1) USERS must provide written notice of the malfunction to an authorized STA Dealer within the warranty period and not later than 30 days after the date of the malfunction, whichever occurs first. If the USER is unable to identify an authorized STA Dealer, USER must provide written notice of the malfunction, including proof of the date of purchase of the equipment and the serial number of the malfunctioning Product, to STA at its corporate offices. Upon receipt of such notice and determination by STA that User is eligible for Warranty service, STA will provide the USER with the name of an authorized STA Dealer to contact for warranty service. DEALERS must provide written notice of malfunction to STA no later than the expiration of the warranty period 30 days after the date the Dealer becomes aware of the malfunction, whichever comes first. For purposes of this Warranty, the issuance by STA of a Material Return Authorization (MRA) number by telephone to an authorized Dealer shall be deemed to be written notice from the Dealer with respect to the material returned under that MRA.

STA MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, AND SPECIALLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THESE WARRANTIES ARE DEALER'S AND USER'S SOLE REMEDIES AND IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF STA FOR DAMAGES, INCLUDING, BUT NOT LIMITED TO, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OF THE PRODUCTS, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, ARISING OUT OF OR IN CONNECTION WITH THE PERFORMANCE OF THE PRODUCTS, WHETHER IN A CONTRACT OR TORT ACTION. INCLUDING NEGLIGENCE, EVEN IF STA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, THE TOTAL MAXIMUM LIABILITY OF STA FOR BREACH OF WARRANTY SHALL BE LIMITED TO A REFUND OF THE COST OF THE DEFECTIVE PRODUCT.

No Dealer and no person other than an officer of SAMSUNG TELECOMMUNICATIONS AMERICA may extend or modify this warranty, and no modification or extension of this warranty shall be effective unless in writing signed by the authorized officer of SAMSUNG TELECOMMUNICATIONS AMERICA.